

# Assembly Instructions ■

All Terrain® Instructors' Desk

AV Rack

December 2017

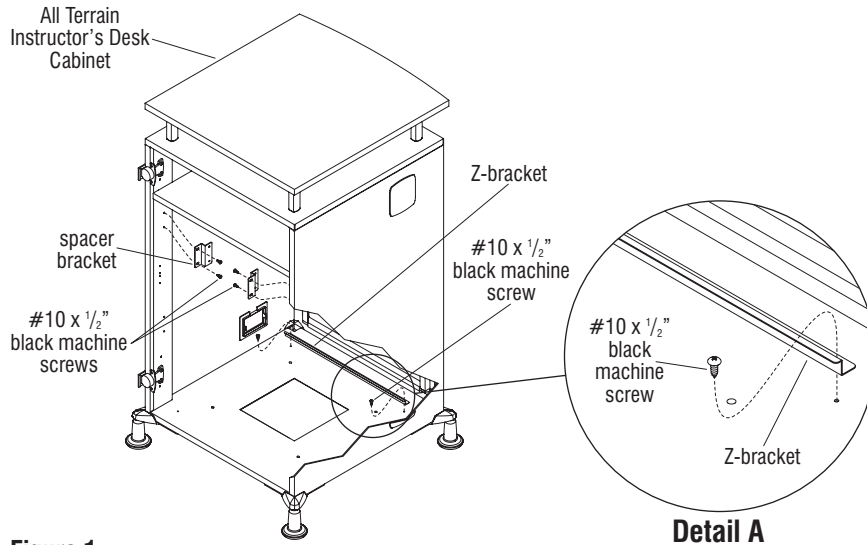


Figure 1

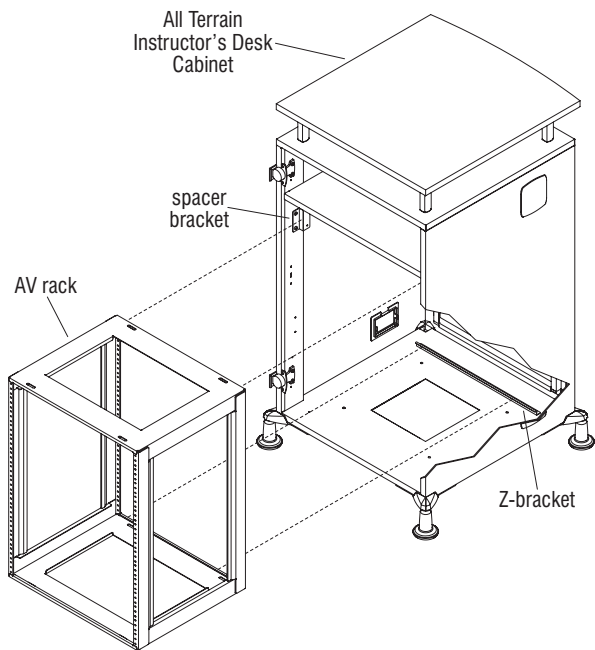


Figure 2

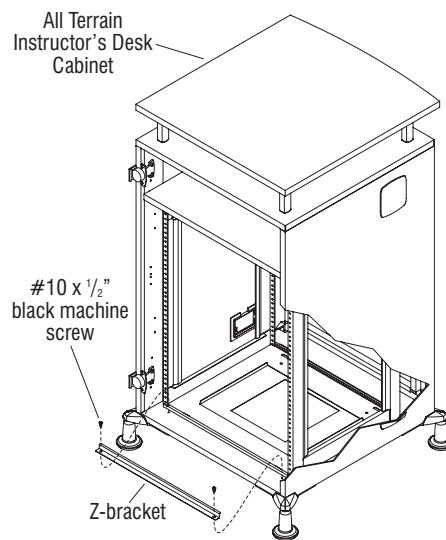


Figure 3

1. Locate a Z-bracket and orient it as shown. Position the Z-bracket into the cabinet, placing it over the pre-drilled holes in the bottom, near the back of the cabinet. Secure the bracket to the cabinet bottom using two #10 x 1/2" black machine screws (Figure 1 & Detail A).
2. Next, locate two spacer brackets for installation to the upper front, inside the cabinet opening. Position each bracket as illustrated over the pre-drilled holes and secure using two #10 x 1/2" black machine screws (Figure 1).
3. Position the AV rack as illustrated and slide the unit into the cabinet between the installed spacer brackets, pressing the bottom of the rack centered, up against the installed Z-bracket at the bottom rear (Figure 2).
4. Orient a second Z-bracket as illustrated to capture the front, bottom of the AV rack and install using two #10 x 1/2" black machine screws (Figure 3).



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.