

Ally modular lounge assembly





Table of contents

Modular lounge with glides	3
Modular lounge with legs	4

Modular lounge with glides

Tools/hardware required:

Cordless Driver

#2 Phillips or Quad Bit

1. From bottom of corner unit, insert ganging bracket into slot. The side with the foot goes to the outside (**Figure A**). The bracket should be centered on the slot and snug to the outside. Install the supplied #8 x 1" screws, two per bracket.
2. Once the brackets are installed onto corner, lift up the edge of adjoining runoff unit and push the units together to align the ganging brackets with the slots. Push the unit down into place. (**Figure B**)

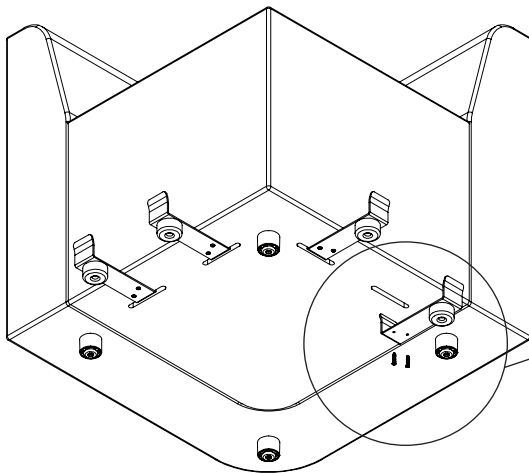


Figure A

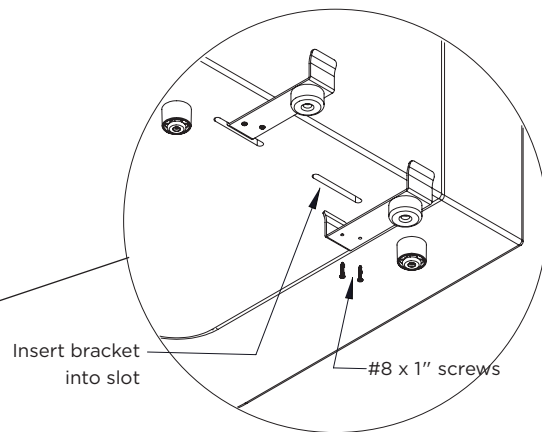


Figure A detail


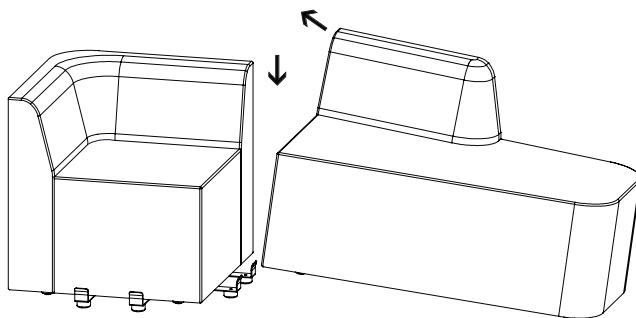


Figure B

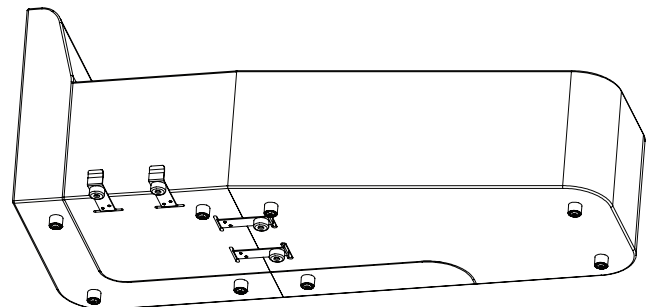

Underside connection view

Modular lounge with legs

Tools/hardware required:

Cordless Driver

#3 Phillips or Quad Bit

Awl/alignment tool (something similar to align mounting hole with leg plate)

1. Remove the truss head screws from underside of the unit and set aside. These will be used to connect the ganging leg. (**Figure A**)
2. Push the units together and use the truss head screws from step 1 to attach the units together through the ganging leg plates, using an Awl or other alignment tool to help properly align the units. (**Figure B-C**)

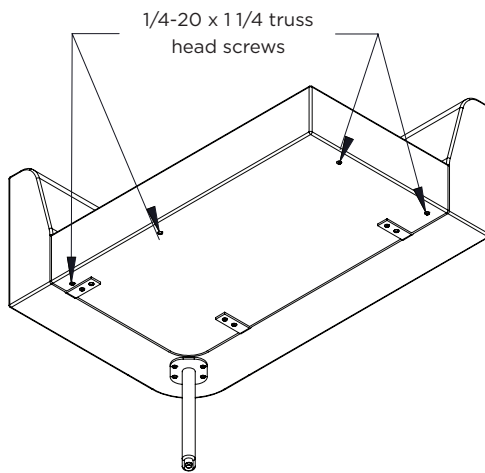


Figure A

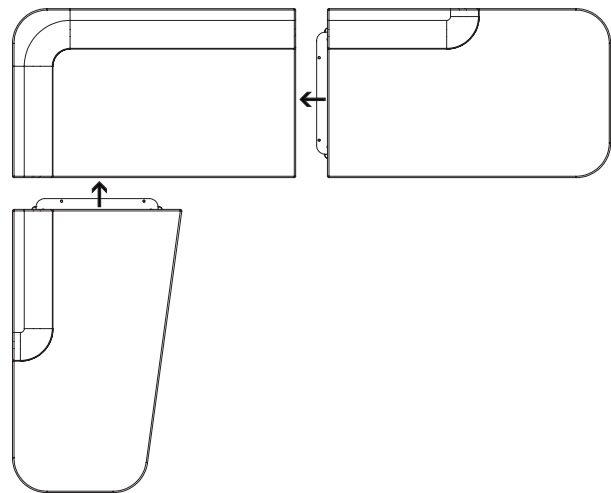


Figure B

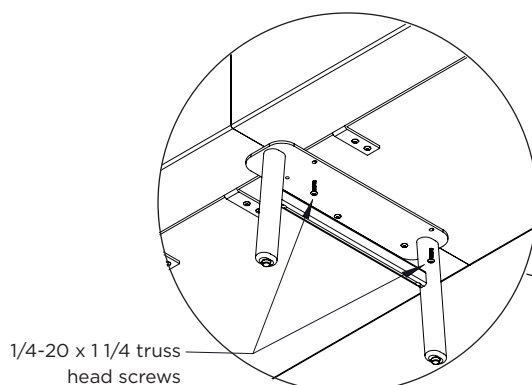


Figure C detail

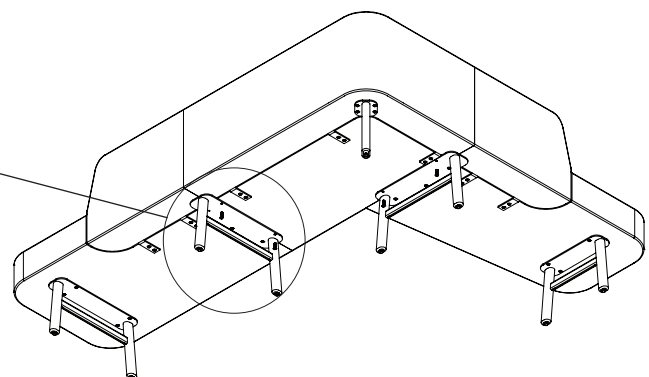


Figure C