


Duke assembly




Components:



Drywall anchor

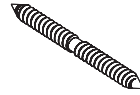

Metal stud

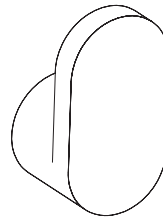

Hook

Tools required:

Phillips head screw driver

Assembly:

1. Measure and mark hook location. Using a Phillips head screw driver push drywall anchor into wall while twisting clockwise. **(Figure A-B)**
2. When the large threads start to engage the wall make sure to keep applying pressure so the threads don't spin out. Keep twisting until anchor is flush with wall.

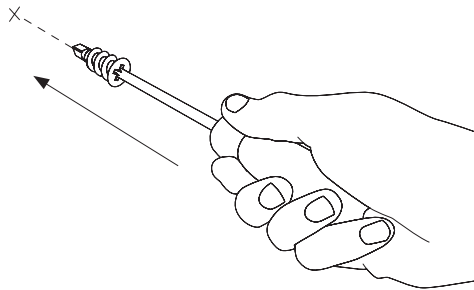


Figure A

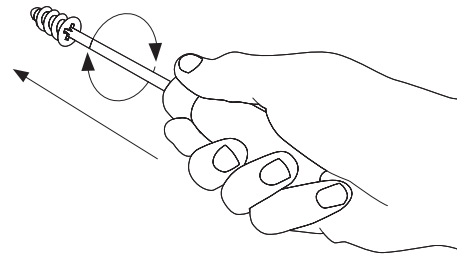


Figure B

3. Hand tighten metal stud into drywall anchor. **(Figure C)**
4. Thread the hook onto stud. The stud will thread into both the wall and the wood hook. Tighten until hook is flush and snug with the wall. **(Figure D)**

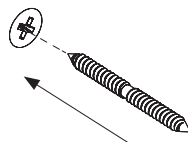


Figure C

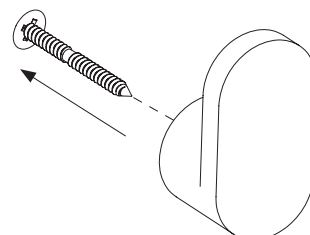


Figure D