



Assembly Instructions


Flowform® Learn Lounge Trees

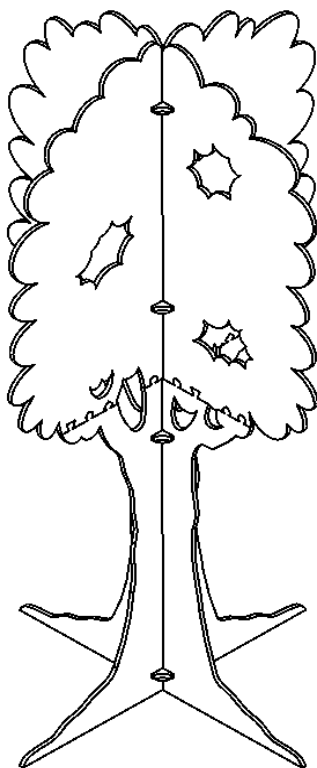

55021 – Elm

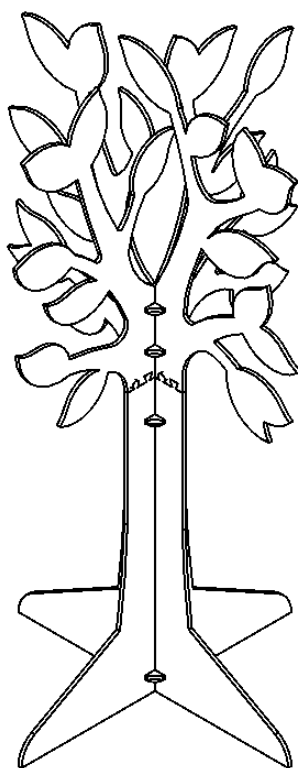

55022 – Pecan

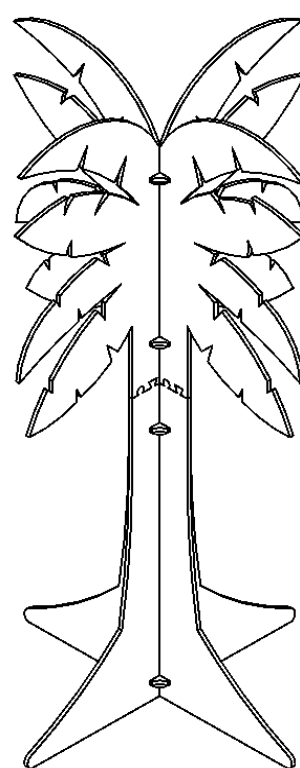


55023 – Palm


If you have damaged or missing components,
please contact customer service at 1-800-328-1061

Panel Layouts & Parts List


55021 – Elm

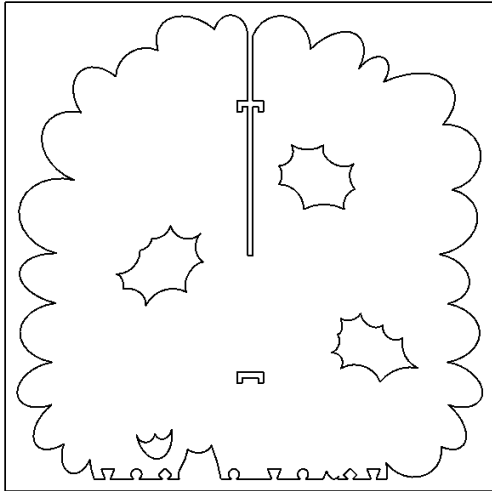


Panel A – Top
Qty 1

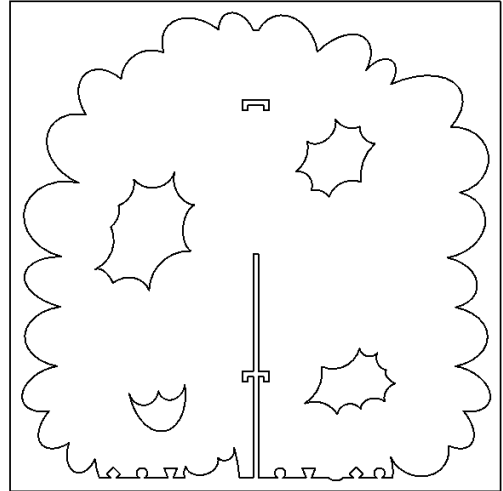

Panel B – Top
Qty 1

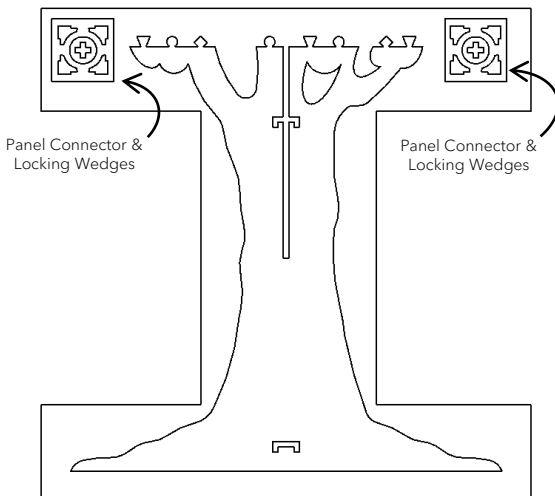


Panel A - Bottom
QTY. 1

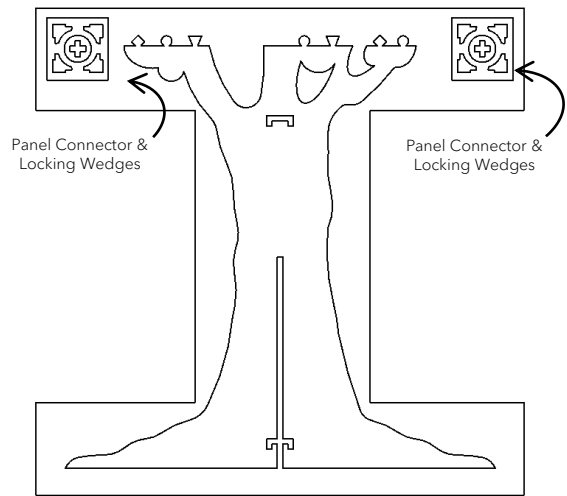

Panel B – Bottom
Qty 1




Panel Connectors
Qty 4




Locking Wedges
Qty 16

Panel Layouts & Parts List


55022 – Pecan

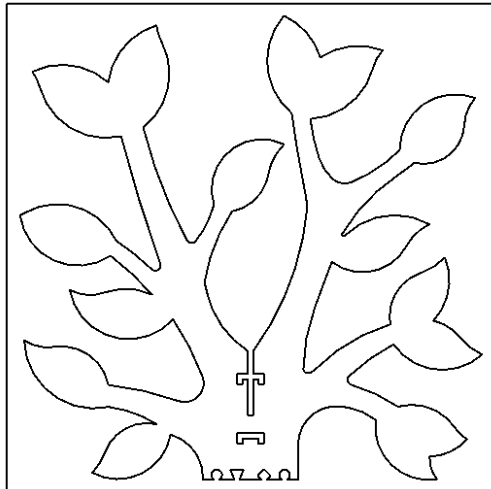


Panel A – Top
Qty 1

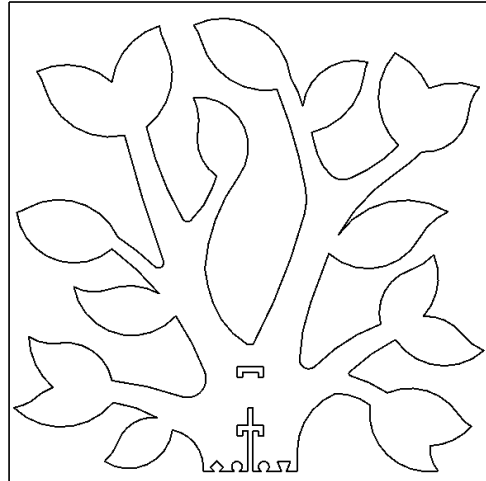

Panel B – Top
Qty 1

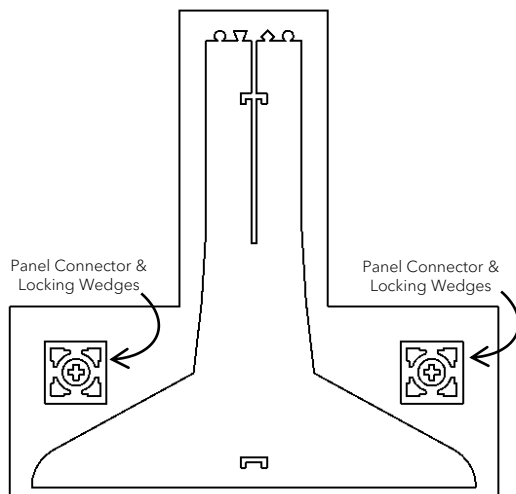


Panel A - Bottom
QTY. 1

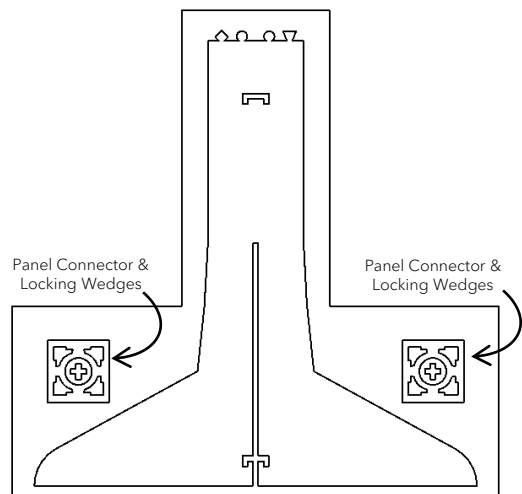

Panel B – Bottom
Qty 1




Panel Connectors
Qty 4




Locking Wedges
Qty 16

Panel Layouts & Parts List


55023 – Palm

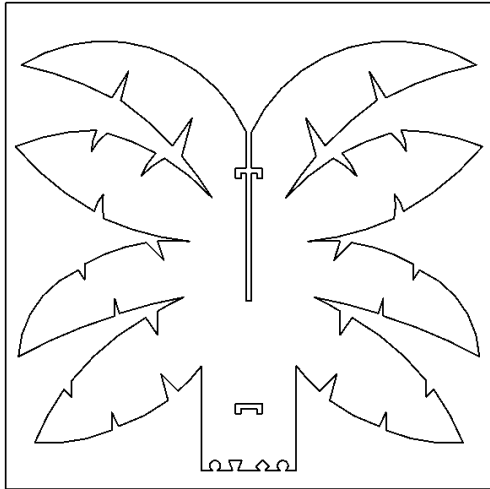


Panel A – Top
Qty 1

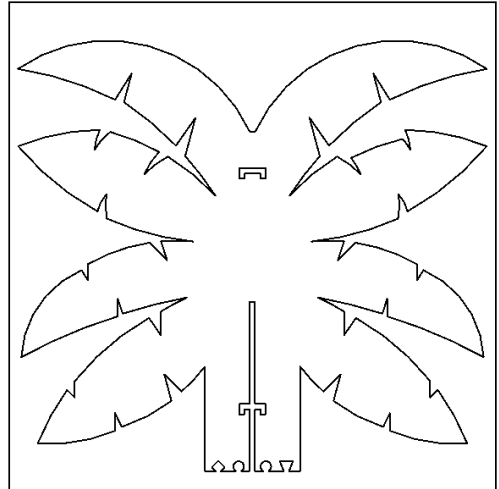

Panel B – Top
Qty 1

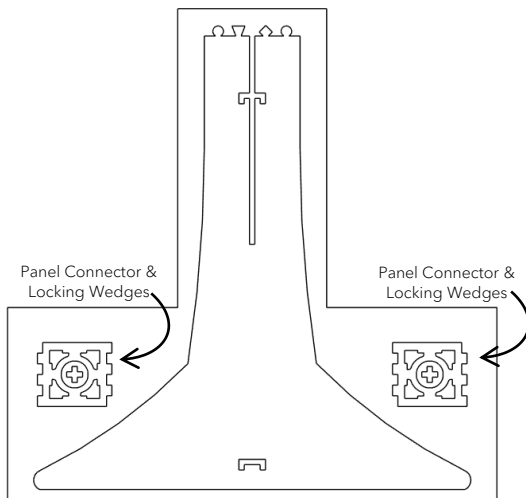


Panel A - Bottom
QTY. 1

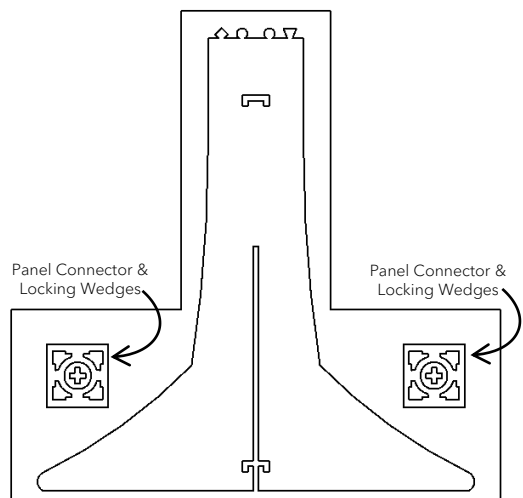

Panel B – Bottom
Qty 1



Panel Connectors
Qty 4





Locking Wedges
Qty 16

Assembly Instructions

Special Notes:


- Handle panels carefully to avoid bending during assembly.
- Make sure all pieces have been removed from panel before discarding, some pieces may be hard to see. Refer to Panel Layout for part locations.

1. Carefully remove all pieces from the four panels. (Refer to Panel Layout for part locations)
2. While holding Bottom A upright, carefully slide Bottom B downward, aligning center grooves.
3. Slide down until bottoms are flush.

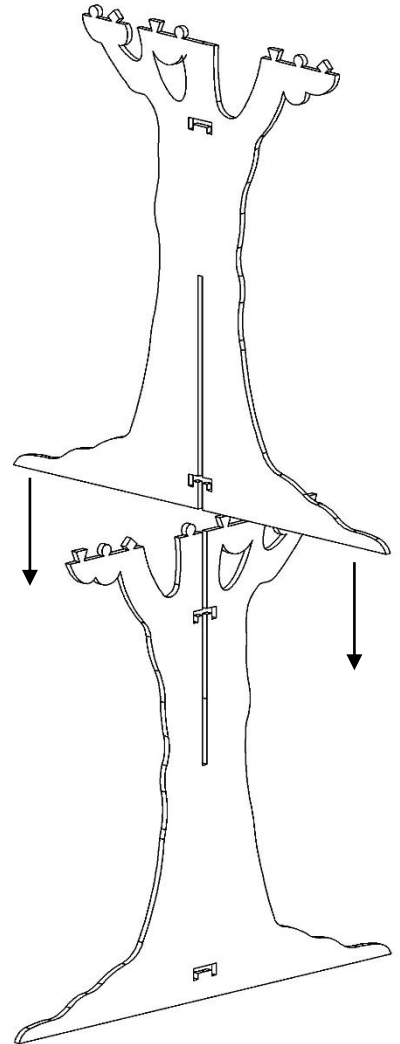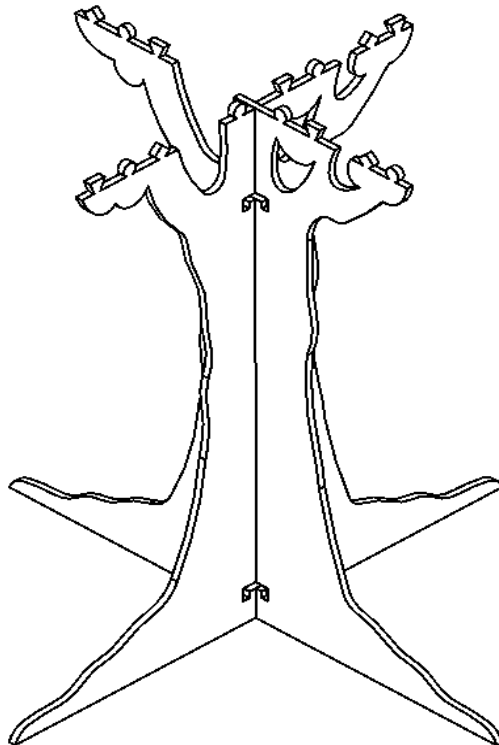


Assembly Instructions

- Slide connecting rings through openings in assembled tree base. Press down until seated.

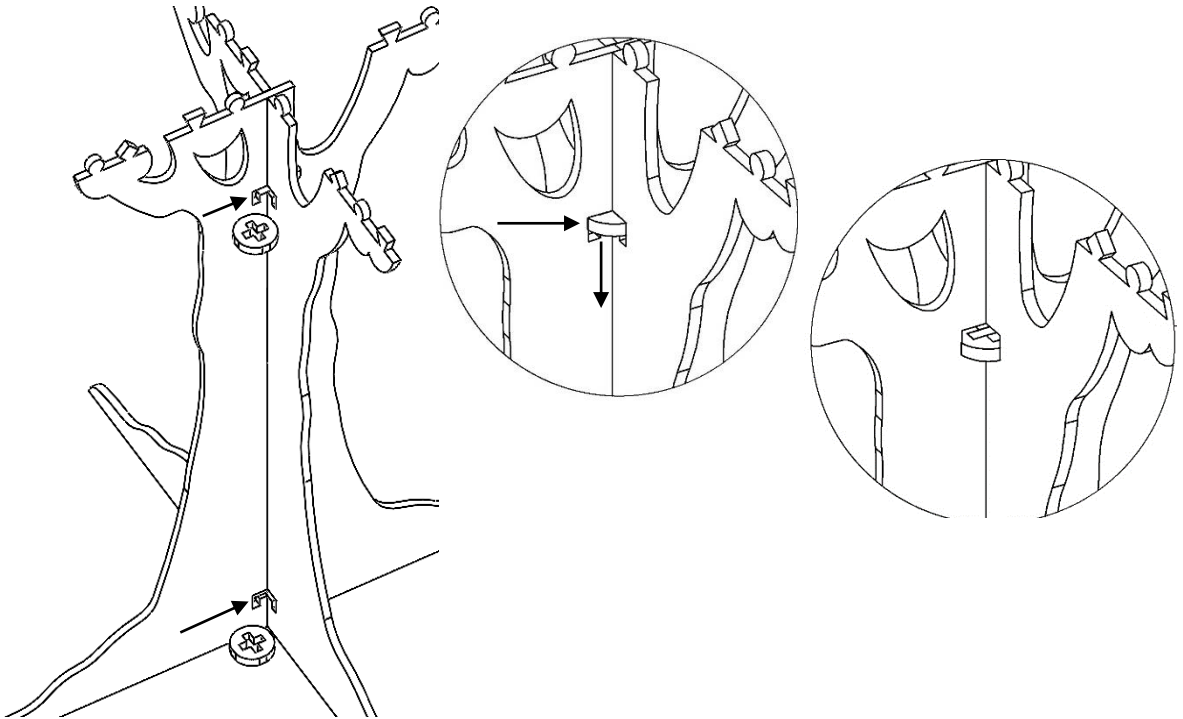


- Insert 4xLocking Wedges into opening above each Connecting Ring. Press firmly into opening until fully seated.

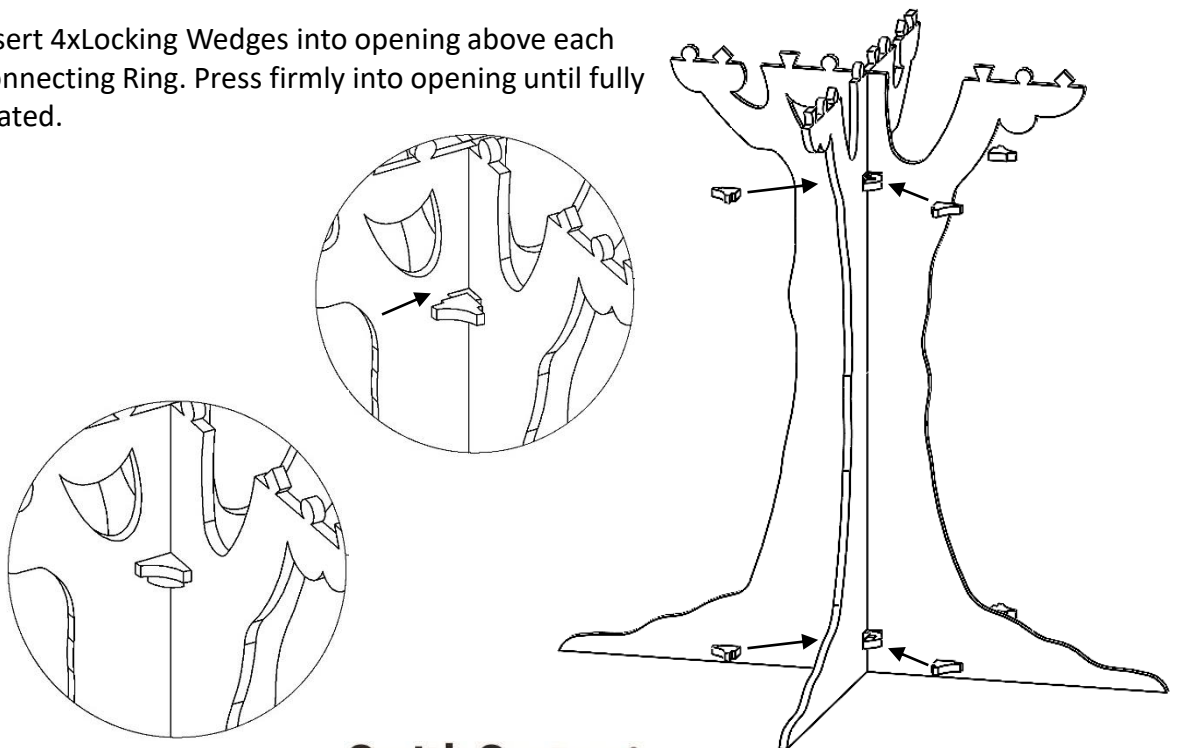


Assembly Instructions

6. Align shape cutouts from Bottom A with Top A. Gently press together until top and bottom are flush.

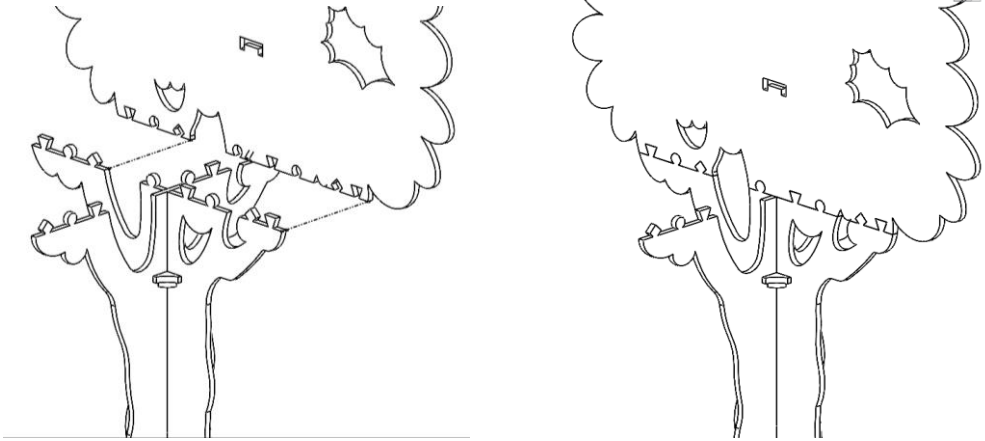

7. Make sure Top B is facing so that shape cutouts align with cutouts from Bottom B. Gently slide Top B onto Top A, aligning centers. Gently press together until Top B and Bottom B are flush.

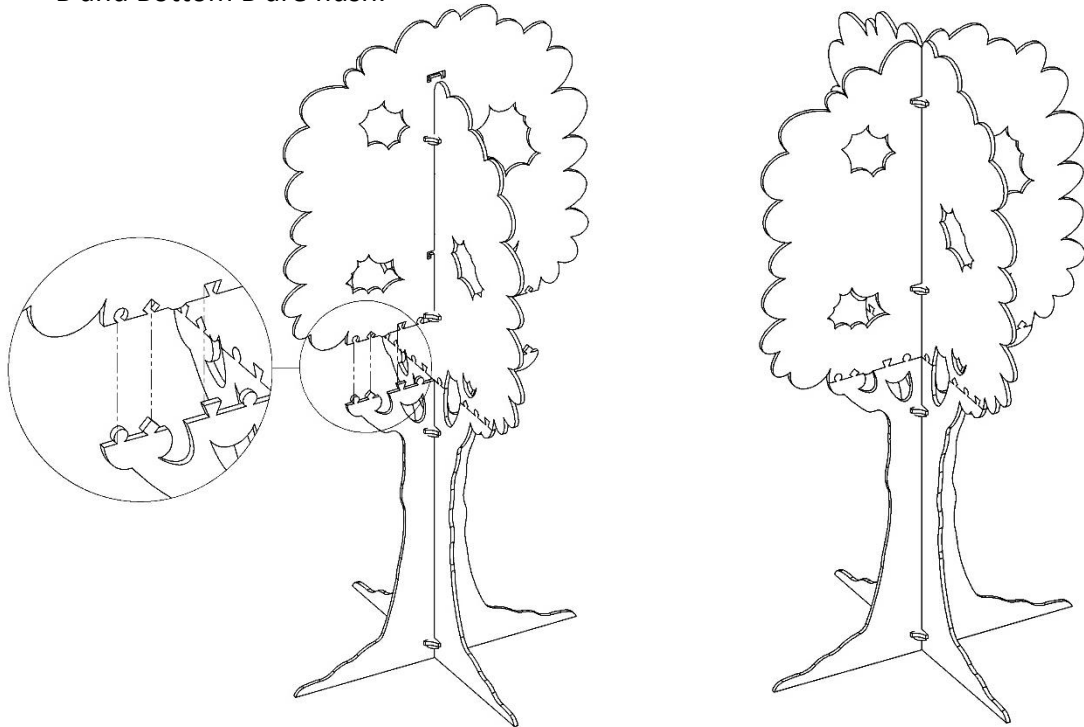

8. Repeat steps 4 and 5 with remaining Connecting Rings and Locking Wedges.

ASSEMBLY COMPLETE