

3-2-1 Interchange Desk

Assembly Instructions




For Assistance in assembling product, missing or damaged parts, or to place an order, please contact customer service at 800-328-1061.

3-2-1 Desk Installation Guide

(03002 / 03011)

Parts Required

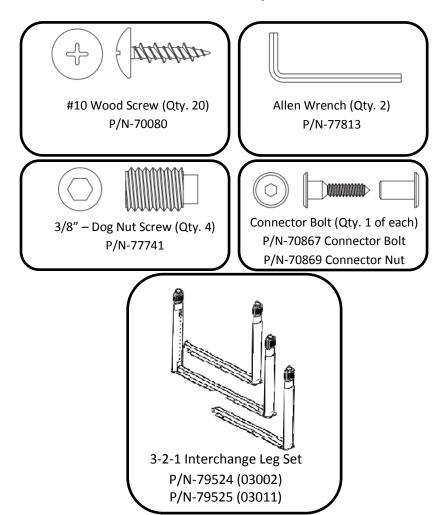


Replacement Pack 69763 Includes:


70867 (Qty. 1) CONNECTOR BOLT ¼-20X23MM 70869 (Qty. 1) CONNECTOR NUT ¼-20X17MM 77813 (Qty. 2) HEX KEY – 3/16" SHORT ARM 70080 (Qty. 20) 10X5/8 TRUSS HEAD PHILLIPS HEAD

Instructions

Step 1: Lay top upside down (laminate face down). Align the slots on the legs with the predrilled holes in the top. Loosely attach center leg using 8 screws included in the leg set hardware pack (screws should not be completely tightened).

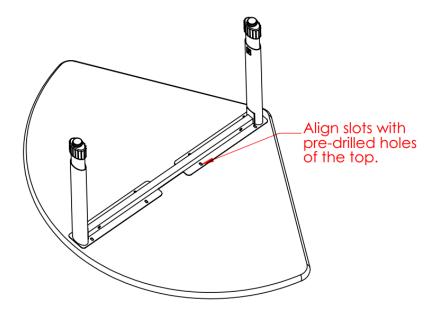


Step 2: Align the slots of the side leg with the pre-drilled holes in the top. Loosely attach center leg using 8 screws included in the leg set hardware pack (screws should not be completely tightened). Attach side legs using screws included in the leg set hardware pack.

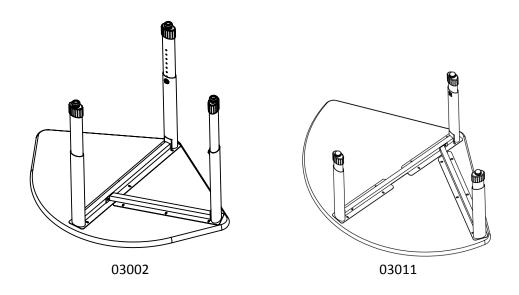


If you have damaged or missing components please contact customer service. 800-328-1061

Step 3: Attach other side of legs using screws included in the leg set hardware pack

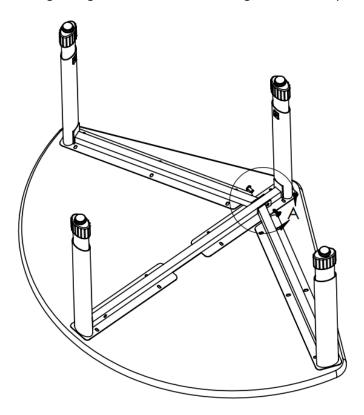

Step 4: Attach all three legs together using the connector bolts included in the leg set hardware pack. Hex keys (Allen Keys) were also provided in the hardware pack to assist this step.

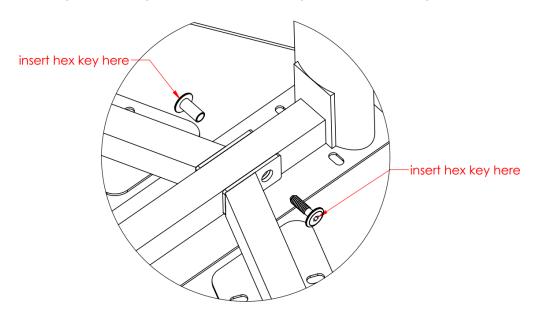

Step 5: Tighten all screws and bolts.