


Assembly Instructions


Silhouette Standard Sit+Stand,
N&F Sit+Stand, and XL Sit+Stand Desks

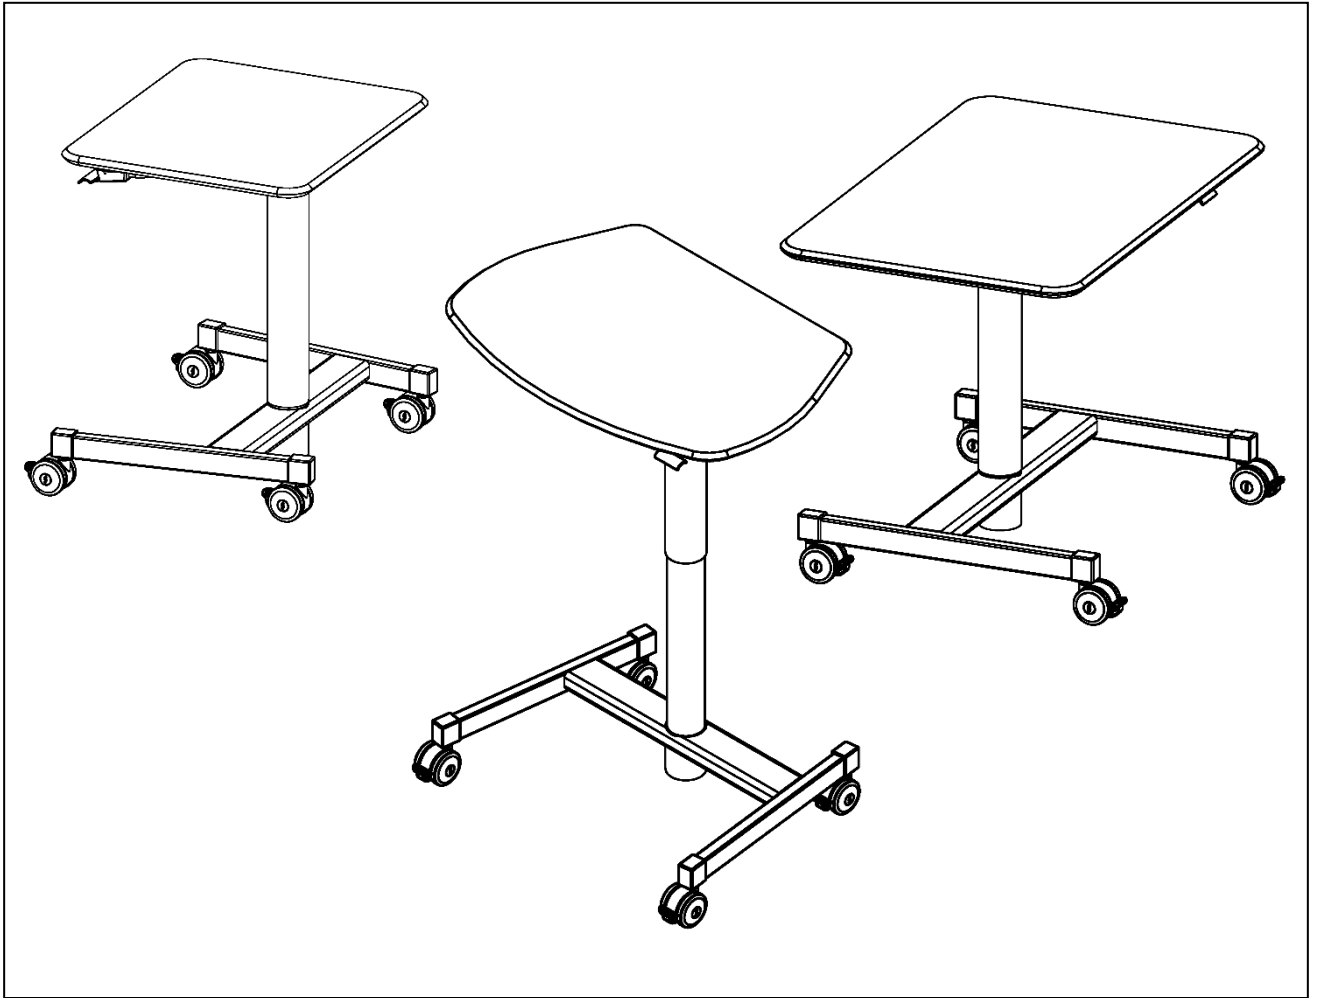


If you have damaged or missing components,
please contact customer service at 1-800-328-1061

Hardware and Components


For Standard Sit-Stand Desks

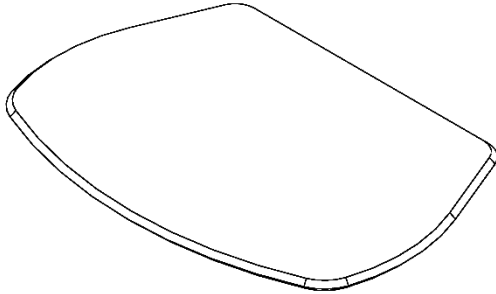


SIT-STAND DESK TOP
(PN: 01630
PN: 01631 SHOWN
PN: 01632)
QTY. 1

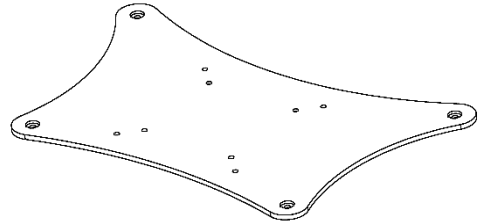


BUTTERFLY PLATE
(PN: 60058)
QTY. 1

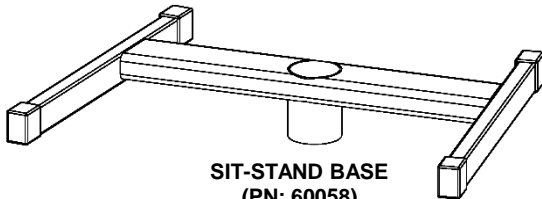


SIT-STAND BASE
(PN: 60058)
QTY. 1

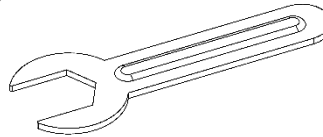


CASTER WRENCH
(PN: 17576)
QTY. 1

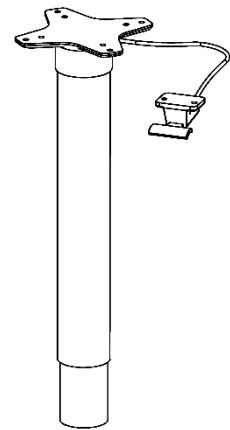


SIT-STAND COLUMN
(PN: 60060)
QTY. 1

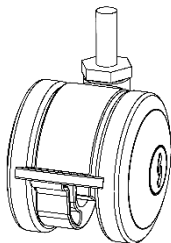


CASTER
(PN: 17576)
QTY. 4

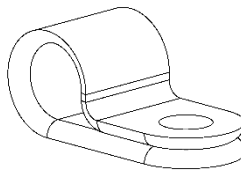


PLASTIC LOOP CLAMP
(PN: 60059)
QTY. 2

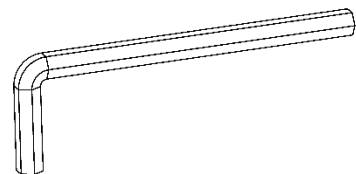


3/16" ALLEN WRENCH
(PN: 60059)
QTY. 1

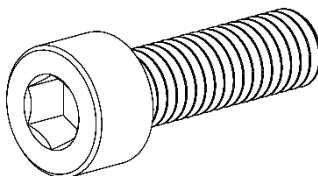

**M6 X 1.0MM X 20MM
SOCKET HEAD BOLT**
(PN: 60059)
QTY. 3

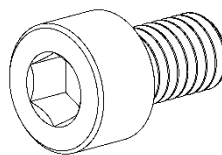


**M6 X 1.0MM X 10MM
SOCKET HEAD BOLT**
(PN: 60059)
QTY. 8

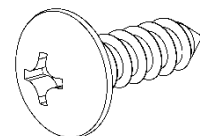


**#10 X 5/8" PAN HEAD
WOOD SCREW**
(PN: 60059)
QTY. 8

Hardware and Components


For Nest & Fold Standard Sit-Stand Desks

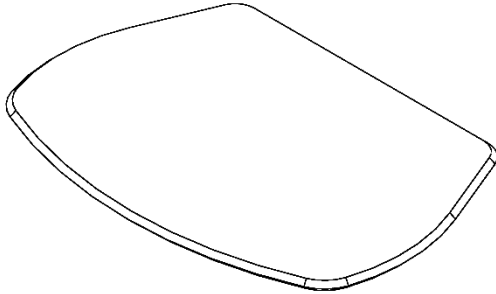

SIT-STAND DESK TOP
(PN: 01630
PN: 01631 SHOWN
PN: 01632)
QTY. 1

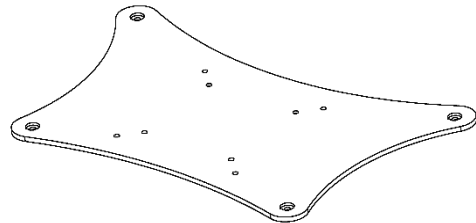


BUTTERFLY PLATE
(PN: 60058)
QTY. 1

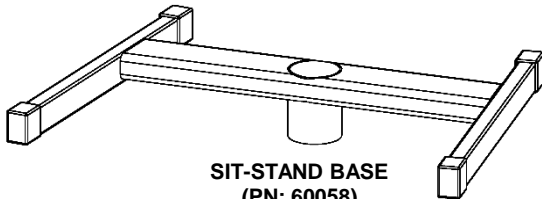


SIT-STAND BASE
(PN: 60058)
QTY. 1




12in. Pencil Retainer
(PN: 67125)
QTY. 1

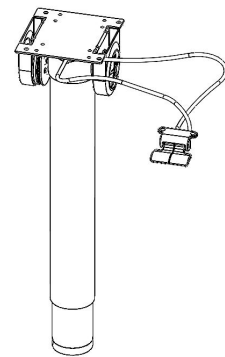


**FOLDING SIT-STAND
COLUMN (PN: 60085)**
QTY. 1

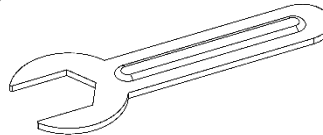


CASTER WRENCH
(PN: 17576)
QTY. 1

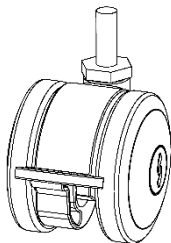


CASTER
(PN: 17576)
QTY. 4

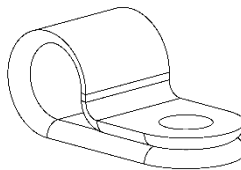


PLASTIC LOOP CLAMP
(PN: 60059)
QTY. 2

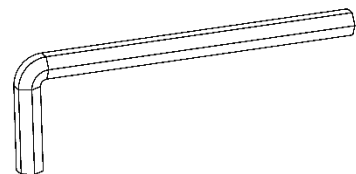


3/16" ALLEN WRENCH
(PN: 60059)
QTY. 1

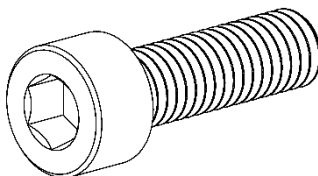

**M6 X 1.0MM X 20MM
SOCKET HEAD BOLT**
(PN: 60059)
QTY. 3

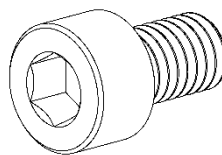


**M6 X 1.0MM X 10MM
SOCKET HEAD BOLT**
(PN: 60059)
QTY. 8 (4 extra)

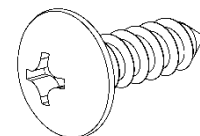


**#10 X 5/8" PAN HEAD
WOOD SCREW**
(PN: 60059)
QTY. 8

Hardware and Components


For XL Sit-Stand Desks

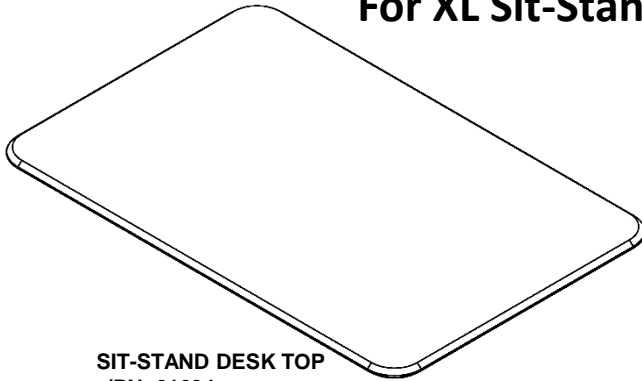


SIT-STAND DESK TOP
(PN: 01634
PN: 01635 SHOWN)
QTY. 1

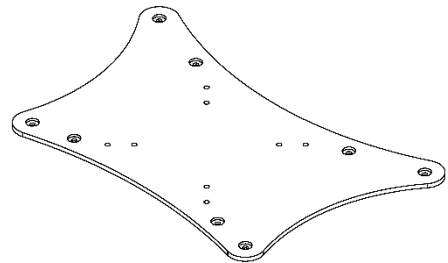


XL BUTTERFLY PLATE
(PN: 60117)
QTY. 1

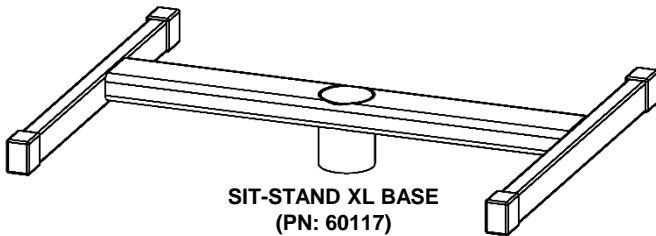


SIT-STAND XL BASE
(PN: 60117)
QTY. 1

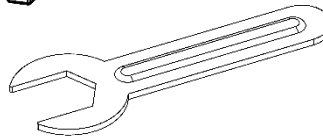


CASTER WRENCH
(PN: 17576)
QTY. 1

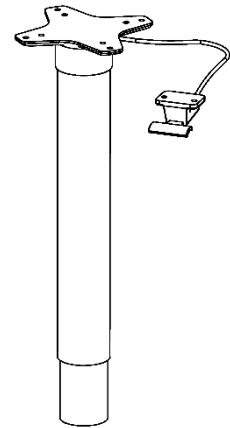


SIT-STAND COLUMN
(PN: 60060)
QTY. 1

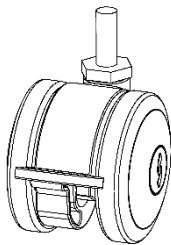


CASTER
(PN: 17576)
QTY. 4

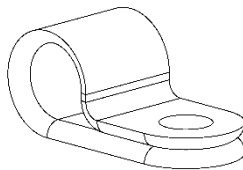


PLASTIC LOOP CLAMP
(PN: 60118)
QTY. 2

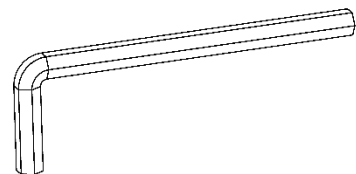


3/16" ALLEN WRENCH
(PN: 60118)
QTY. 1

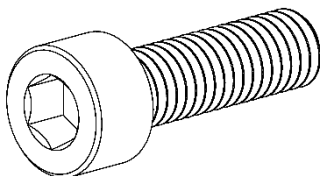

**M6 X 1.0MM X 20MM
SOCKET HEAD BOLT**
(PN: 60118)
QTY. 3

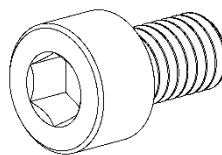

**M6 X 1.0MM X 10MM
SOCKET HEAD BOLT**
(PN: 60118)
QTY. 8

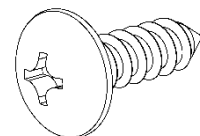


**#10 X 5/8" PAN HEAD
WOOD SCREW**
(PN: 60118)
QTY. 12

Special Notes:


- TOOLS REQUIRED:
 - Drill w/#2 Phillips driver bit, or #2 Phillips head screwdriver.
- Check that all components are accounted for and undamaged before assembling.
- Please assemble the product in a clean and dry area.
- Do **NOT** use an impact driver to assemble the unit.
- Clean the product with a mild cleaner and a damp cloth.

Assembly Instructions


1. Place wood top on clean smooth surface upside down with the pilot holes facing up.

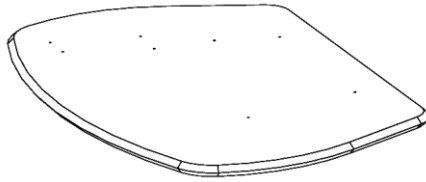


- 2A. For the standard sit-stand desks, position the butterfly plate, with the counterbored holes facing up, to line up with the pilot holes in the top as shown. Install the four #10 x 5/8" Wood Screws to secure the plate to the top. **Do NOT exceed 30 in-lbs. when installing the screws! Doing so can potentially lead to product failure!**

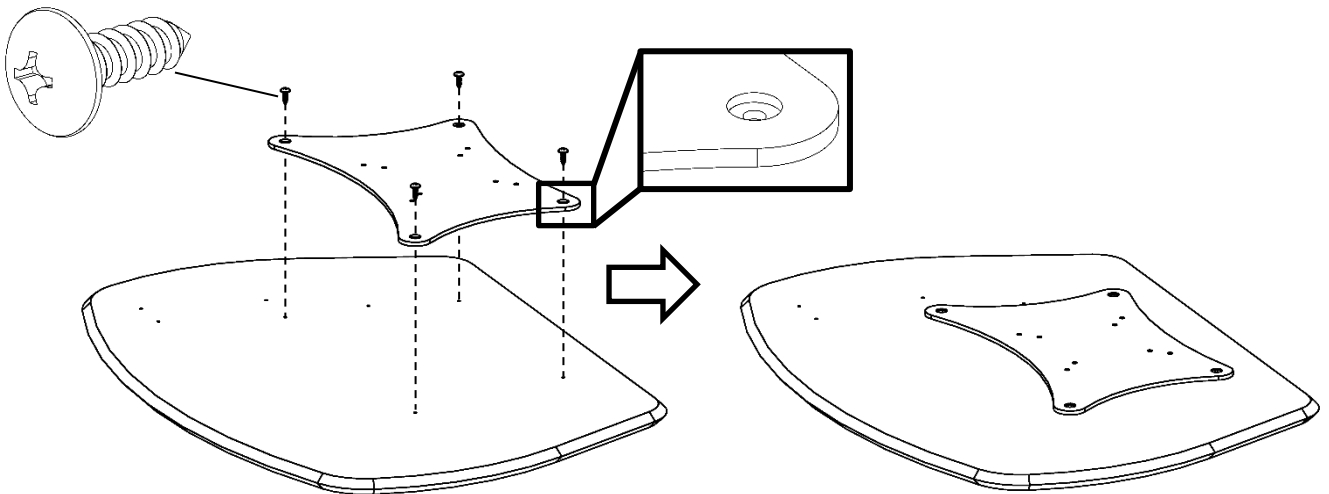


- 2B. For the XL sit-stand desks, position the butterfly plate, with the counterbored holes facing up, to line up with the pilot holes in the top as shown. Install the eight #10 x 5/8" Wood Screws to secure the plate to the top.

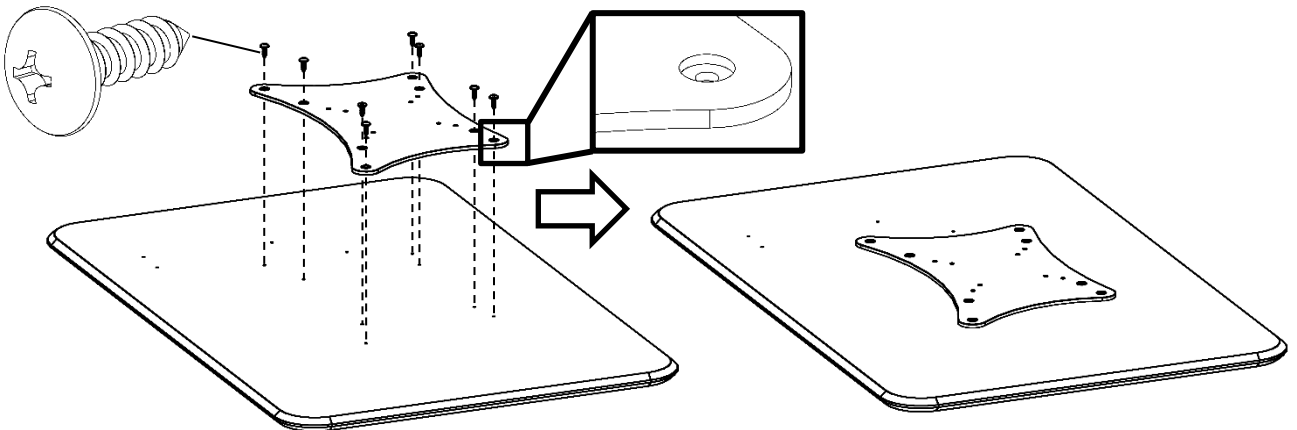

3A. For non-folding standard and XL sit+stand columns, position the column over the butterfly plate so that the eight holes line up. Make sure that the activation cable is coming out of the side of the column as shown. Secure the column to the butterfly plate using the eight M6 x 10mm Socket Head Bolts with the 3/16" Allen Wrench provided. **Do NOT exceed 45 in-lbs. when installing the bolts! Doing so can potentially lead to product failure!** Line up the activation handle with the two holes on the top and secure it with two #10 x 5/8" Wood Screws.

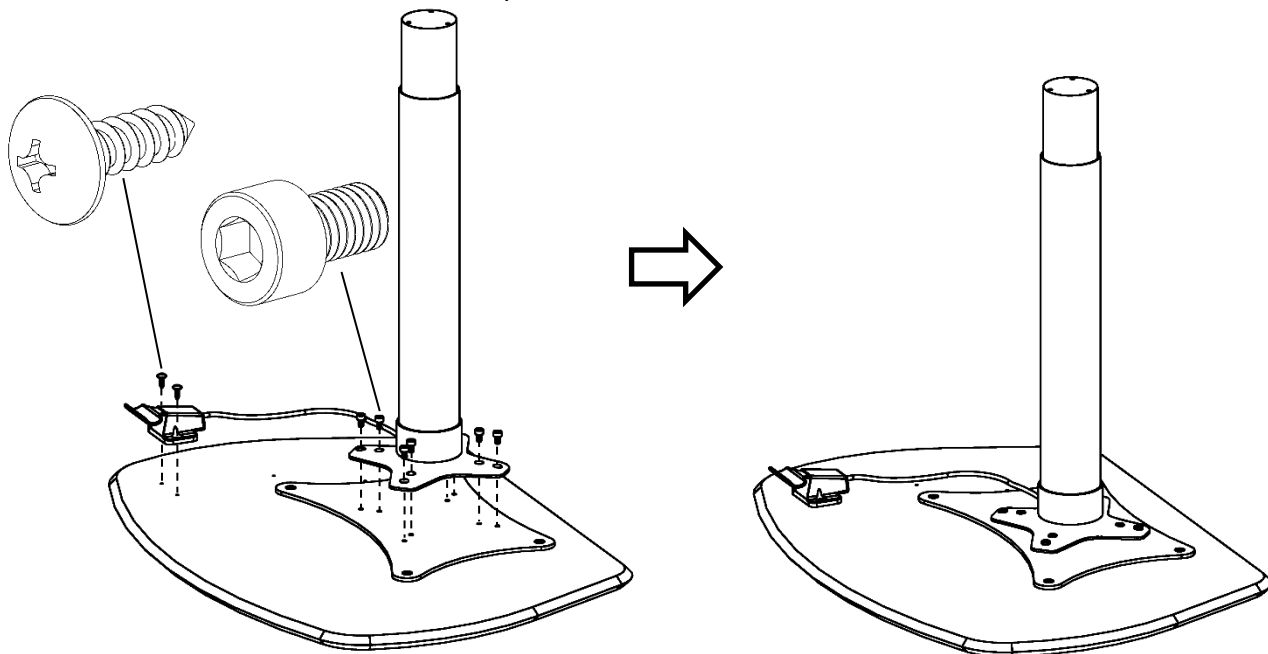


3B. For folding sit+stand columns, position the column over the butterfly plate as shown, so that the four holes line up. Secure the column to the butterfly plate using four M6 x 10mm Socket Head Bolts with the 3/16" Allen Wrench provided. **Do NOT exceed 45 in-lbs. when installing the bolts! Doing so can potentially lead to product failure!** Line up the activation handle with the two holes on the top and secure it with two #10 x 5/8" Wood Screws.

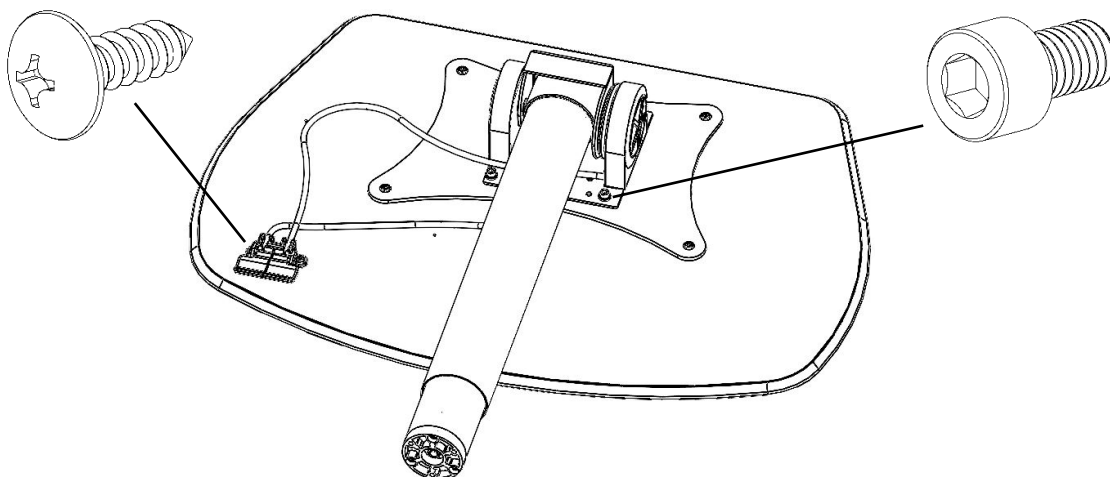


4. Place the two Plastic Loop Clamps on the cable by opening the split side and sliding it over the cable. Place them along the cable near the two holes in the top.


Non-folding configuration

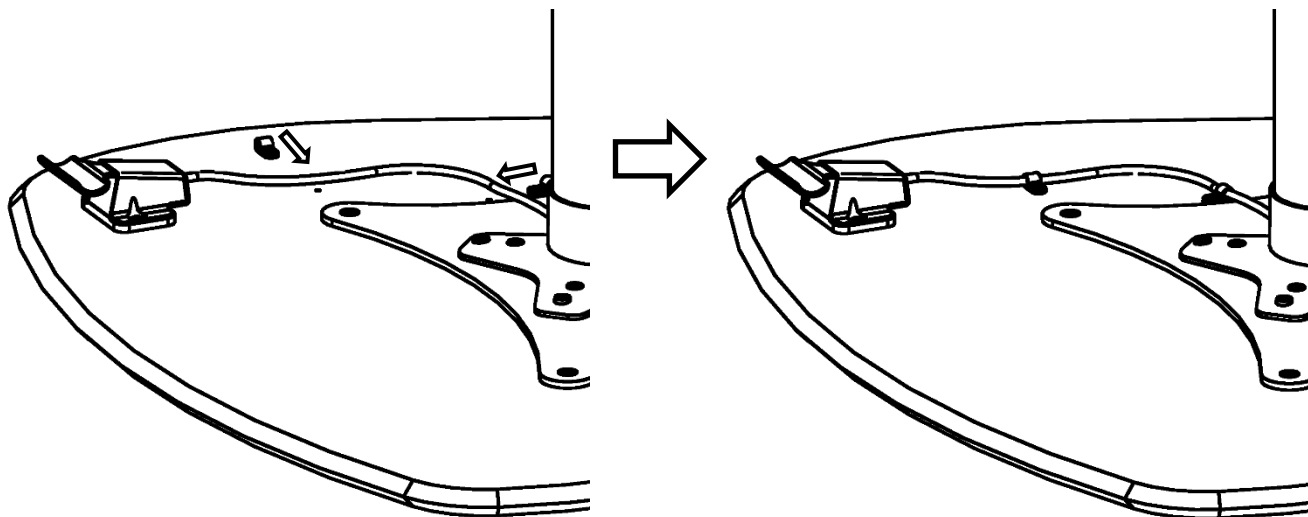


Folding configuration

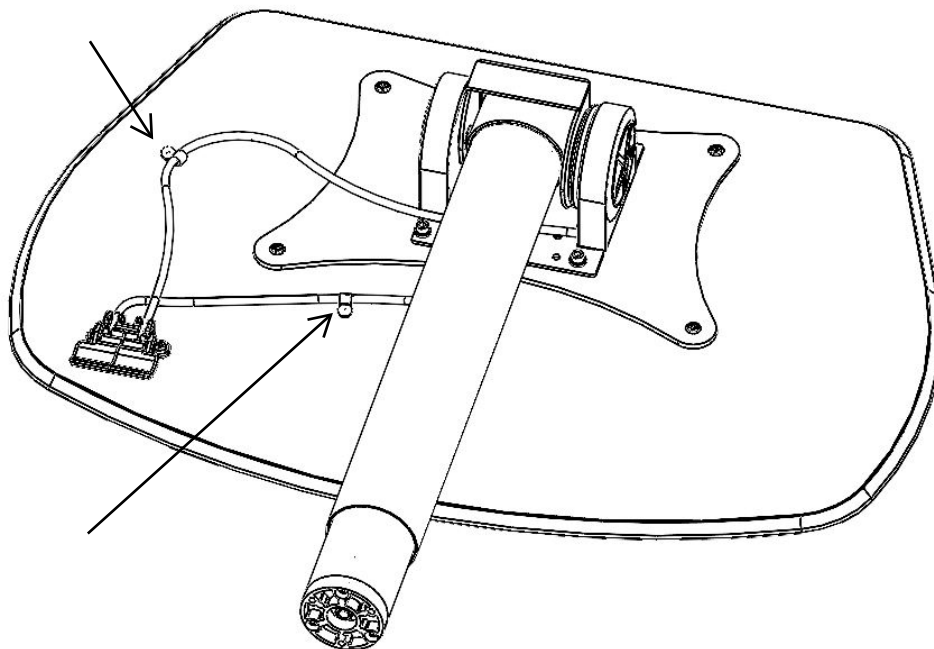


5. Secure the two Plastic Loop Clamps to the top by installing two #10 x 5/8" Wood Screws.

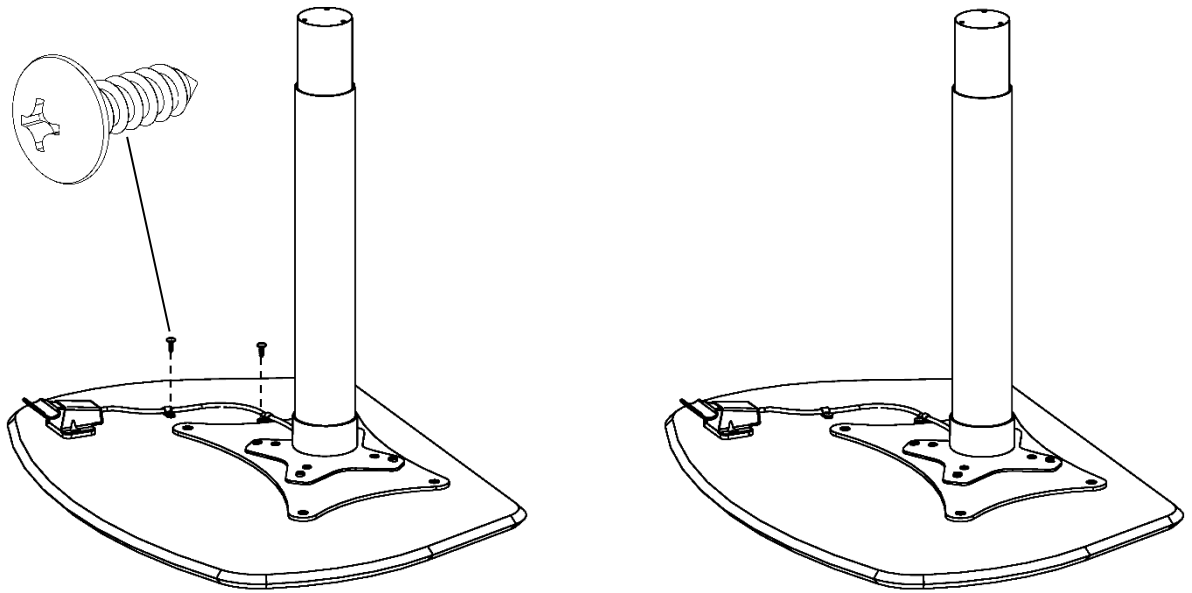


6. Insert the base onto the column making sure the longer legs face the edge of the table with the activation handle and that the three holes on the base line up with the three holes on the column. Secure the base to the column using the three M6 x 20mm Socket Head Bolts with the 3/16" Allen Wrench provided. **Do NOT exceed 45 in-lbs. when installing the bolts! Doing so can potentially lead to product failure!**

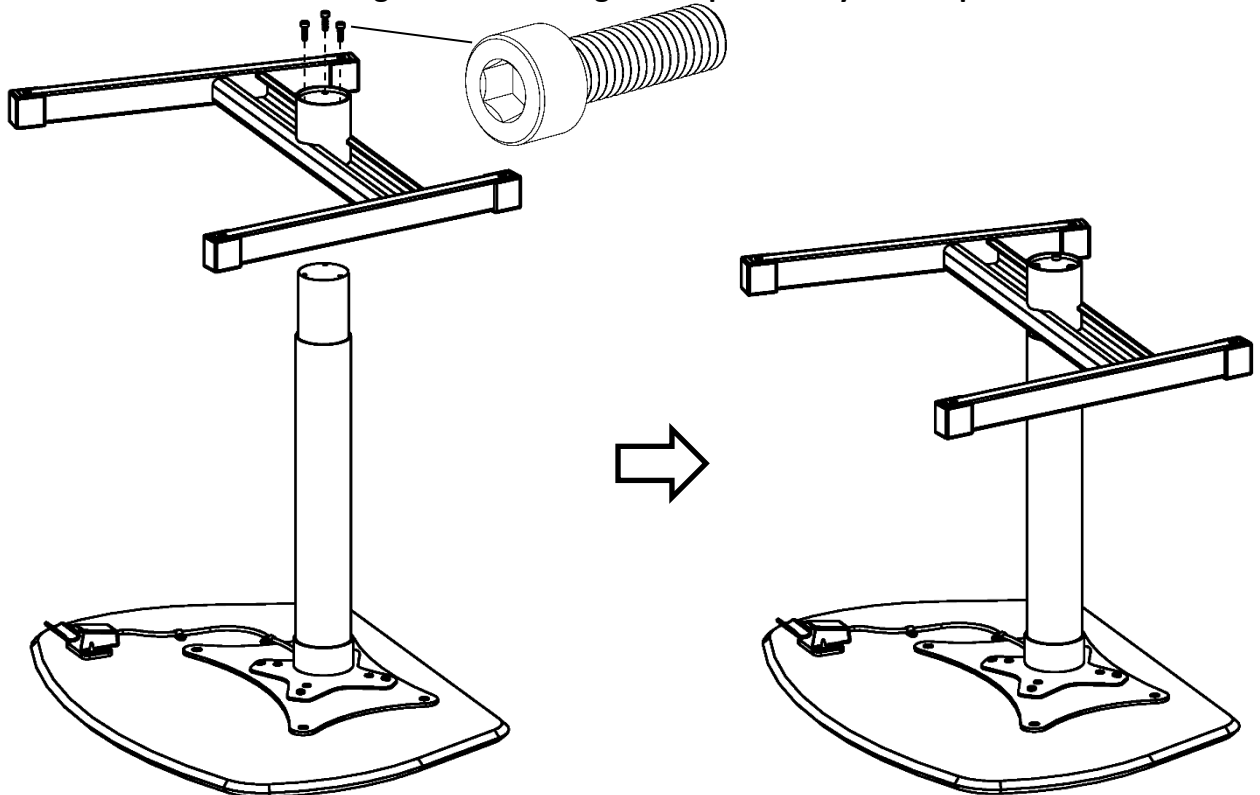

7. Install the four casters into each end of the base using the caster wrench provided.

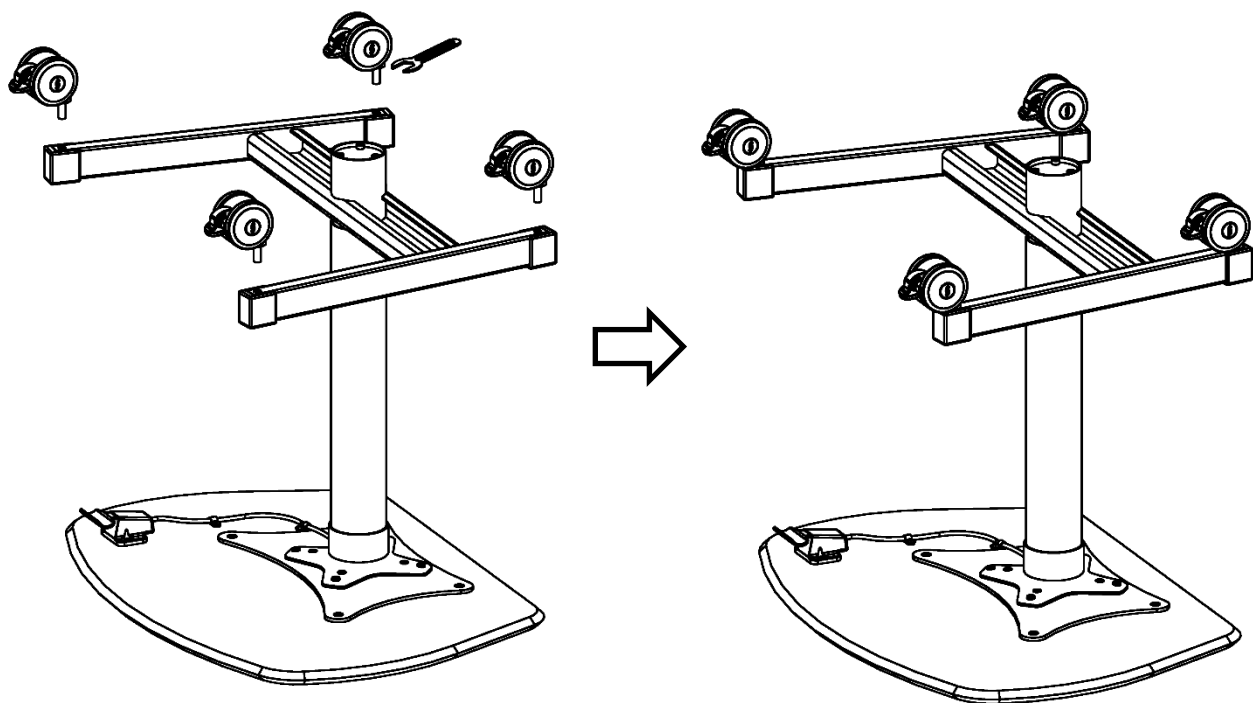

8. Flip the Sit-Stand Desk over. Install pencil retainer here for N&F models.

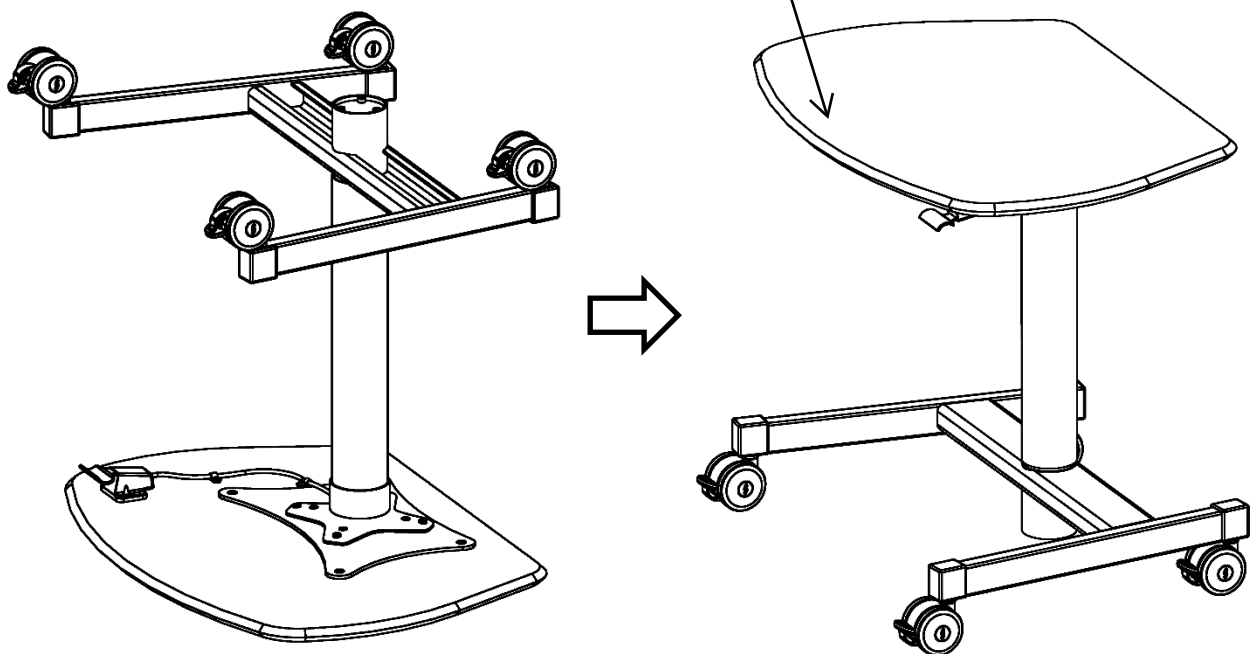

ASSEMBLY COMPLETE