

BROKEN JOINT 5 CM


Broken Joint mosaics convey an old-world elegance as few other materials do. Their subtle asymmetry and intentional offsets evoke the floors of ancient structures, where skilled artisans would hand place each mosaic piece.



BROKEN JOINT 5 CM




Gascogne Beige

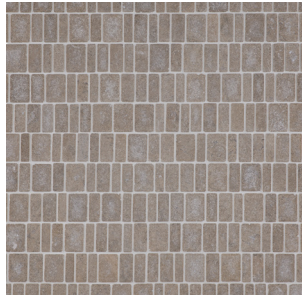

Sahara Blue


SIZE COMPARISON

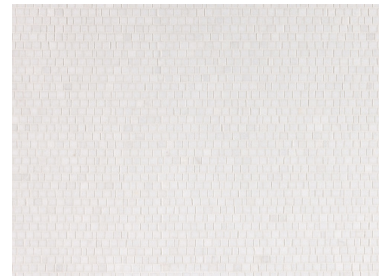

1 cm



3 cm

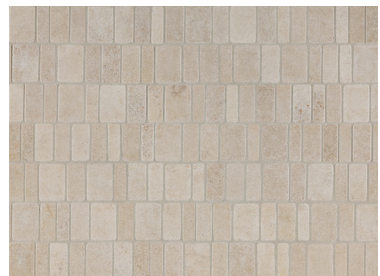


5 cm

APPLICATIONS

INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Residential Heavy	All	Yes, including steam ¹	Yes, including steam ¹	No	No	No	Yes	Yes

VARIATION



INSTALLATION/MAINTENANCE

SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex N23 White Microtec Rapid Set ²	Ardex FG-C Microtec Unsanded ³	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook	Maintain sheet orientation	Required

NOTES


¹ Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods
Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications

² Alternate setting material - Mapei Granirapid White 2-part System or Ardex 100% Solids Epoxy Adhesive White

³ Alternate grout - Mapei Keracolor Unsanded or Ardex DG 1 - One Component Grout

Tech notes: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Massage joints when blending individual sheets. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting. White mortar is recommended for natural stone.

AVAILABLE SIZES

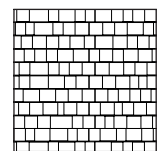

11 1/2" x 12 23/32" x 3/8"
(0.9754 sf/unit)
interlocking sheets

(6 Rows of random placed pieces)

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.