

OMBRÉ STONE


An evolution of our iconic Billie Ombré Glass Mosaic, Ombré Stone creates a similar, smooth ombre effect in natural stone. Ombré Grey's colors ascend from deep charcoal grey to pure white, while Ombré Lilac scales from a vibrant purple to a pure white. Ombré Desert Sunrise evokes the early glow of a desert dawn, ranging from a rich red blend to a warm cream. Inspired by a cool mountain morning, Ombré Mountain Mist transitions from warm cream into a serene blue-grey. Ombré Grey and Lilac are stocked in a polished finish; Ombré Desert Sunrise and Mountain Mist are stocked in a honed finish. Each colorway is complemented with solid color mosaics to extend the ombre effect in either direction, allowing for endless design possibilities.




PICTURED: DESERT SUNRISE OMBRE STONE MOSAIC

OMBRÉ STONE


OMBRÉ

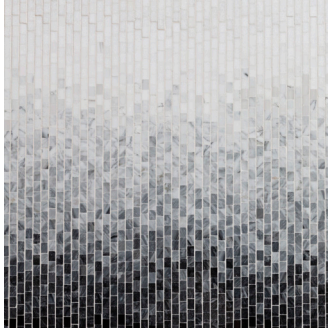


Grey Polished Mosaic
China Black, Grey Black, Bardiglio Nuvolato,
Statuary, Bianco Dolomiti, Thassos

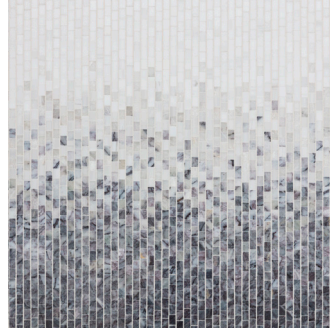

Lilac Polished Mosaic
Lilac, Bianco Dolomiti, Thassos

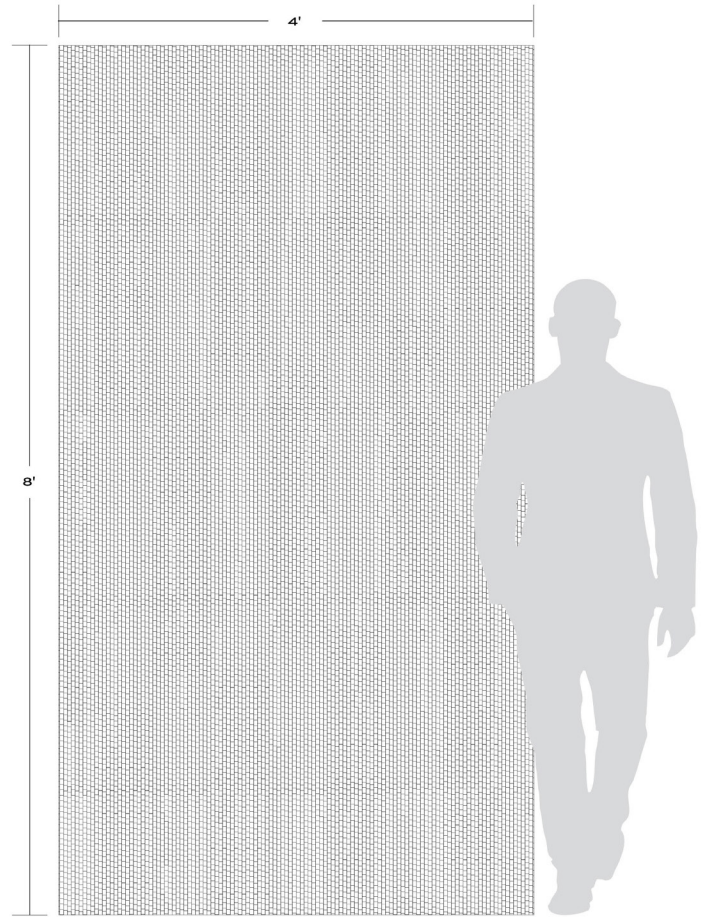


EXTENDERS

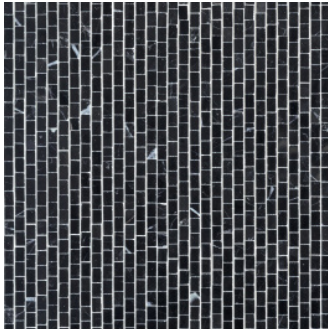



Black



White

APPLICATIONS									VARIATION ⁶			
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND				
Light/Med Traffic Commercial	All	Yes, including steam	See Notes ¹	No	Yes, Non-Freeze Thaw	No	Yes	Yes				

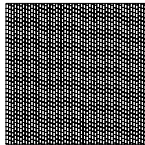INSTALLATION/MAINTENANCE										MOSAIC
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT	
Ardex N23 Microtec Rapid Set ²	Ardex FG-C Microtec Unsanded ³	As established on sheets	Ardex 8 + 9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook ⁴	Rotated	Required ⁵	OMBRE STONE 20" x 6 7/16" x 3/8" (0.90 sf/pc) <i>Interlocking Sheet</i>

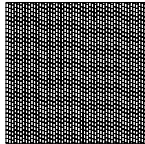
NOTES	
¹ Lilac Mosaic - Yes, Grey Mosaic - No ² Or Mapei Granirapid System required for Ombré Grey Alternate mortar for Ombré Lilac, White or Black Ardex X4 or Mapei Ultraflex 2 ³ Alternate grout - Mapei Flexcolor CQ or Mapei Ultracolor Plus FA ⁴ IMPORTANT: Proper installation will prevent darkening due to water accumulation behind the product. Follow TCNA guidelines to ensure proper installation. ⁵ Layout for overview of material before installation. ⁶ V2 for Extenders	EXTENDERS 6 3/16" x 10 1/2" x 3/8" (0.45 sf/pc) <i>Interlocking Sheet</i>

OMBRÉ STONE

OMBRÉ



Desert Sunrise Honed Mosaic
Red Travertine, Rosa Coral and Alicante

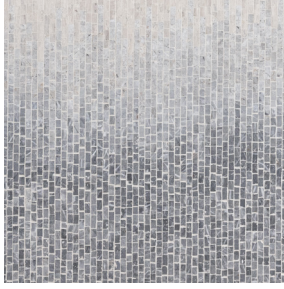


Mountain Mist Honed Mosaic
Gris Tepeca and Crema Marfil

EXTENDERS




Desert Sunrise Red

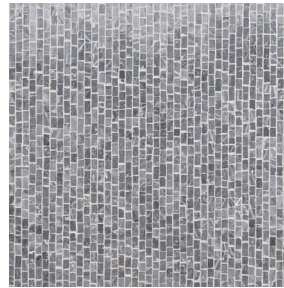

Mountain Mist Grey



Desert Sunrise Cream

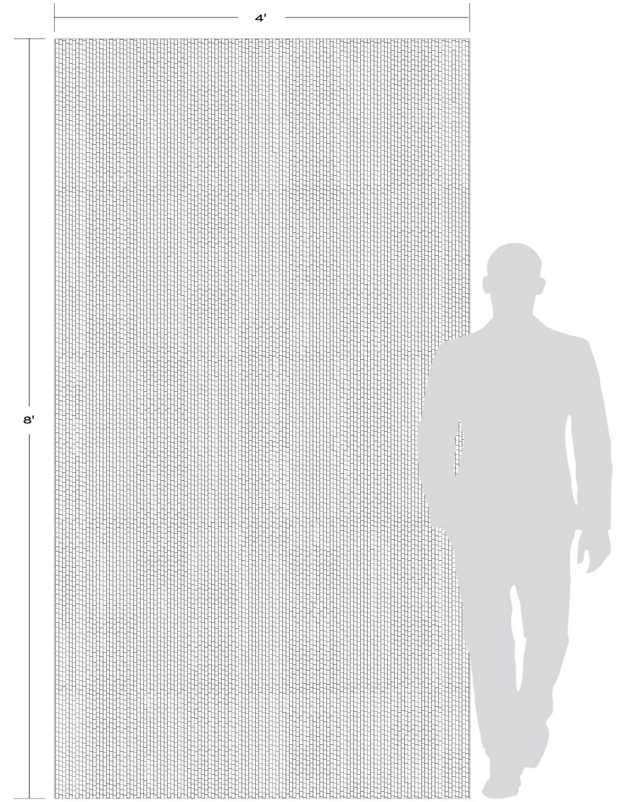

APPLICATIONS								
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND
Light/Medium Commercial	All	Yes, conventional only ¹	Yes, conventional only ¹	No	No	No	Yes	Yes

VARIATION ²			
V1	V2	V3	V4

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex N23 Microtec Rapid Set ³	Ardex FG-C Microtec Unsanded ⁴	As established on sheets	Ardex 8 + 9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook ⁵	Refer To Layout Options	Full Dry ⁶


MOSAIC
OMBRÉ STONE 6 3/16" x 21 1/16" x 3/8" (0.91 sf/pc) Interlocking Sheet
EXTENDERS 6 3/16" x 10 1/2" x 3/8" (0.45 sf/pc) Interlocking Sheet

NOTES
¹ Product MUST be installed in accordance with current TCNA Handbook Stone Methods. Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. ² V3 for Extenders ³ Alternate Setting Material: Mapei Granirapid White 2-part System or Ardex 100% Solids Epoxy Adhesive White ⁴ Alternate grout - Mapei Keracolor Unsanded or Ardex DG 1 - One Component Grout ⁵ Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. ⁶ Dry laying of this product prior to installation is required. Massage joints when blending individual sheets Tech Notes: The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting. Cannot be used interchangeably with Lilac/Grey Ombre Stone or Black/White Extenders.

OMBRÉ STONE

INSTALLATION INSTRUCTIONS

TO CREATE AN OMBRÉ, ROTATE EACH PIECE 180°.

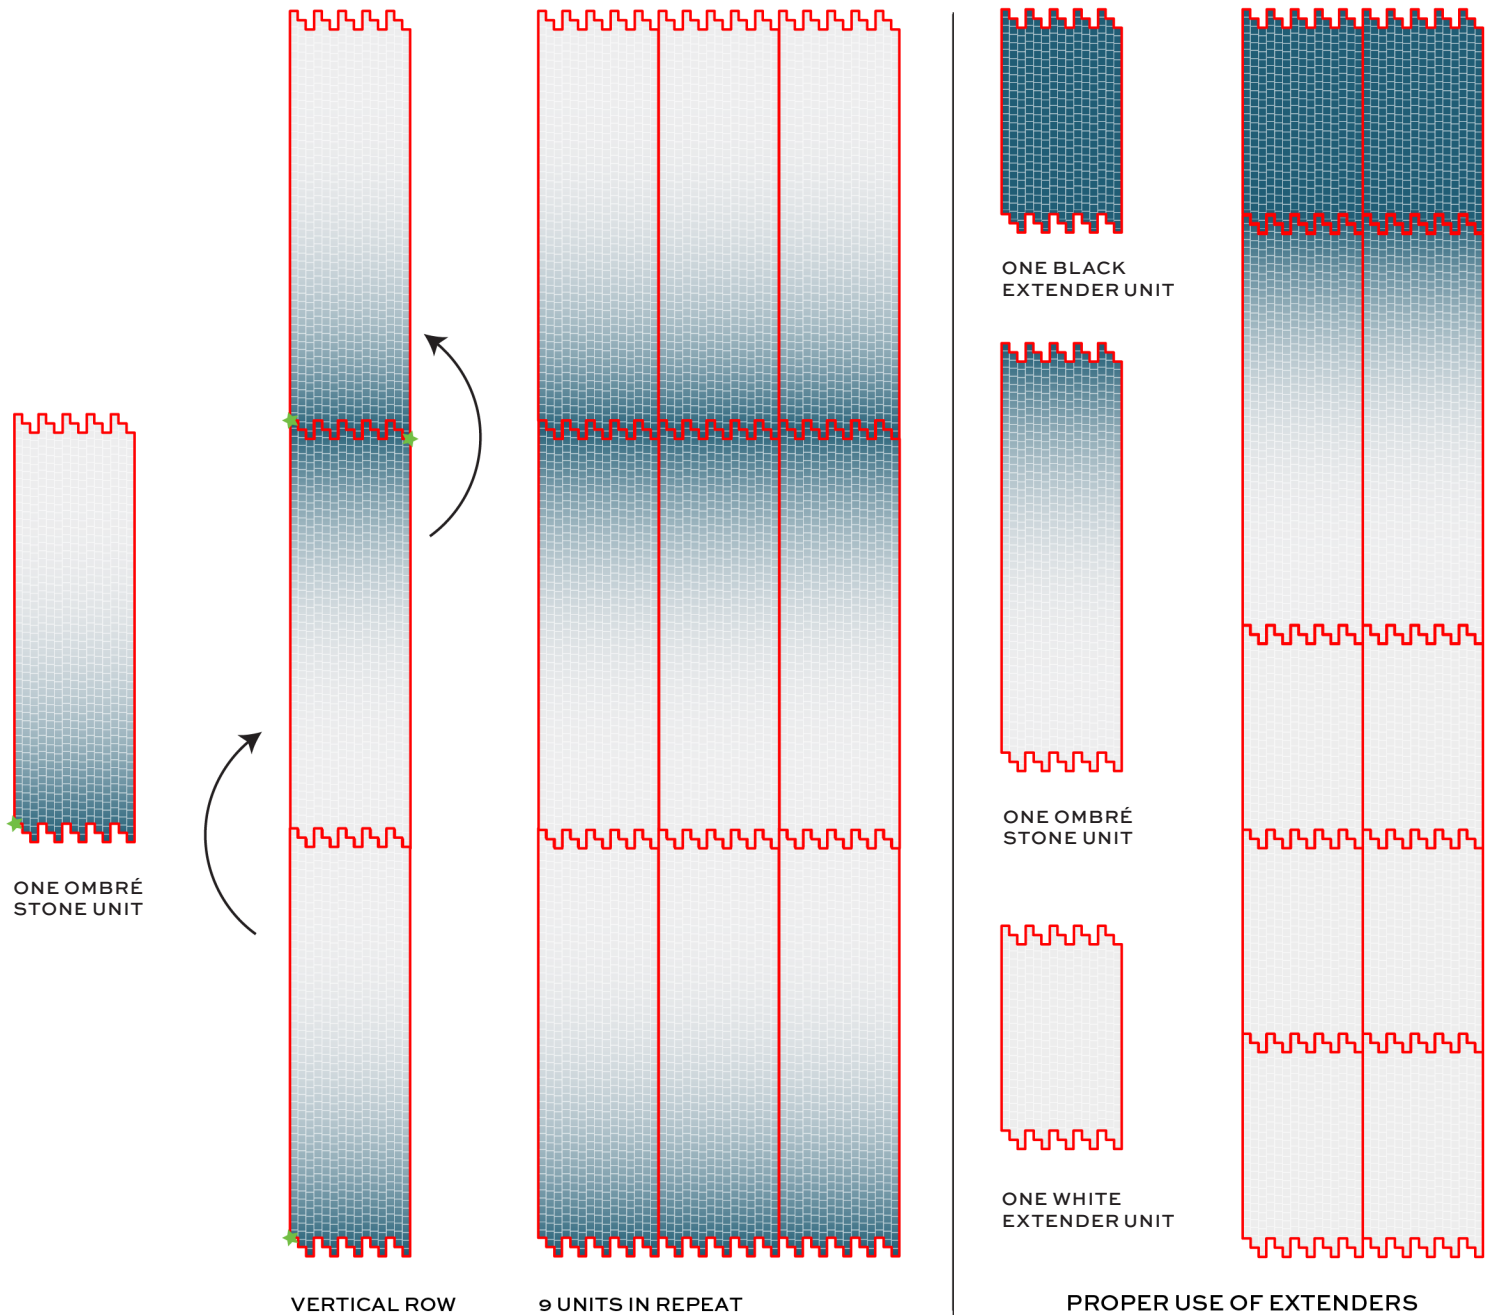

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.