

HANDLOOM

Inspired by the timeless appeal of stripes and plaids, our Handloom collection offers three distinct patterns for countless design possibilities. Double Check showcases an intricate tumbled 3x3 design, where two-tone checks gracefully intertwine, while Shadow Stripe weaves together small mosaic chips with a bold, thicker stripe at its center. Windowpane Plaid presents an elegant checkerboard of varied rectangles. All three interpretations of classic patterns are stocked in Pink, Moca, and Viola colorways, combining soft, luxurious stones like Rosa Perlino, Calacatta Gold, Bianco Antico, Belgian Blue, and Viola, in serene, understated palettes.



HANDLOOM


DOUBLE CHECK




Double Check Moca



Double Check Pink

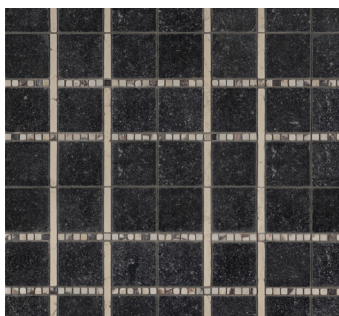

Double Check Viola

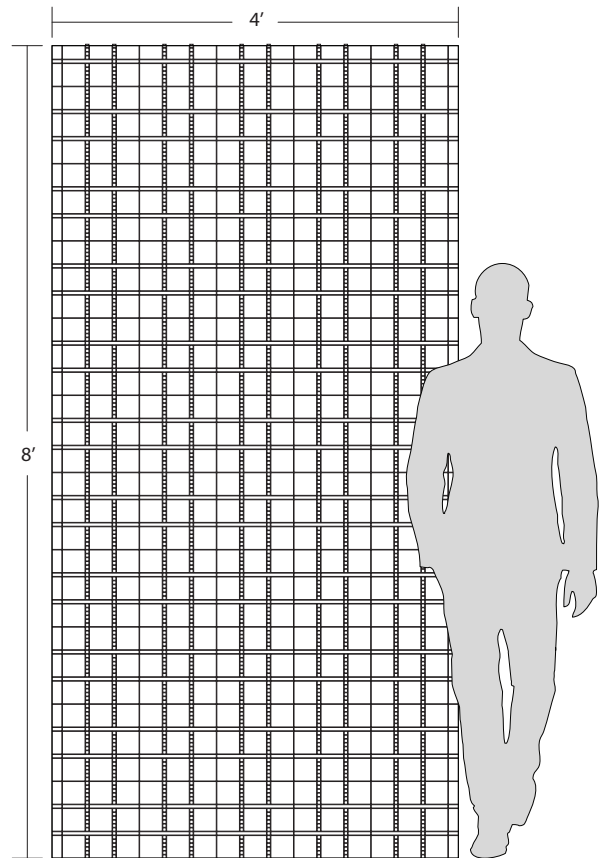

APPLICATIONS									VARIATION				TAILORED TO CUSTOMIZATION
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1 V2 V3 V4				
Light/Medium Commercial	All	Conventional Only ¹	Yes, conventional only ²	No	Yes, non-freeze thaw	No	Yes	Yes					

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex N23 White Microtec Rapid Set ³	Ardex FG-C Microtec Unsanded ⁴	As established on sheets	Ardex 8 + 9	Ardex SX	Aquamix Sealers Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	Maintain Sheet Orientation	Recommended

NOTES

¹ Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods.

² Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details.

³ Alternate Setting Materials: Ardex X77 White Microtec Fiber Reinforced Mortar, Ardex 100% Solids Epoxy Adhesive White


⁴ Alternate Grout: Ardex FL Rapid Set Sanded, Ardex DG 1 - One Component Grout

Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.

WATERJET MOSAIC	
0.5703 SF/PC Interlocking Sheet	
Tumbled Stone Mosaic	

HANDLOOM

WINDOWPANE PLAID

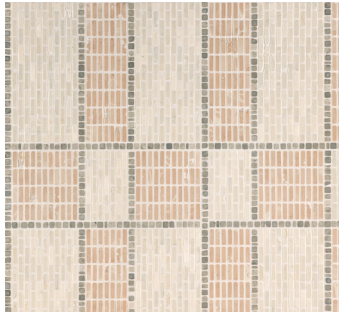


Windowpane Plaid Pink



Windowpane Plaid Viola



Windowpane Plaid Moca

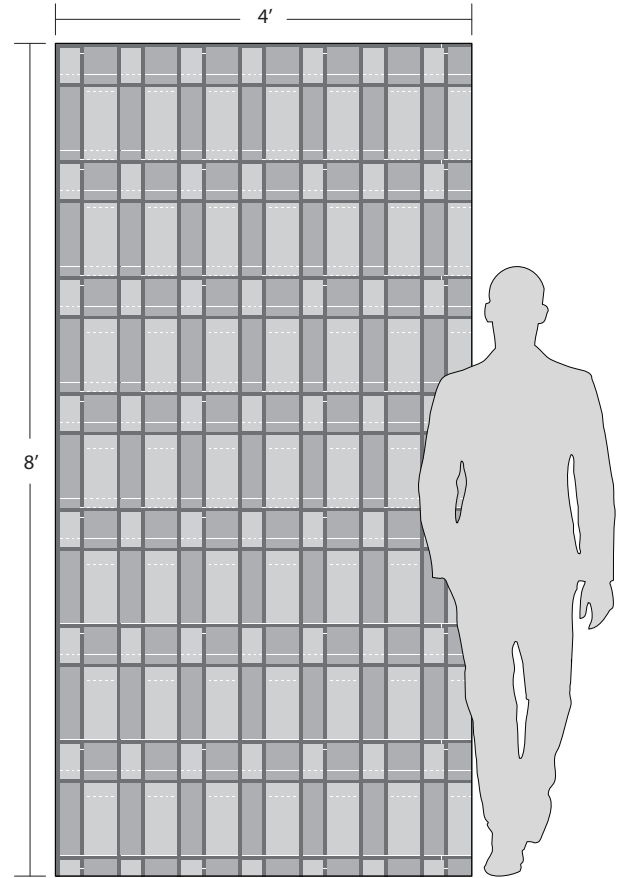

APPLICATIONS									VARIATION				TAILORED TO CUSTOMIZATION
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1 V2 V3 V4				
Light/Medium Commercial	All	Conventional Only ¹	Yes, conventional only ²	No	Yes, non-freeze thaw	No	Yes	Yes					


INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex N23 White Microtec Rapid Set ³	Ardex FG-C Microtec Unsanded ⁴	As established on sheets	Ardex 8 + 9	Ardex SX	Aquamix Sealers Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	Maintain Sheet Orientation	Recommended

NOTES
¹ Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods. ² Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details. ³ Alternate Setting Material: Ardex X77 White Microtec Fiber Reinforced Mortar, Ardex 100% Solids Epoxy Adhesive White ⁴ Alternate Grout: Ardex FL Rapid Set Sanded, Ardex DG 1 - One Component Grout Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.


WATERJET MOSAIC
1.3589 SF/PC Interlocking Sheet
Tumbled Stone Mosaic

HANDLOOM

SHADOW STRIPE

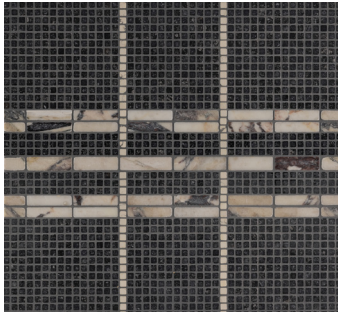


Shadow Stripe Viola

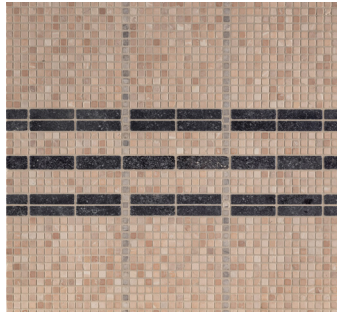

Shadow Stripe Pink



Shadow Stripe Moca

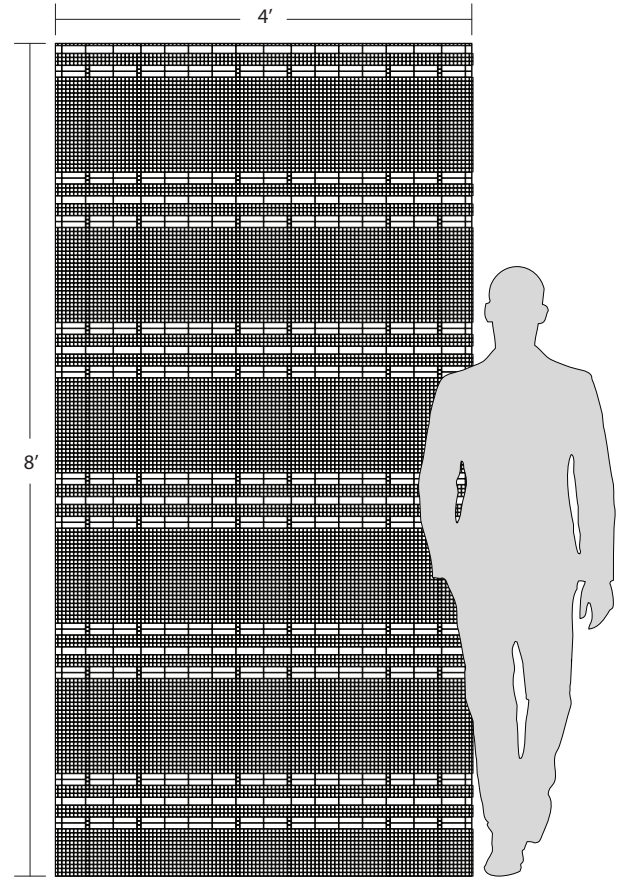

APPLICATIONS									VARIATION		TAILORED TO CUSTOMIZATION
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1	V2	
Light/Medium Commercial	All	Conventional Only ¹	Yes, conventional only ²	No	Yes, non-freeze thaw	No	Yes	Yes			
											CARPET CUTTING
											FIELD
											FINISH
											MOSAIC
											SADDLE
											VANITY TOP
											WATERJET

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex N23 White Microtec Rapid Set ³	Ardex FG-C Microtec Unsanded ⁴	As established on sheets	Ardex 8 + 9	Ardex SX	Aquamix Sealers Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	Maintain Sheet Orientation	Recommended

NOTES
¹ Showers: Product MUST be installed in accordance with current TCNA Handbook Stone Methods. ² Shower Floors: Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. See complete install instructions for further details. ³ Alternate Setting Material: Ardex X77 White Microtec Fiber Reinforced Mortar, Ardex 100% Solids Epoxy Adhesive White ⁴ Alternate Grout: Ardex FL Rapid Set Sanded, Ardex DG 1 - One Component Grout Tech Note: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.

WATERJET MOSAIC
2.0814 SF/PC Interlocking Sheet Tumbled Stone Mosaic

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.