


ABBEY ROAD

The fascinating range of natural stone is celebrated with our Abbey Road mosaic. Elongated rectangles are precisely placed to create linear columns which can be installed horizontally or vertically. Ideal for use on walls and floors and stocked in a variety of our most popular marbles, limestones, and onyx.



PICTURED: ABBEY ROAD WHITE SAND

ABBEY ROAD

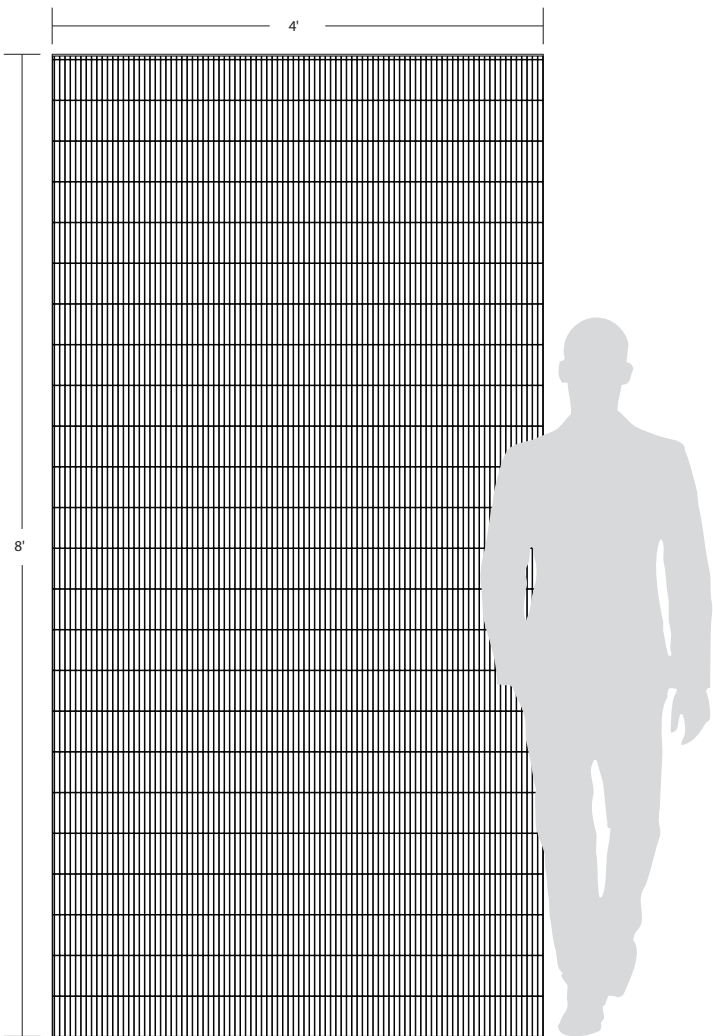

APPLICATIONS									VARIATION		TAILORED TO CUSTOMIZATION	
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND				
Commercial Light/Medium ¹	All	Yes, including steam ²	Yes, including steam ³	No	Yes, non-freeze thaw ⁴	No	Yes	Yes				
											CARPET CUTTING	
											FIELD	
											FINISH	
											MOSAIC	
											SADDLE	
											VANITY TOP	
											WATERJET	

INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 Microtec White ⁵	Ardex FG-C Microtec Unsanded ⁶	As Established On Sheets	Ardex 8 + 9	Ardex SX	AquaMix Sealers Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	No	Recommended ⁸

NOTES	
¹ Vanilla Onyx - Residential Light Sea Grey Antiqued & Birch White - Residential Heavy ² Vanilla Onyx - Conventional Only ³ Vanilla Onyx - Conventional Only, Grigio Toscana and Smoke - No ⁴ Vanilla Onyx, Rosa Minerva, Grigio Toscana, Ocean Blue, Volakas White - No ⁵ Alternate mortar - Ardex X4 White or Ardex 100% Solids Epoxy Adhesive White ⁶ Cloud Vein Cut, Grigio Toscana, Smoke: Ardex N23 White Microtec Rapis Set or Mapei Granirapid System ⁷ Alternate grout: Ardex DG 1 One-Component Grout or Mapei Keracolor Unsanded ⁸ Lilac: Ardex X4 White Tile & Stone Mortar or Ardex 100% Solids Epoxy Adhesive White Nero, Rosa Minerva, Noir Antiqued, Calacatta Rosa, Ocean Blue, Smoke, Volakas White, Bianco Dei: Ardex DG 1 - One Component Grout or Mapei Ultracolor Plus FA ⁷ Abbey Road Arabescato D'oro is 1.06 sf/unit and 5.30 sf box. It will not modulate with other Abbey Road options. ⁸ Lilac - Required	Tech Notes: Product MUST be installed in accordance with current TCNA Handbook Stone Methods. Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Massage joints when blending individual sheets. White mortar is recommended for natural stone. The installation of intricate mosaic patterns may require the use of a mosaic nipper to hand cut pieces along the edge to fit or conduct adjustments throughout the installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. Seal and utilize a grout release prior to grouting.

STONE MOSAIC
12 7/16" x 11 7/8" x 3/8" (1.03 sf/unit)
Interlocking Sheet ⁷
Honed/Antiqued Finish

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414 Stone, B441 Stone, B415 Stone, B420 Stone, B426 Stone,
B431 Stone, B421 Stone, B422 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrap piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.