


INTERLACE

A playful and modern twist on the classic basketweave. White Sand marble forms the backdrop for Interlace's two distinct colorways; Lilac, a subtle tapestry woven with plum-veined marble, and Red Travertine, a warm, rustic blend offering color and contrast. The interplay of these stones marries timeless elegance and contemporary design, creating a sophisticated, textile-inspired mosaic. Each 8-11/64" x 8-11/64" tile features a honed finish.




INTERLACE

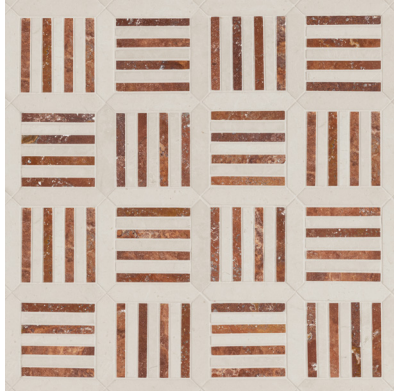


Red Travertine - Honed



Lilac - Honed

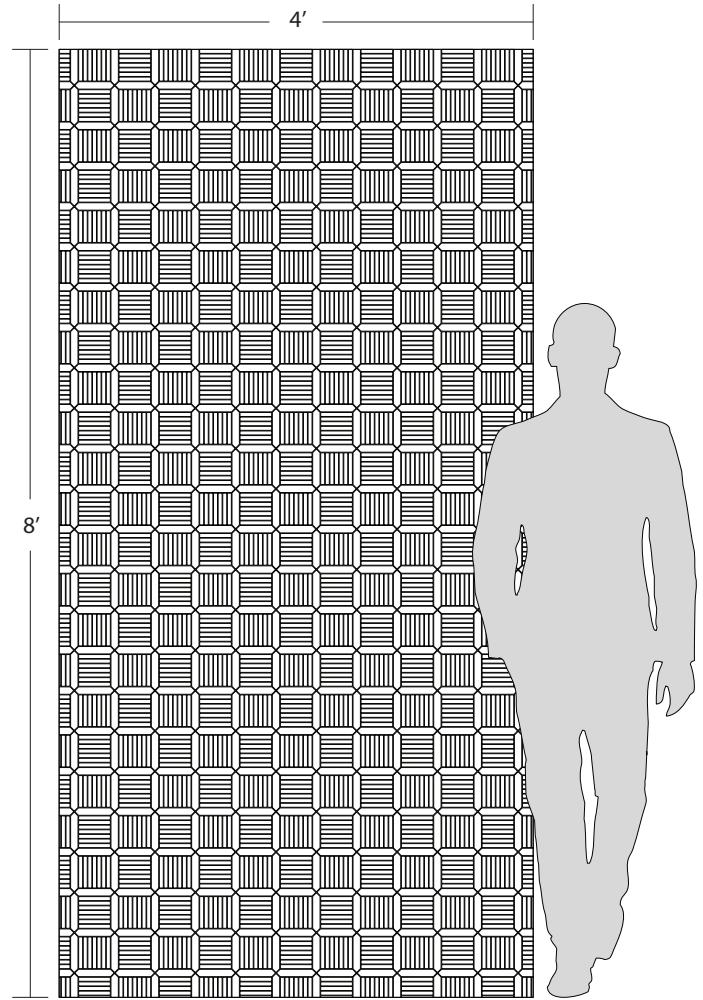

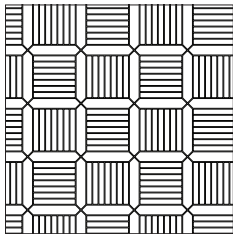APPLICATIONS									VARIATION ²				TAILORED TO CUSTOMIZATION	
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1 V2 V3 V4				CARPET CUTTING FIELD FINISH MOSAIC SADDLE VANITY TOP WATERJET	
Light/ Medium Commercial	All	Yes, including steam ¹	Yes, including steam ¹	No	Yes, non freeze thaw	No	Yes	Yes						
INSTALLATION/MAINTENANCE											MOSAIC			
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT	QR CODE				
Ardex X77 White Microtec Fiber Reinforced Mortar ³	Ardex FG-C Microtec Unsanded ⁴	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealers Choice Gold	AquaMix Concentrated Cleaner	TCNA Handbook	Maintain Sheet Orientation	Required					
NOTES														
¹ Shower: Product must be installed in accordance with current TCNA Handbook Stone Methods. ² Red Travertine Interlace is V2. ³ Alternate Mortar - Mapei Kerabond White w/Keralastic Additive or Ardex WA Epoxy ⁴ Alternate Grout - Mapei Ultracolor Plus FA or Ardex FL Rapid Set Sanded Tech Notes: Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Pattern is directional, maintain sheet orientation during installation. White mortar is recommended for natural stone.														
											 8 ³/₁₆" x 8 3 ³/₁₆" x 3 ³/₈" (0. 0.4798 SF/PC) Honed			

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.