


TAPPETI

Inspired by the intricate patterns and color play of textile weaves, our Tappeti mosaic combines four naturally vibrant stones into a fabric-like weave that conjures embroidered rugs and wall hangings, but in a smooth stone surface. Each colorway unites four harmonious colors for a unique visual effect. Available in Lilac, Blue, Red or Green blends.




TAPPETI

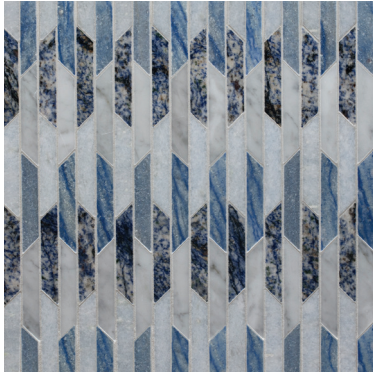

Blue Blend Polished
Azul Bahia, Azul Macubas, Azul Cielo,
Bianco Carrara




Red Blend Polished
Tongshan Red, Red Travertine, Pink Cream,
China Beige

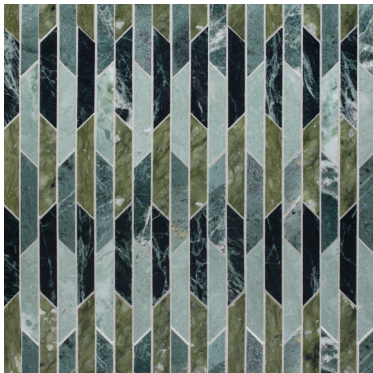

Green Blend Polished
Verde Alpi, Green Jade, Emerald Green,
Light Green Jade



Lilac Honed
Lilac, Bianco Carrara, Thassos, Bianco Dolomiti

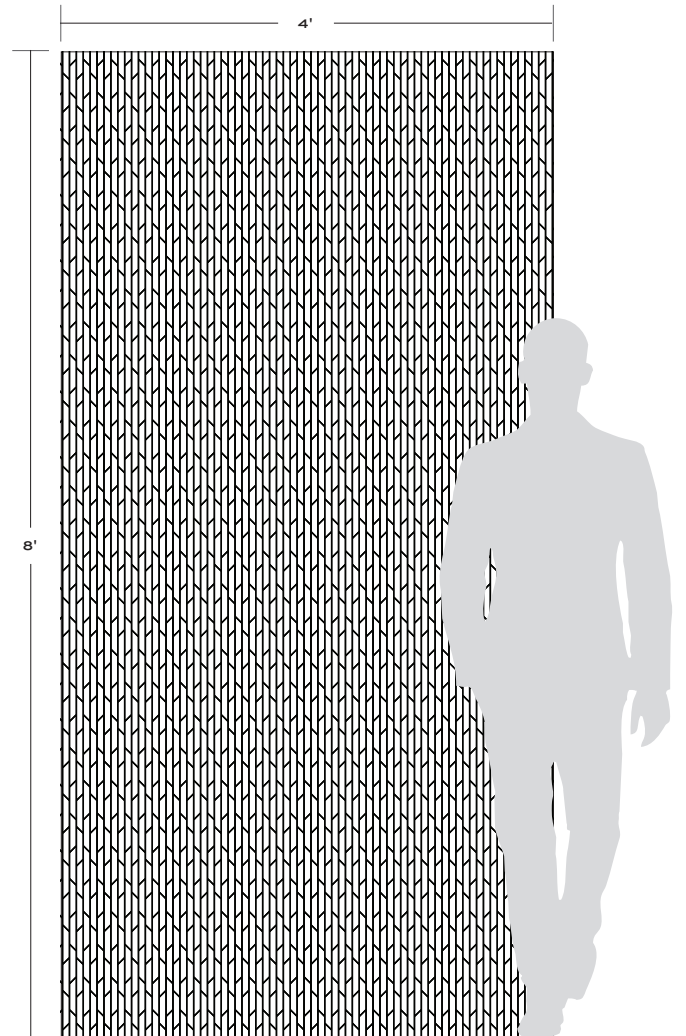

APPLICATIONS									VARIATION		TAILORED TO CUSTOMIZATION	
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1 V2 V3 V4		CARPET CUTTING	
Light/Medium Traffic Commercial	All	All	Yes, linear drain	No	Yes, non-freeze thaw	No	Yes	Yes			FIELD	FINISH
											MOSAIC	SADDLE
											VANITY TOP	WATERJET
INSTALLATION/MAINTENANCE										AVAILABLE SIZES		
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT			
Ardex X4 Tile & Stone Mortar ¹	Ardex FG-C Microtec Unsanded ²	As established on sheets	Ardex 8 + 9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook ³	Maintain sheet orientation	Recommended ⁴			
NOTES										POLISHED MOSAIC⁵ 12 3/4" x 13 7/16" x 3/8" (1.19 sf/unit) Mesh Mounted Interlocking Sheets		
¹ Alternate Mortar - Mapei Ultraflex 2 or Mapei Kerabond with Keralastic Additive Alternate Mortar for Green Blend only - Mapei Granirapid White 2-part System or Ardex N23 White Microtec Rapid Set ² Alternate Grout - Mapei Flexcolor CQ or Mapei Ultracolor Plus FA ³ IMPORTANT: Proper installation will prevent darkening due to water accumulation behind the product. Follow TCNA guidelines to ensure proper installation. ⁴ Layout for color and vein selection before installation Dry Layout - Sample for Tappeti Lilac only ⁵ Tappeti Lilac - Honed Mosaic												

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.