

DOGE MOSAIC

Named for the Doge Palace, the fabulous home of the Dukes of Venice who ruled the republic during the height of its power, our Doge mosaic draws from the Cosmati style of opus sectile, or “cut work,” that originated in Rome before the Renaissance. A timeless pattern in seven distinct colorways, Doge is crafted from exquisite marble, polished or honed, and finished with a precision worthy of its proud heritage.




PICTURED: DOGE MOSAIC FETE PHOTOGRAPHED BY CHRISTOPHER KENT

DOGE MOSAIC




White Polished
Thassos & Calacatta Gold

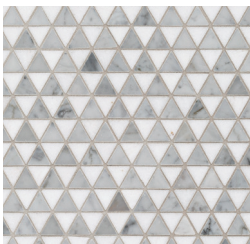

Light Grey Polished
Thassos & Bianco Carrara




Fete Polished
Multi Blend

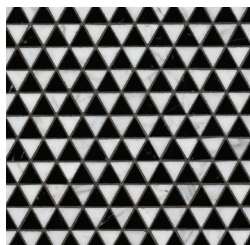


Black Polished
Nero & Statuary




Cream Honed
Vanilla Onyx & Bianco Dolomiti


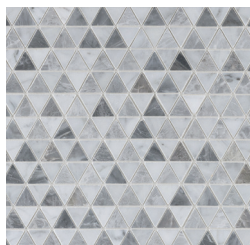


Grigio Toscana Honed
Bianco Carrara & Grigio Toscana

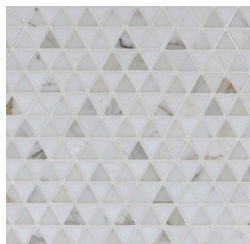

White Blend Honed
Thassos & Calacatta Gold

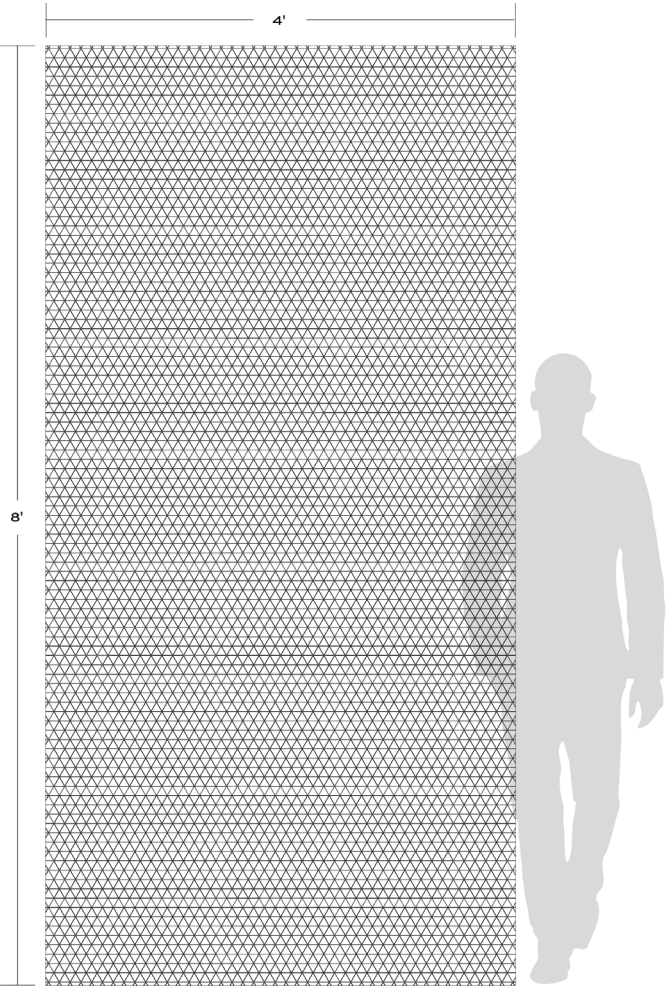

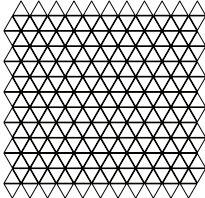APPLICATIONS									VARIATION ⁷				TAILORED TO CUSTOMIZATION	
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND		CARPET CUTTING FIELD FINISH MOSAIC SADDLE VANITY TOP WATERJET				
Light/ Medium Commercial	All	Yes, including steam ¹	Yes, including steam ²	No	Yes, non-freeze thaw ³	No	Yes	Yes						
INSTALLATION/MAINTENANCE												TRIANGLE MOSAIC		
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT				DRY LAYOUT		
Ardex X77 White Microtec Fiber Reinforced Mortar ⁴	Ardex FG-C Microtec Unsanded ⁵	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook	Maintain sheet orientation				Required		
NOTES												 12 1/8" x 11 7/16" x 3/8" (0.96 SF)		
¹ Shower Wall: Cream, Grigio Toscana - Conventional only ² Shower Floor: Cream - Conventional only, Grigio Toscana - No Ardex 100% Solids Epoxy Adhesive White is recommended for installing this product in shower floor applications. ³ Exterior Wall: Cream, Grigio Toscana - No, White Blend Honed - Yes, including freeze thaw ⁴ Doge Fete, Grigio Toscana - Install with Ardex N23 White or Mapei Granirapid White ⁴ Alternate Mortar: Ardex X4 White Tile & Stone Mortar ⁵ Alternate Grout - Ardex DG 1 - One Component Grout ⁷ Variation : Doge Light Grey - V2 Tech Notes: Product MUST be installed in accordance with current TCNA Handbook Stone Methods. Individual sheets of this mosaic are not square. Sheets are irregular and combine into a seamless interlocking pattern. Plan your layout accordingly. Dry laying of this product prior to installation is required. Pattern is directional, maintain sheet orientation during installation. For straight cuts on a tile wet saw clear plastic face tape can be applied to keep the mosaic pieces aligned while cutting. White mortar is recommended for natural stone. Seal and utilize a grout release prior to grouting.														

DOGE-INSTALLATION GUIDE

SINGLE UNIT


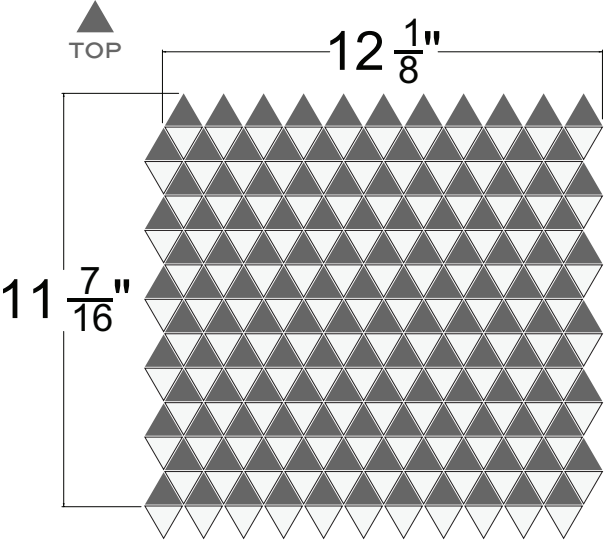



Diagram of a single unit tile showing dimensions and orientation. The width is $12\frac{1}{8}"$ and the height is $11\frac{7}{16}"$. A triangle icon labeled "TOP" indicates the orientation.




STRIDBLKMP

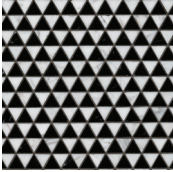

SSPQRDOGEMP

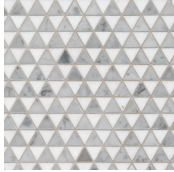


STRIDGGRLTMP

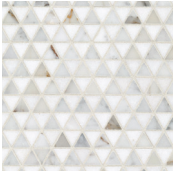


STRIDWHMP



STRIDCRMMH

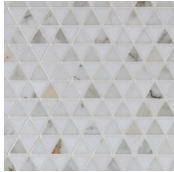


STRIDWHMH

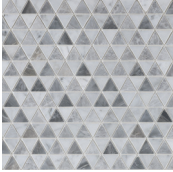

STRIDGRIGTMH

* PATTERN IS DIRECTIONAL, MAINTAIN SHEET ORIENTATION
* COLORED STONES SHOULD POINT UPWARDS

UNITS IN REPEAT

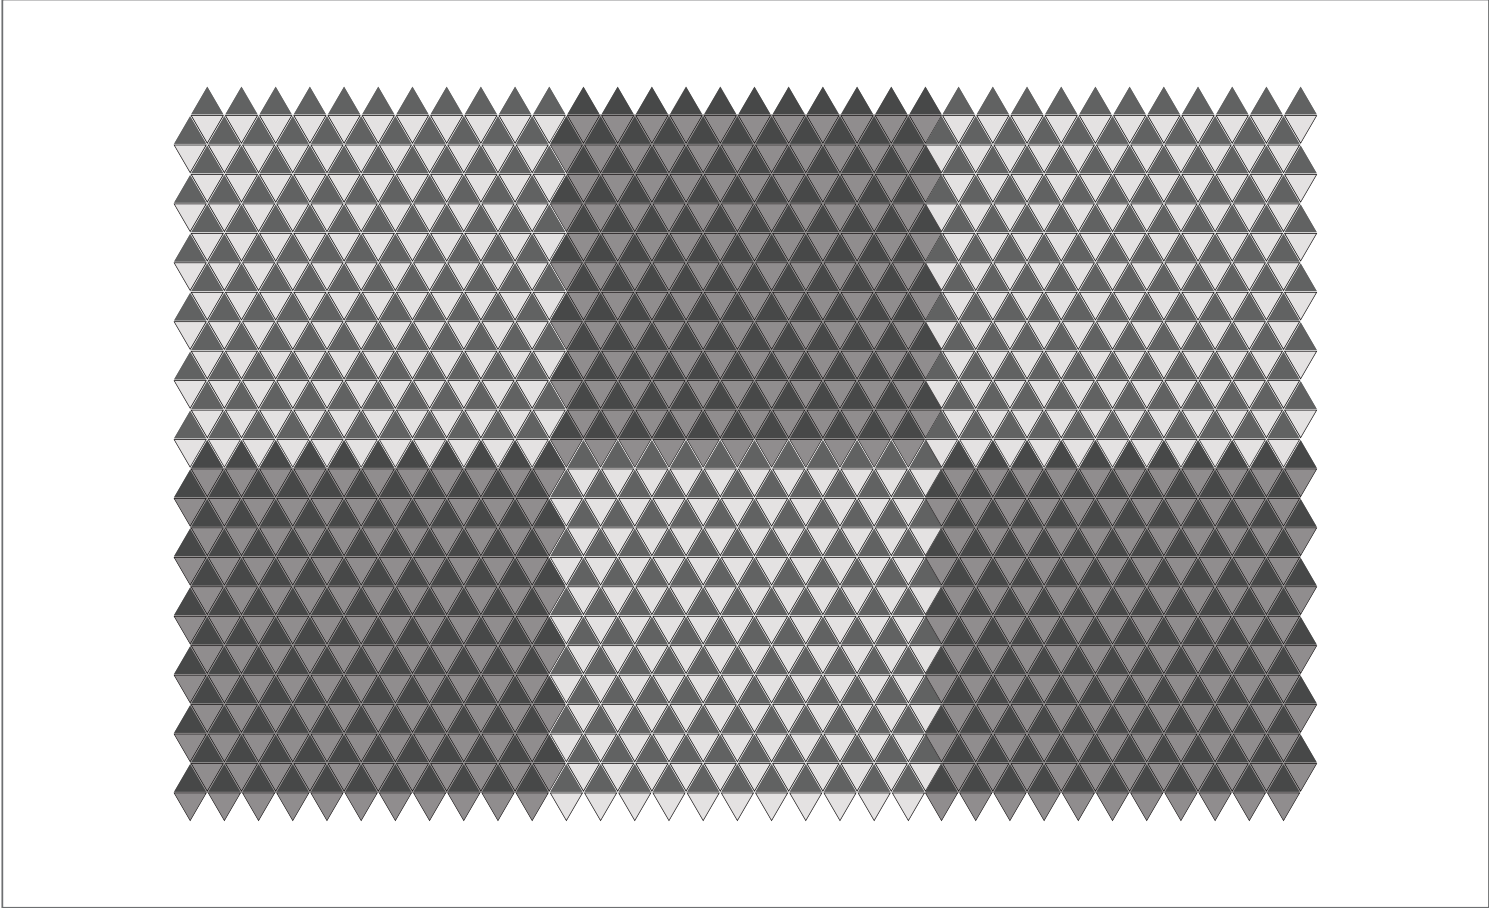

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.