


RIVERSIDE DRIVE COLLECTION

Riverside Drive stone mosaics resurrect the elegance of old New York in a modern collection of finely cut stone hexagons. The collection updates a 1920's aesthetic, taking a historical style from its porcelain roots into a higher class. Stocked in four patterns or made to order with our Tailored To program.




PICTURED: RIVERSIDE DRIVE SWIRL CREAM


RIVERSIDE DRIVE COLLECTION

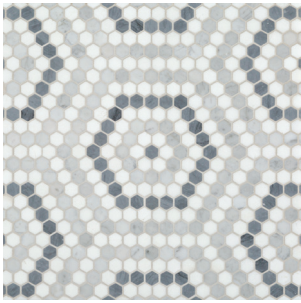


Hexagon Grey - Polished Bianco Carrara, Thassos & Bardiglio

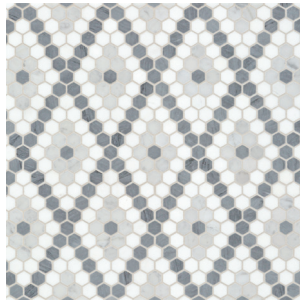


Diamond Grey - Polished Bianco Carrara, Thassos & Bardiglio

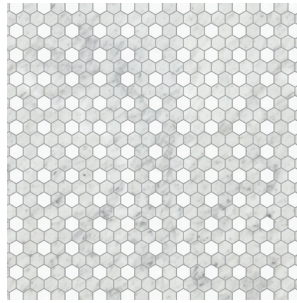


Dot Grey - Polished Bianco Carrara & Thassos

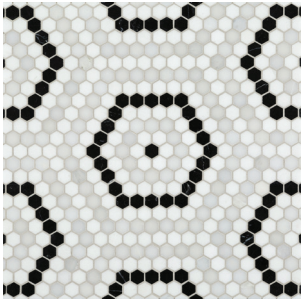


Hexagon White - Polished Thassos, Pacific White & Nero

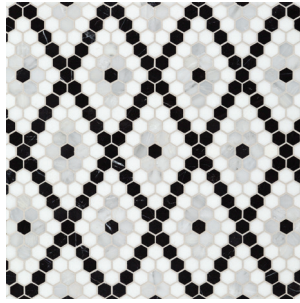

Diamond White - Polished Thassos, Pacific White & Nero

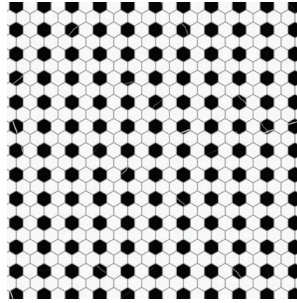

Dot White - Polished Thassos & Nero

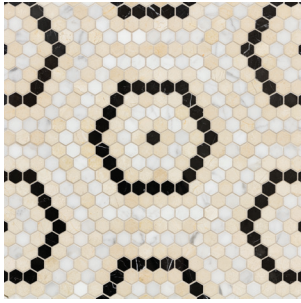

Hexagon Cream - Polished Crema Marfil, Nero & Statuary Limited Inventory



Swirl Cream - Polished Crema Marfil, Pacific White & Thassos




PICTURED: RIVERSIDE DRIVE HEXAGON GREY & DIAMOND GREY

APPLICATIONS									VARIATION		TAILORED TO CUSTOMIZATION	
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1 V2 V3 V4		CARPET CUTTING	
Medium Traffic Commercial	All	Yes, including steam ¹	Yes ²	No	Yes, non-freeze thaw ³	No	Yes	Yes			FIELD	FINISH
											MOSAIC	SADDLE
											VANITY TOP	WATERJET


INSTALLATION/MAINTENANCE										AVAILABLE SIZES	
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT		
Mapei Ultraflex 2 White ⁴	Mapei Ultracolor Plus Sanded ⁵	As established on sheets	Mapei Mapelastix AquaDefense	Mapei Keracaulk Sanded	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook ⁶	No	Required	SWIRL 2CM MOSAIC (1.47 sf) Mesh mounted interlocking sheets Polished	HEXAGON 2CM MOSAIC (0.82 sf) Mesh mounted interlocking sheets Polished
										DOT 2CM MOSAIC (0.86 sf) Mesh mounted interlocking sheets Polished	DIAMOND 2CM MOSAIC (0.86 sf) Mesh mounted interlocking sheets Polished

NOTES									
¹ Diamond Grey & Hexagon Grey - Conventional showers only ² Diamond Grey & Hexagon Grey - No ³ Diamond Grey & Hexagon Grey - No ⁴ Diamond Grey & Hexagon Grey - Mapei Granirapid System ⁵ High performance grout option for all - Litokol Starlike Classic & Mapei Flexcolor CQ For all colorways, pattern is directional. Maintain sheet orientation during installation. ⁶ IMPORTANT: Proper installation will prevent darkening due to water accumulation behind the product. Follow TCNA guidelines to ensure proper installation.									


RIVERSIDE DRIVE COLLECTION

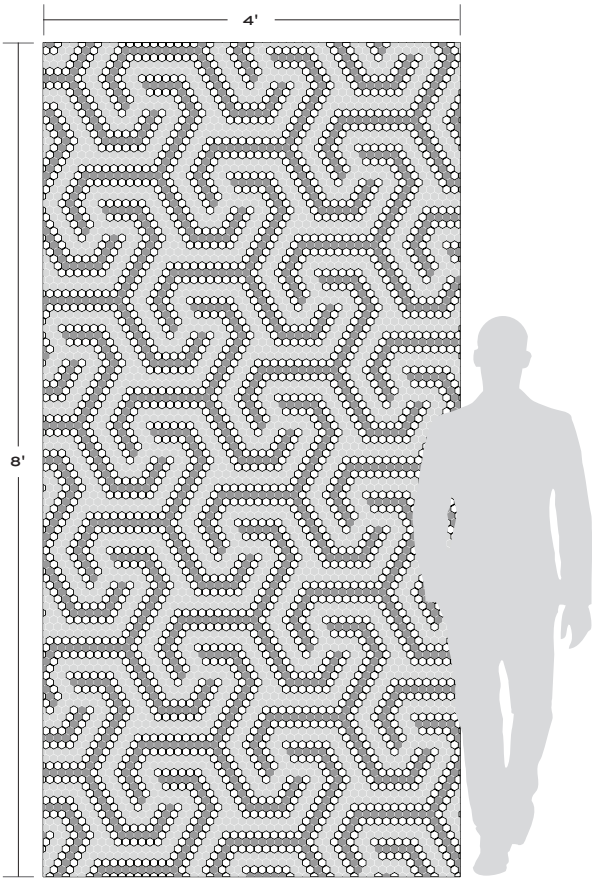


SWIRL 2CM MOSAIC

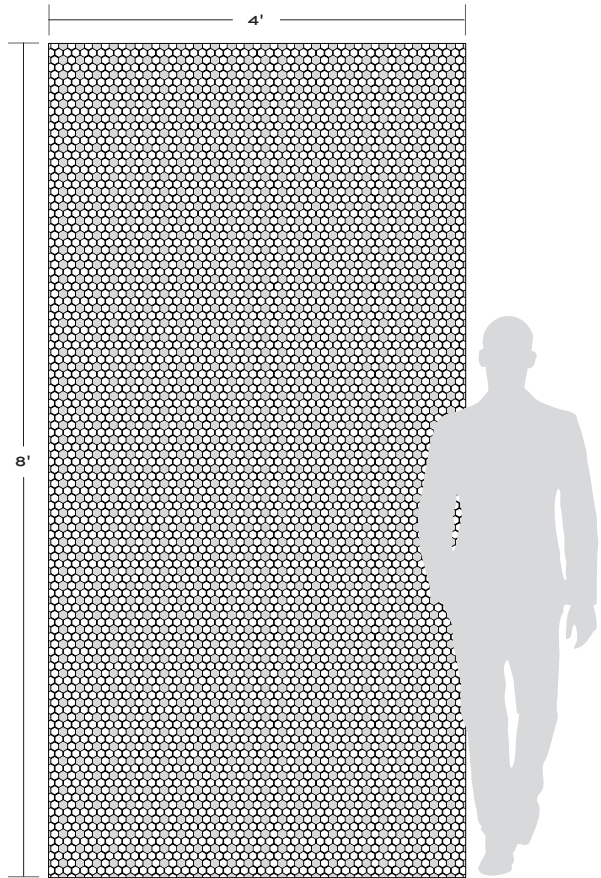

DOT 2CM MOSAIC

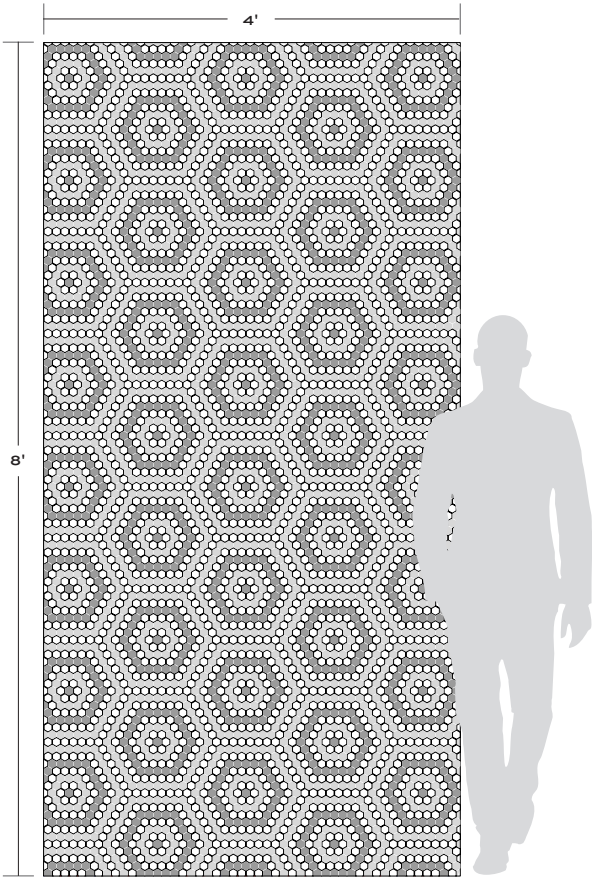

HEXAGON 2CM MOSAIC

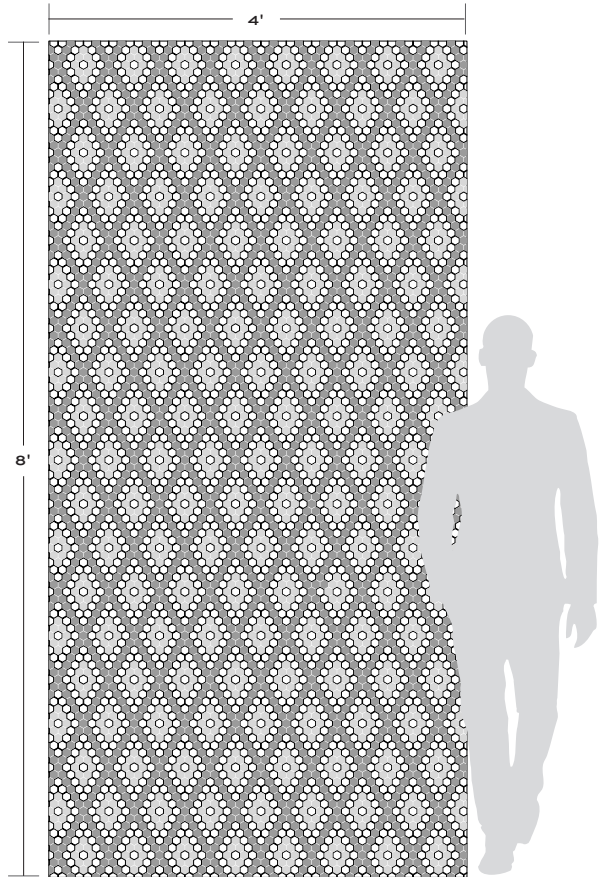

DIAMOND 2CM MOSAIC

RIVERSIDE DRIVE COLLECTION



SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.