


HUDSON COLLECTION

The inventive energy of New York—the city by the Hudson—is evoked in this collection of fresh geometric mosaics in white, grey, and black marbles. Hudson Check is a simple but sophisticated windowpane plaid, given accent by a single square “dot” of contrasting stone at each main intersection. Hudson Hex is unique, with square tesserae pieces in differing colors and orientation creating a hexagonal mosaic for a modern take on a traditional form. Hudson Key is inspired by the utterly classic motif—the Greek Key, as a mosaic liberated from the pattern’s traditional use as a border, perfect for an entire wall or floor.




PICTURED: HUDSON HEX BLACK


HUDSON COLLECTION

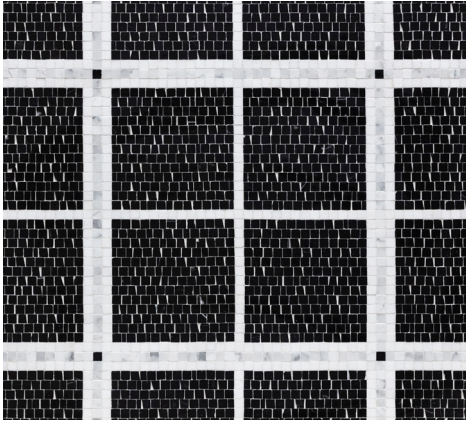


CHECK BLACK
China Black, Thassos, Statuary

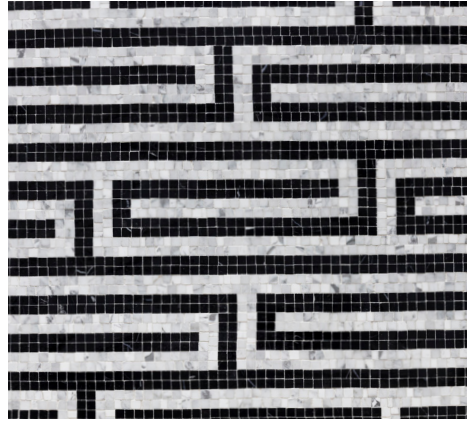

KEY BLACK
China Black, Statuary

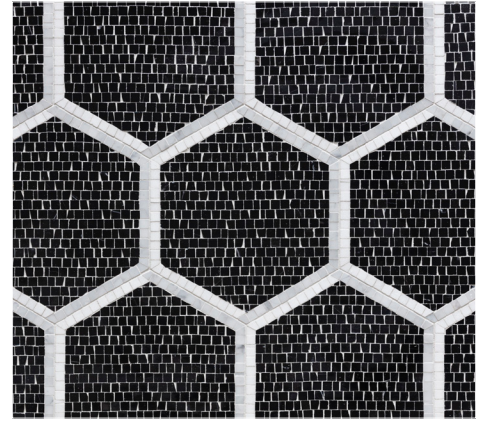

HEX BLACK
China Black, Thassos, Bianco Carrara

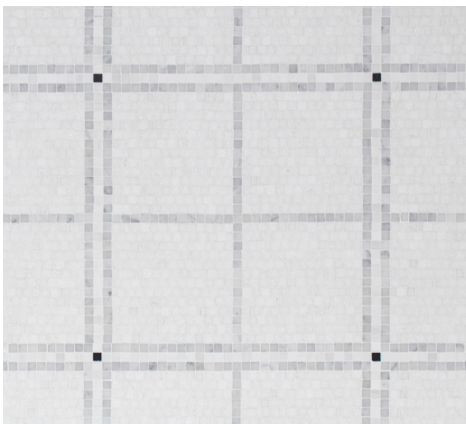

CHECK WHITE
Thassos, Bianco Carrara, Bianco Dolomiti, China Black



KEY WHITE
Bianco Carrara, Thassos



HEX WHITE
Bianco Carrara, Thassos, Bardiglio Nuvolato


APPLICATIONS									VARIATION		TAILORED TO CUSTOMIZATION	
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	V1 V2 V3 V4		CARPET CUTTING	
Commercial Light/ Medium	All	All ¹	Yes ²	No	Yes, non-freeze thaw ²	No	Yes	Yes	V1 V2 V3 V4		FIELD	FINISH
											MOSAIC	SADDLE
											VANITY TOP	WATERJET

INSTALLATION/MAINTENANCE										STONE MOSAIC	
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT		
Ardex X4 Tile & Stone Mortar ³	Ardex FG-C Microtec Unsanded ⁴	As established on sheets	Ardex 8+9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	TCNA Handbook ⁵	Maintain sheet orientation	Highly Recommended	11 13/16" x 11 3/4" x 3/8" (0.96 sf/unit)	6 7/8" x 7 15/16" x 3/8" (0.37 sf/unit)


NOTES			
¹ Except for Hex White - Conventional only ² Except for Hex White ³ Alternate Mortar - Mapei Ultraflex 2 or Mapei Adesilex P10 w/ Keraply Additive Hex White only - Ardex N23 Microtec Rapid Set or Mapei Granirapid 2-Part System ⁴ Alternate Grout - Mapei Ultr'acolor Plus FA Hex White only - Ardex FL Rapid Set Sanded, Mapei Flexcolor CQ or Mapei Keracolor Sanded ⁵ IMPORTANT: Proper installation will prevent darkening due to water accumulation behind the product. Follow TCNA guidelines to ensure proper installation.		23 3/8" x 18 7/8" x 3/8" (3.09 sf/unit) Mesh mounted interlocking sheets	

HUDSON COLLECTION


CHECK

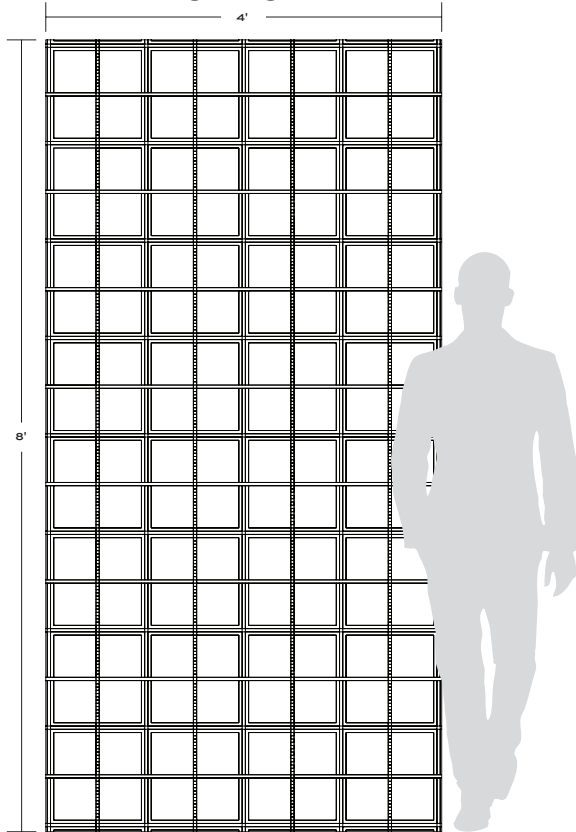

KEY

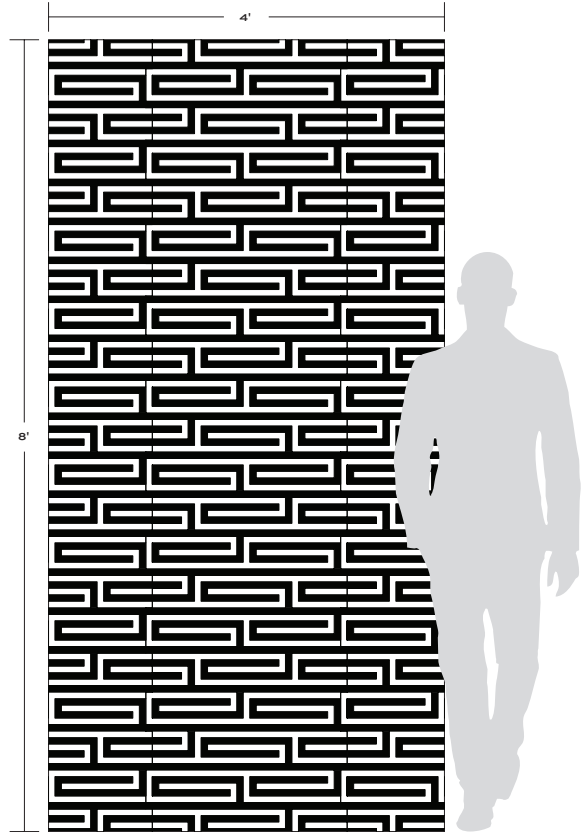

HEX

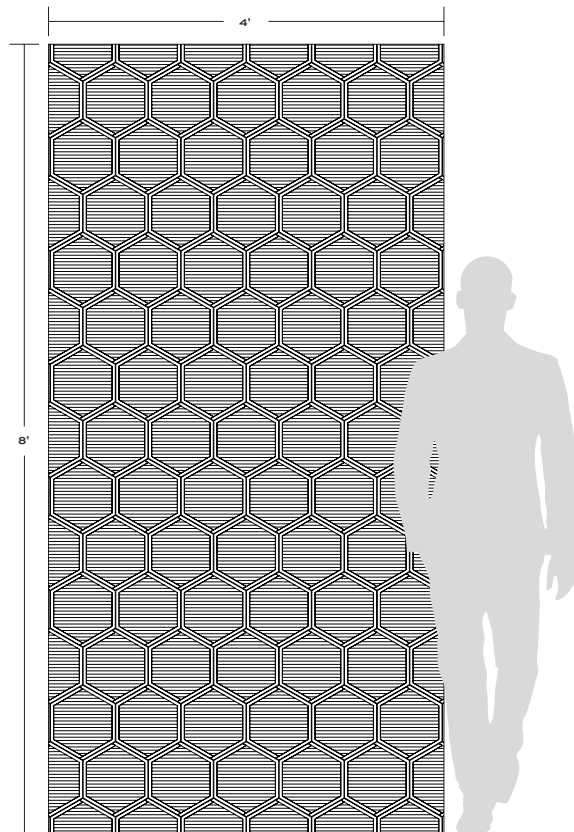

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.