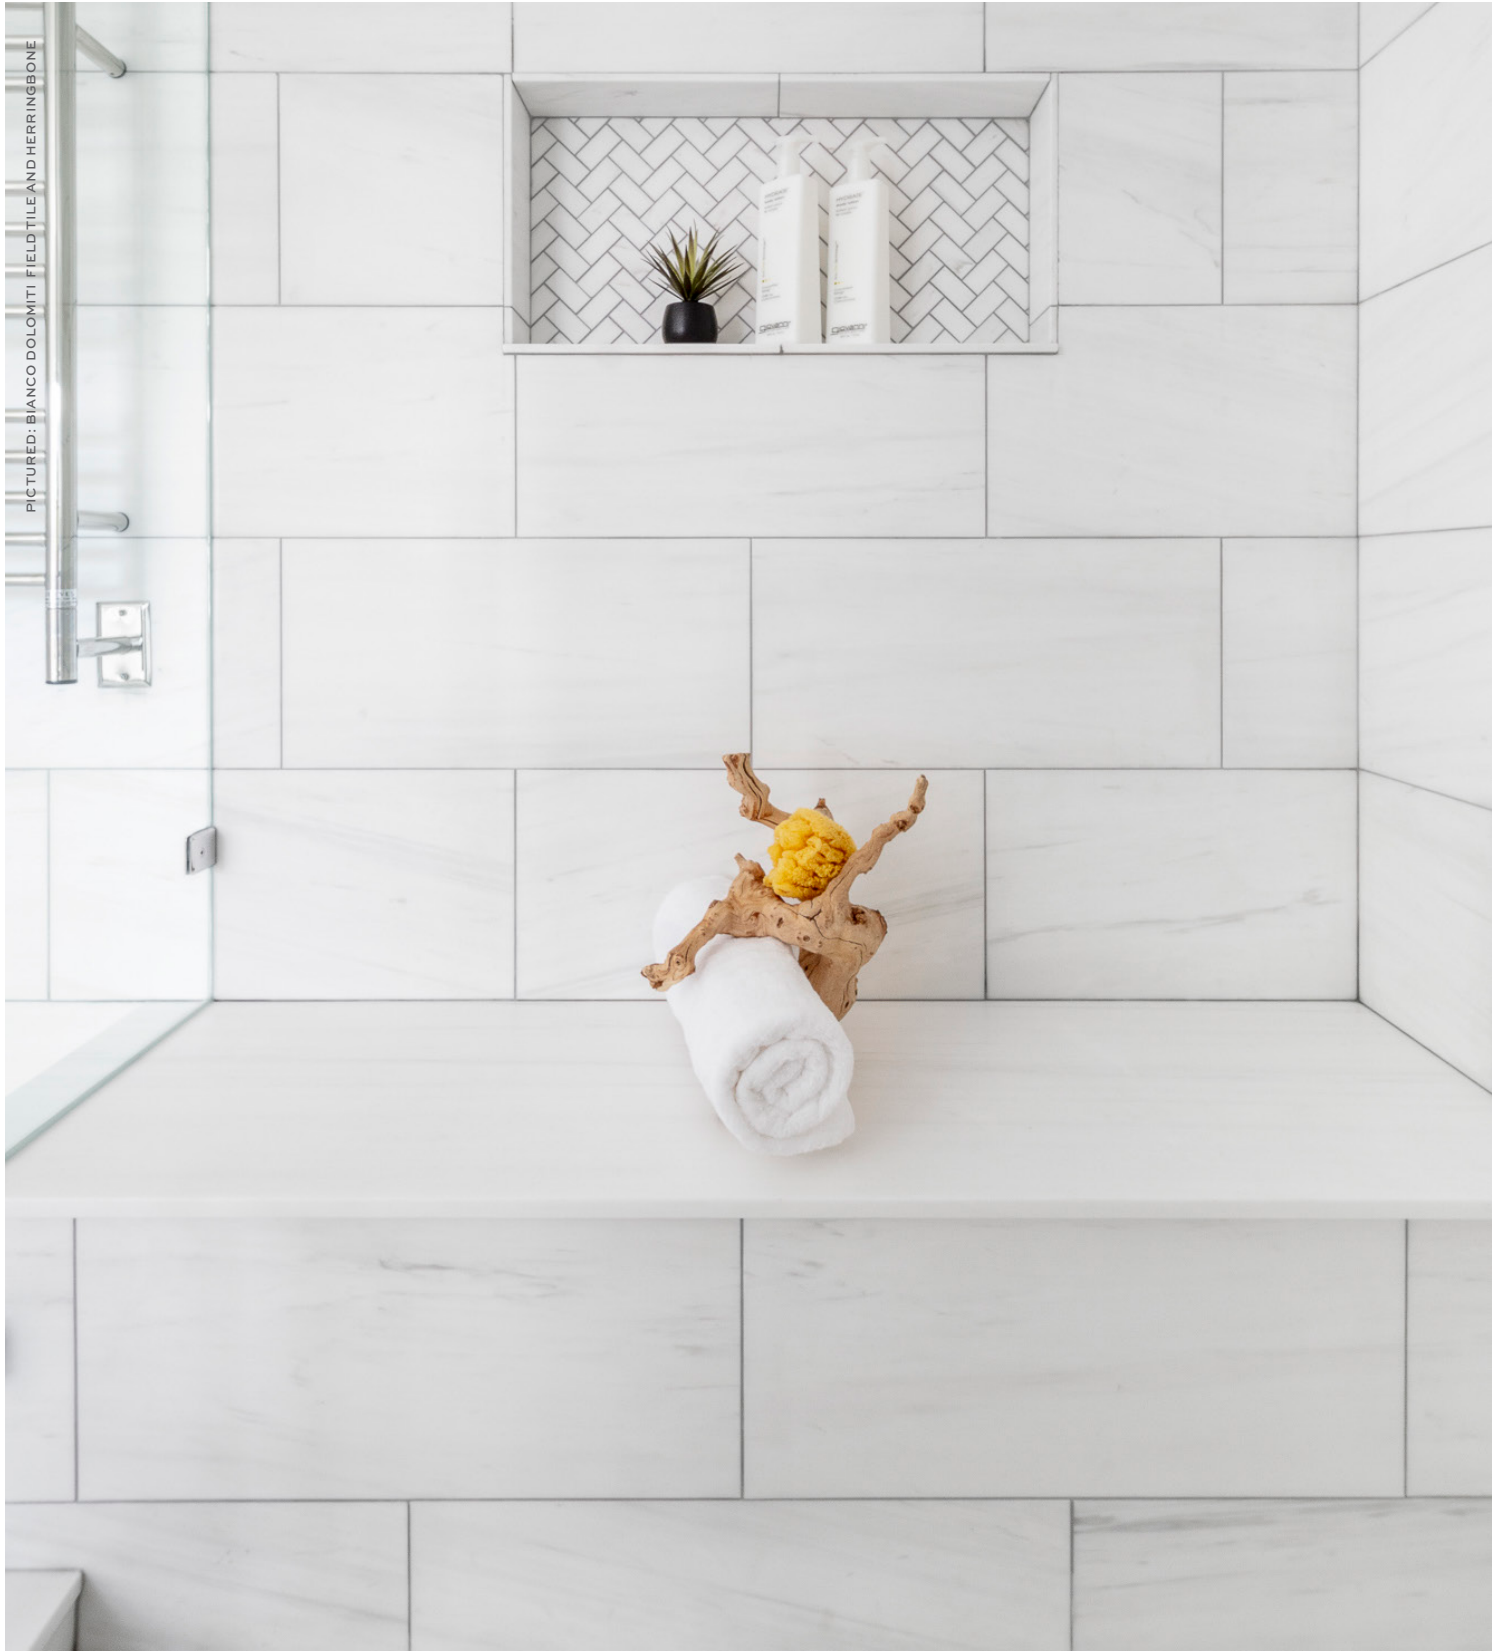


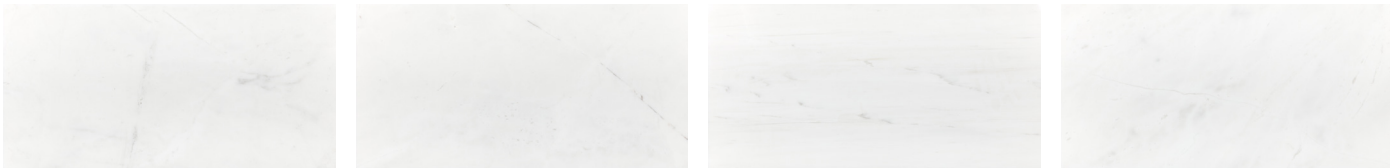

BIANCO DOLOMITI

A fine, milky-white marble from Turkey, Bianco Dolomiti is a classic Turkish marble from the upper echelon of white stones, with distinctive, smooth grey veining. Stocked in polished & honed field tiles, mosaics and 2cm slabs.



PICTURED: BIANCO DOLOMITI FIELD TILE AND HERRINGBONE

BIANCO DOLOMITI

COLOR RANGE									
									
									
FIELD	 4" Hexagon 4" x 4" x 3/8" Honed		 4" x 12" x 3/8" Polished & Honed Select		 12" x 12" x 3/8" Polished Select		 12" x 24" x 3/8" Polished Extra, Select & Standard Honed Select & Standard		
	 18" x 36" x 3/8" Polished Select		 24" x 24" x 3/8" Honed Select & Standard						
MOLDING	 Chelsea One 3/4" x 12" x 3/4" Polished		 Opus One 1/2" x 12" x 3/4" Polished						
	 Chelsea Two 1 1/4" x 12" x 3/4" Polished		 Opus Three 1 7/8" x 12" x 1/2" Polished						
	 FLATIRON 1" x 12" x 3/4" Polished		 Opus Five 4 7/8" x 12" x 3/8" Polished						
MOSAIC	 3/8" Straight Joint (1.00 sf) Polished		 1 1/4" (3cm) Broken Joint (1.00sf) Polished		 1 1/4" Hexagon (0.96 sf) Polished		 1 x 3 Chevron (0.82 sf) Polished		
	 Luxor (0.703 sf) Polished		 Xanadu Falls (2.83 sf) Polished		 Motor City Circles (0.49 sf) Polished		 3/4" (1cm) Broken Joint (1.00 sf) Honed		
APPLICATIONS									
INTERIOR FLOOR	INTERIOR WALL	SHOWER WALL	SHOWER FLOOR	EXTERIOR FLOOR	EXTERIOR WALL	POOL/ FOUNTAIN	COUNTER TOP	FIREPLACE SURROUND	
Light/Medium Traffic Commercial	All	Yes, Including Steam	Yes, in mosaic formats only	No	Yes, non-freeze thaw	No	Yes	Yes	
INSTALLATION/MAINTENANCE									
SETTING MATERIAL	GROUT	GROUT JOINT	MEMBRANE	CAULK	SEALER	CLEANER	INSTALLATION INSTRUCTIONS	LAYOUT	DRY LAYOUT
Ardex X77 Microtec Fiber Mortar ¹	Ardex FG-C Microtec Unsanded ²	See Notes Below ³	Ardex 8 +9	Ardex SX	AquaMix Sealer's Choice Gold	AquaMix Concentrated Stone & Tile Cleaner	See Notes Below ⁴	No	Partial ⁵
NOTES									
¹ Alternate mortar - Ardex X5 Medium Bed Mortar or Mapei Ultraflex LFT 4" Hexagon & 4" x 12" Mortar - Ardex X4 Tile & Stone Mortar, Mapei Ultraflex 2, Ardex N23 Microtec Rapid Set ² Alternate grout - Mapei Ultracolor Plus FA, Mapei Flexcolor CQ ³ 1/16" min. Mosaics - as established on sheets ⁴ For field tile and mosaics use TCNA Handbook, for slab use MIA DSDM. ⁵ Layout for color and vein selection before installation. A1 Select & A2 Standard options available for field tile only, not for mosaics. Extra: Clean white background with occasional linear grey veins or markings. Pinkish/Red veins would be rare in the extra selection. A1 Select: White background with grey veining which is primarily linear, but may shift to more angled patterns. Dark grey markings to be expected. Pinkish/Red veins may appear in corners or ends in approximately 1 out of 10 tiles. A2 Standard: Whitish background color sometimes with greyer overall tones with grey veining that is linear to non-directional. Occasional Pinkish/Red veins should be expected.									
AVAILABLE SLAB SIZES									
									
3/4" (2cm) Polished Select, Standard & Extra									

SETTING NATURAL STONE MOSAICS ON A SHOWER FLOOR WITH ARDEX 100% SOLIDS EPOXY ADHESIVE WHITE

ARDEX 100% Solids Epoxy Adhesive White is suitable for each of the following installation methods shown in the Shower Receptors section in the most current edition of TCNA Handbook for Ceramic, Glass, and Stone Tile Installation.

B414-24 Stone, B441-24 Stone, B415-24 Stone, B420-24 Stone,
B426-24 Stone, B431-24 Stone, B421-24 Stone, B422-24 Stone.

IMPORTANT NEXT STEPS:	IMPORTANT WATER CLEANUP STEPS
• Pour Part A (Resin) into Part B (Hardener) bucket and hand mix to achieve color blend. • Mix using a power mixer (approx. 650 RPM) for approx. 2 minutes. • Pour the entire mixture out of the bucket onto the floor or onto a scrape piece of tile. It is very important to get the entire mixture out of the bucket immediately. • Spread a thin layer of epoxy mortar with a flat trowel over a predetermined area of the shower floor. • Using a square notch trowel or a V-notch trowel, spread the epoxy mortar over the same predetermined shower floor area. • Next flatten out all trowel ridges with flat side of trowel striving to achieve 100% coverage over the predetermined shower floor area. • Place the interlocking mosaic sheets into mortar bed over the predetermined shower floor area for 100% coverage. • Tap down and level the mosaic sheets with a grout float over the predetermined area. • Allow mortar to set, harden, and cure.	• Wipe up any epoxy residue with sponges and clean water. • Note: No soap and no chemicals are needed. Just clean water. • Rinse sponges and change the water often. • Finally wipe with cool, clean water & clean sponges. • Use clean microfiber cloths for final wipe down.

Artistic Tile recommends sealing all natural stones before grouting.