



NOTE:

- Weight capacity is 100 lbs. per bracket
- Shelf projection is 18" MAX.
- Bracket spacing is 32" MAX.
- Must be installed into studs or blocking.

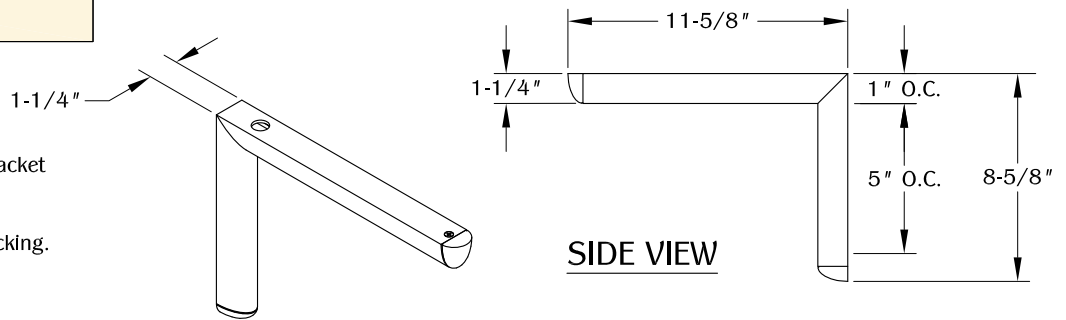


SIDE VIEW

1a Shelf or blocking installation

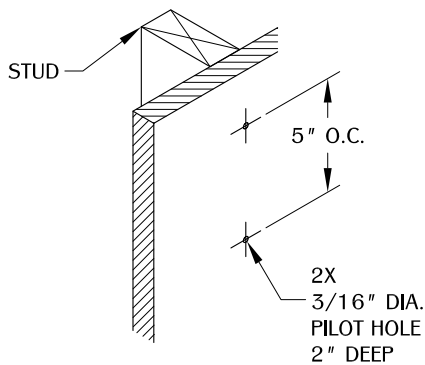


Determine the position and location of the part on the work surface. Must be installed into studs or blocking. Mark the mounting positions and drill pilot holes for the mounting hardware.

1b Countertop installation

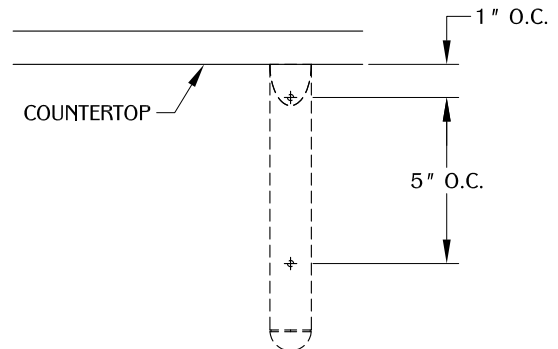


Determine the position and location of the part on the work surface. Must be installed into studs or blocking. Mark the mounting positions and drill pilot holes for the mounting hardware. Use 1" on center from the bottom of the countertop. The part must be installed before countertop installation.

2

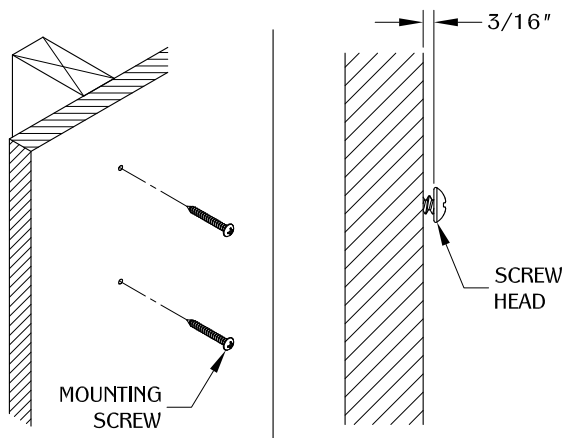


Install the (2) mounting screws. Make sure to have at least 3/16" gap from the work surface and screw head. (Note: The gap may be adjusted to 1/8" for a tight fit.)

3

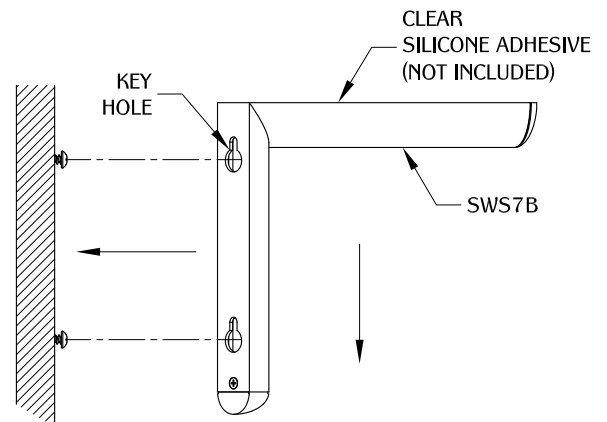

Install the SWS7B bracket by aligning the key holes to the screw head. Push down until screws are secured in place, check if bracket is secured and adjust screw depth if necessary. For added security, we recommend a clear horizontal adhesive strip.

TABLE OF CONTENTS:



..... 1X SWS7B



..... 2X 2"
No. 14 Pan head
Wood screw