



FIGURE 1.

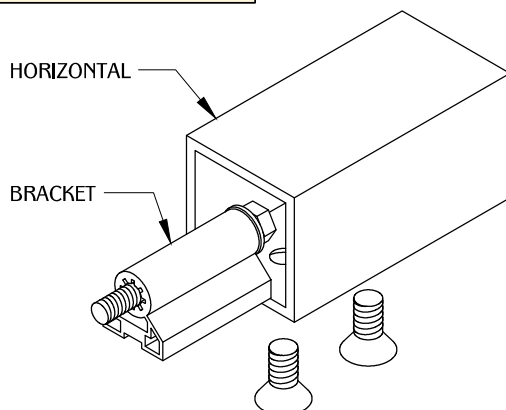

1. Separate Vertical and Horizontal parts.
Vertical parts have end caps.

2. Install bracket into horizontal piece with the two screws and tighten lightly.
(figure 1)

FIGURE 2.

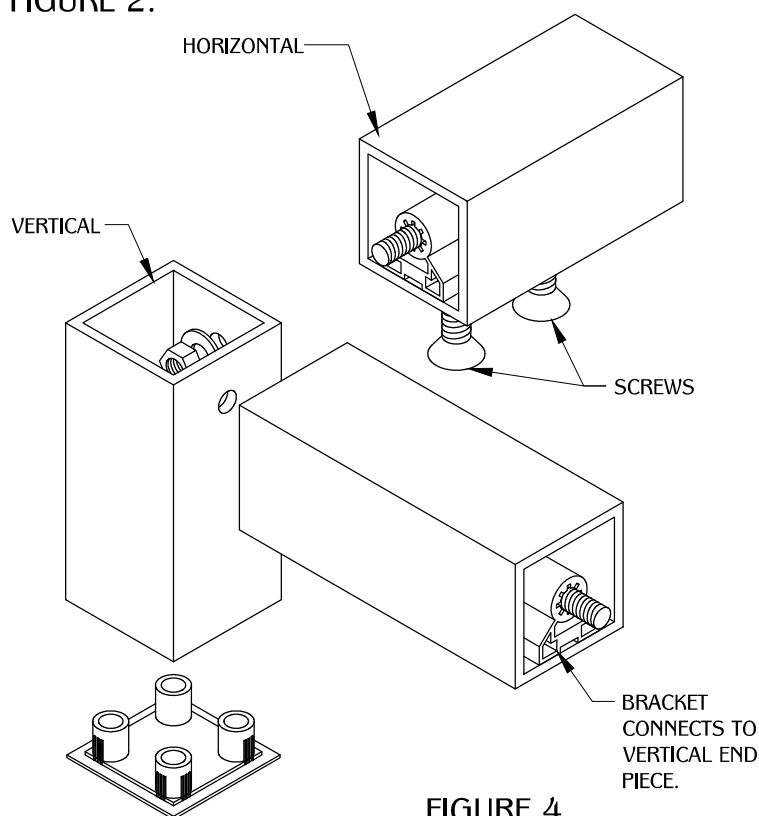

3. Insert into vertical leg and firmly tighten the nut while making sure parts are aligned.
(figure 2)

4. Flip end cap and place it on top of vertical leg to get the right height.
(figure 3)

5. Connect all corners the same way.
(figure 4)

6. Adjust all corners before tightening all screws.

7. Insert end caps.
(figure 4)

TLPAR/29

1st OPTION:

60" LENGTH x 24" WIDTH x 29" HEIGHT

TLPAR/34

2nd OPTION:

60" LENGTH x 24" WIDTH x 34" HEIGHT

FIGURE 3.


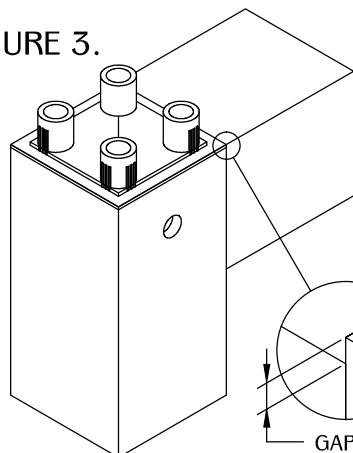


FIGURE 4.

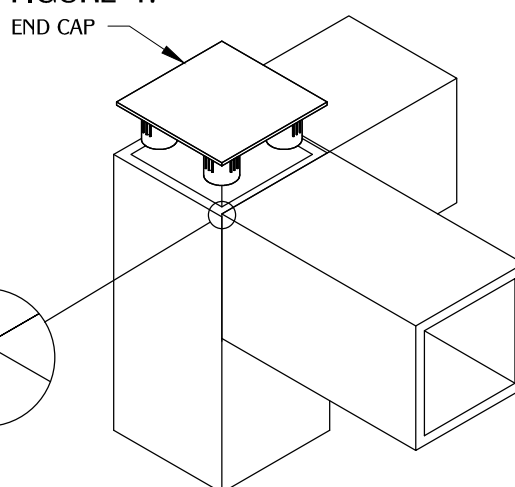

ENSURE YOU GET ENOUGH FREE SPACE
TO FIT THE CAP FLUSH