



FRONT VIEW

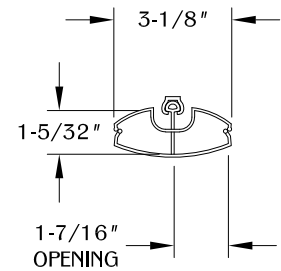


SIDE VIEW

1

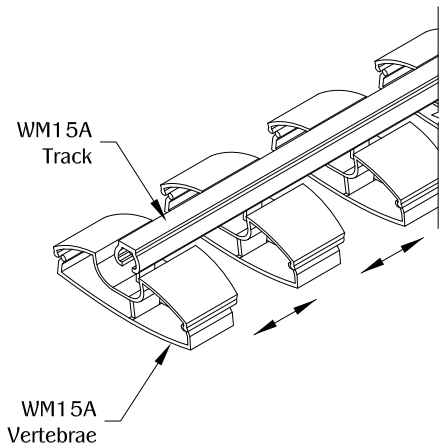


Evenly space the WM15A Vertebrae on the WM15A Track.

2

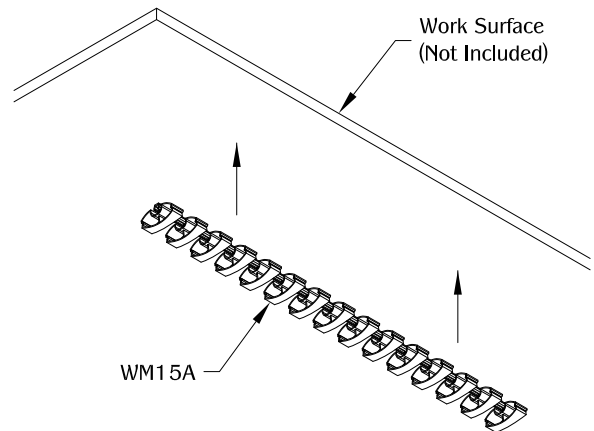


Determine the position and location of the WM15A on the work surface.

3

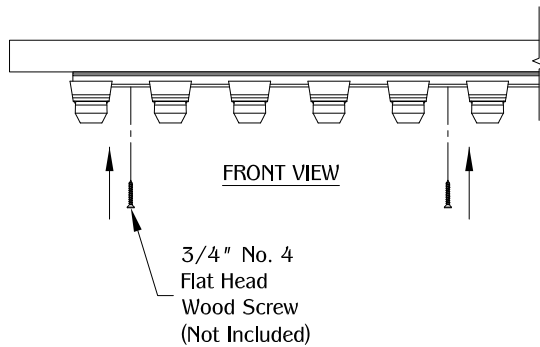

Secure the WM15A by using (4) 3/4" No. 4 flat head wood screws. Drill the screws directly into the WM15A Track and make sure the part is fully leveled onto the work surface.

4

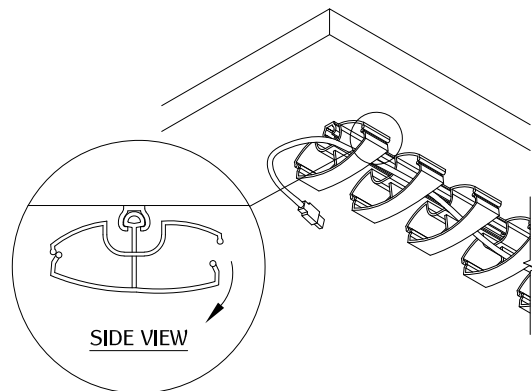

Place wires and cords into position by feeding them through the sides of the WM15A Vertebrae.