


PART #


WM16

310.318.2491 • 800.523.1269 • www.mockett.com


NOTE:
Custom length add an additional 1-5/8" to total height for every WM16V needed.

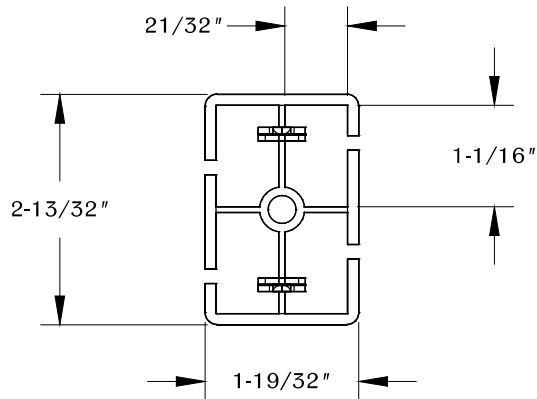


1

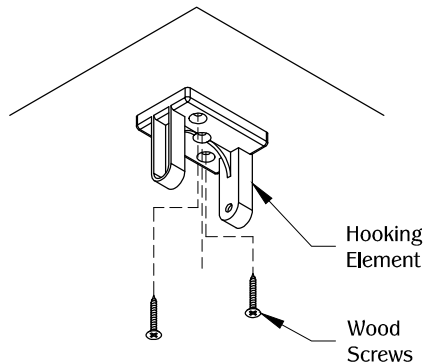

Use (2) self-tapping wood screws to the hooking element of the WM16 at the desired placement.

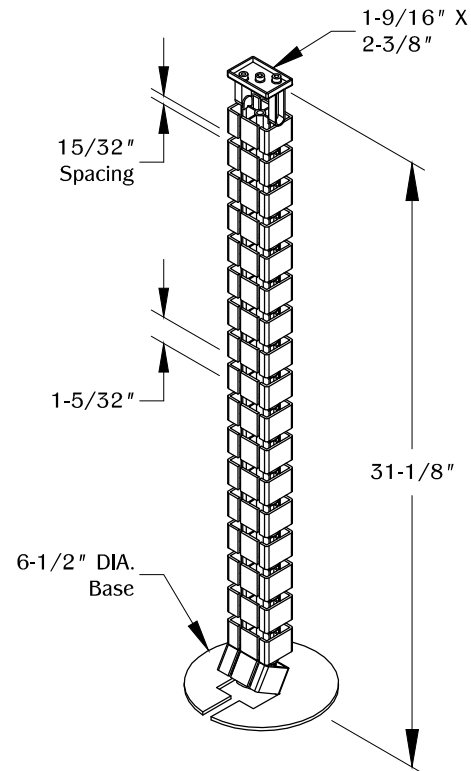


2

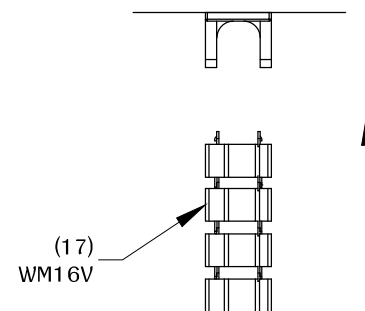


Connect (17) WM16V to hooking element.
(Note: There are 18 total WM16V connected with metal base.)

3

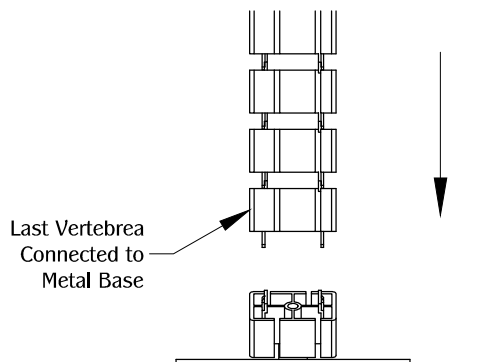

Connect metal base to the end of the WM16V.

TABLE OF CONTENTS:

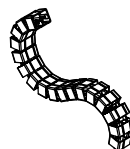

.....18 X WM16V



.....2 X Self-Tapping Wood Screws



.....WM16 Metal Base



.....WM16 Hooking Element