

WM49 Series


PROPRIETARY AND CONFIDENTIAL.

ALL DIMENSIONS HAVE A $\pm 1/16"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

SPECIFICATIONS

- Weight capacity is 0.3 lbs. per foot.
- Recommended table thickness is 1" MIN.


TABLE OF CONTENTS

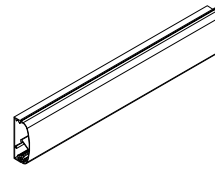

..... 1X WM49



..... 2-4 X 1" No. 8 Pan-head
Self-tapping Screw
(Quantity may vary depending on length.)





..... 1X 1-1/2" X 5" X 1/16"
Connector Plate




..... 2-4 X Drywall Anchor
(Quantity may vary depending on length.)

	(A)	(B)
WM49-1	12"	2
WM49-2	24"	2
WM49-3	36"	3
WM49-4	48"	3
WM49-5	60"	4
WM49-6	72"	4

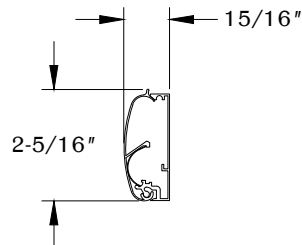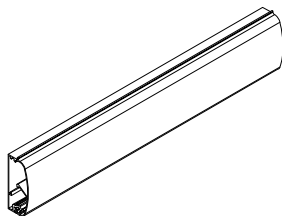


SIDE VIEW

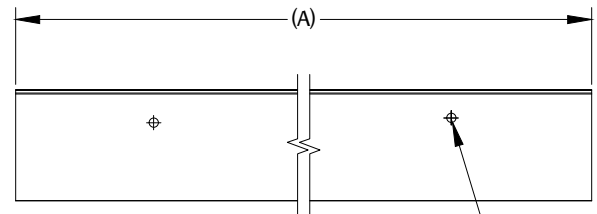

(B)
3/16" DIA.
HOLE


REAR VIEW

1a Wall Installation

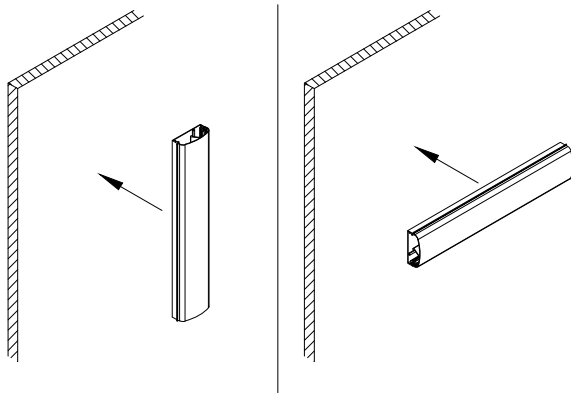

Determine the vertical (or horizontal) position and location of the part on your work surface. Allow enough clearance for part function. Level and align the part on the work surface.

2a

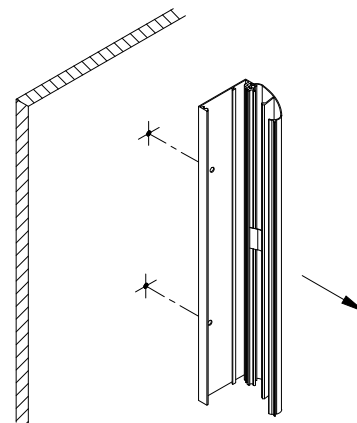


Open the WM49 and mark the mounting holes on the work surface. (Note: Skip Step 3a & Step 4a for non-drywall installation.)

WM49 Series

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A $\pm 1/16"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

3a

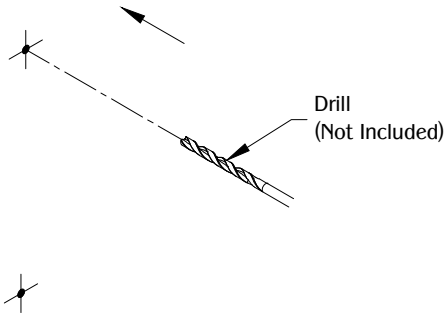


Drill the $3/16"$ diameter pilot holes on the marked mounting position.

4a

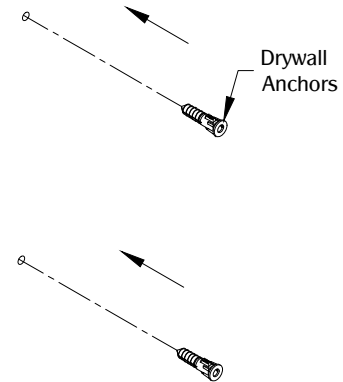


Install drywall anchors into the pilot holes.

5a

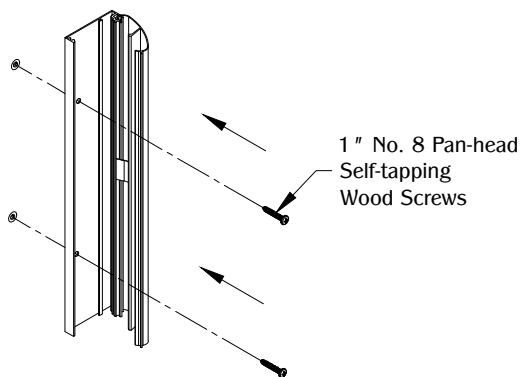


Align the WM49 to the drywall anchors. Secure with the 1" No. 8 pan-head self-tapping screws.

6a

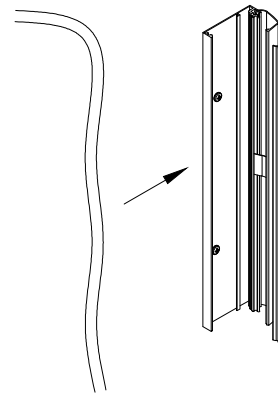


Feed the cords into the WM49 and close the cover.

7a

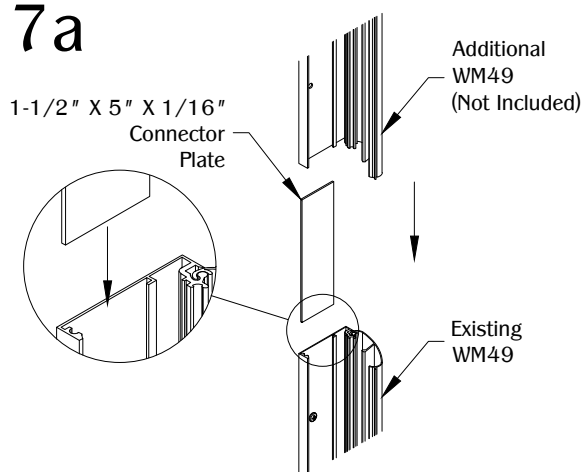

Use the 1-1/2" X 5" X 1/16" connector plate to join additional WM49 to any existing WM49. Follow STEP 2a to STEP 6a for recommended installation on new addition.

1b Undermount Installation

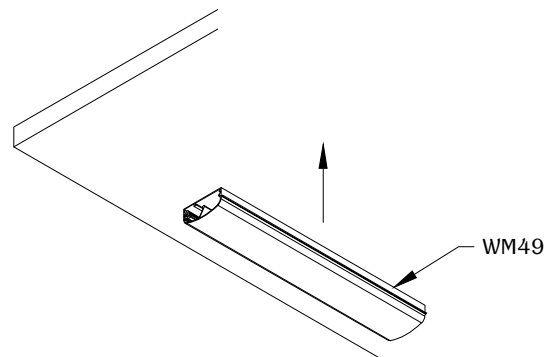


Determine the position and location of the part under the work surface. Allow enough clearance for part function. Level and align the part on the work surface.

WM49 Series

PROPRIETARY AND CONFIDENTIAL.


ALL DIMENSIONS HAVE A $\pm 1/16"$ TOLERANCE UNLESS OTHERWISE SPECIFIED. WE DO NOT RECOMMEND DRILLING OR CUTTING ANY HOLES BEFORE RECEIVING A PRODUCT OR A PRODUCT SAMPLE.

2b

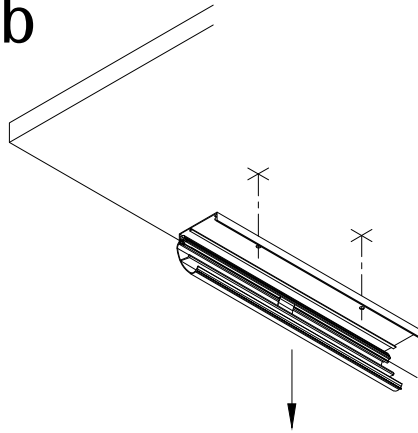


Open the WM49 cover and mark the mounting holes under the work surface.

4b

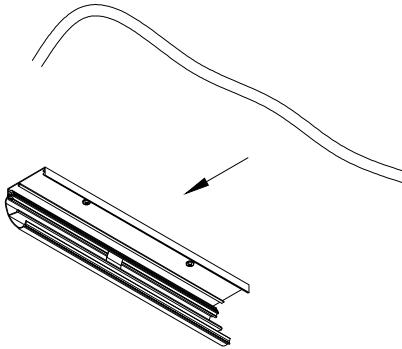


Feed the cords into the WM49 and close the cover.

3b

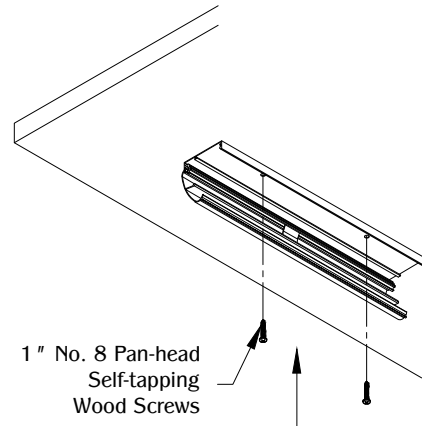

Secure with the 1" No. 8 pan-head self-tapping screws.
(Note: Use appropriate mounting hardware type and length depending on the material and thickness of the work surface.)

5b

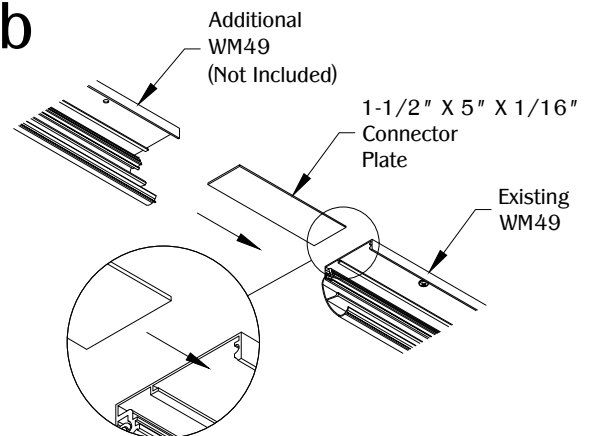

Use the 1-1/2" X 5" X 1/16" connector plate to join additional WM49 to any existing WM49. Follow STEP 2b to STEP 4b for recommended installation on new addition.