



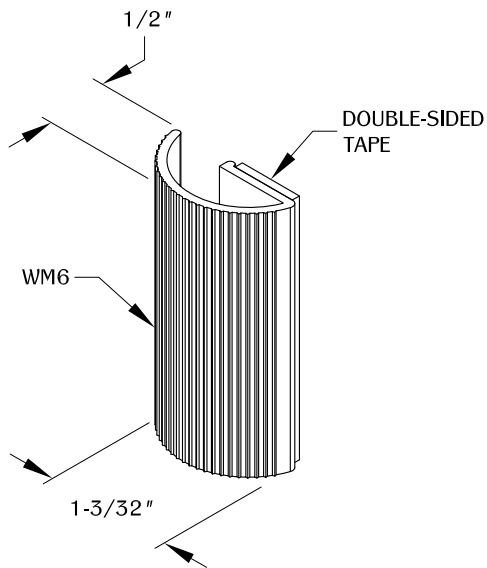


1

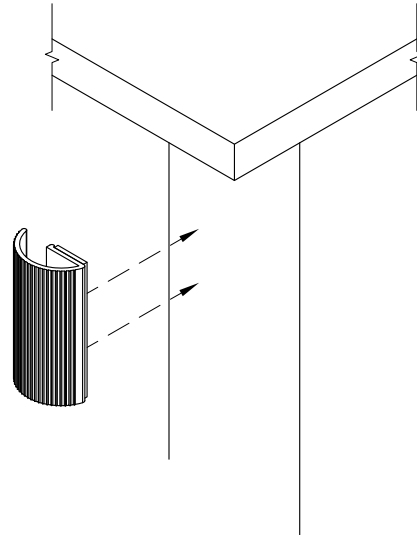


Determine the position and location on the table leg or work surface in which to apply the WM6.

2

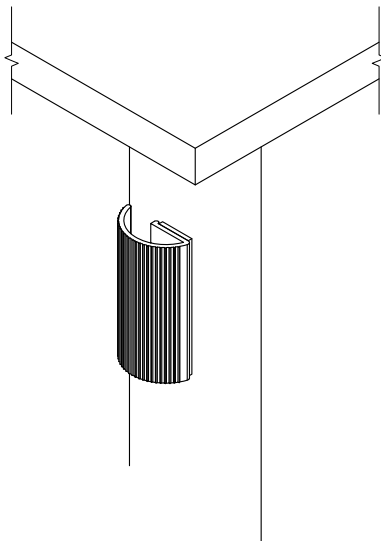


Apply pressure to the WM6 when placing against the table leg or work surface until it is held into position by the adhesive.

3

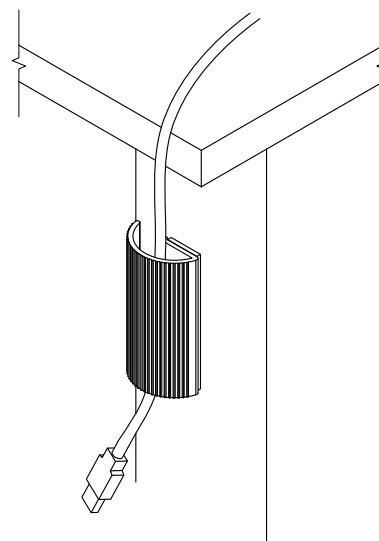

Place wires into position by slipping them through the small opening on side of the WM6.

TABLE OF CONTENTS:

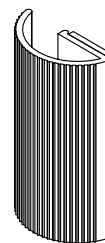

..... WM6