



TOP VIEW

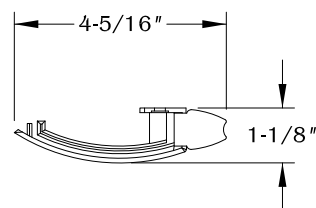


SIDE VIEW

1

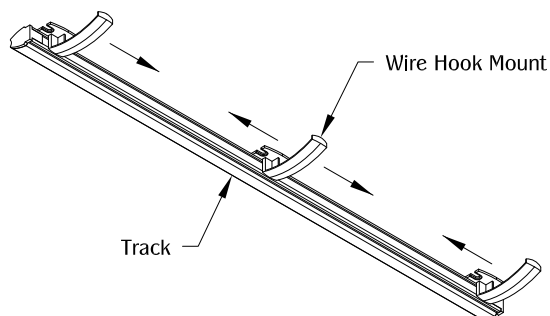


Make sure the wire hook mounts are evenly spaced on the track. Adjust by sliding wire hook mounts if needed.

2

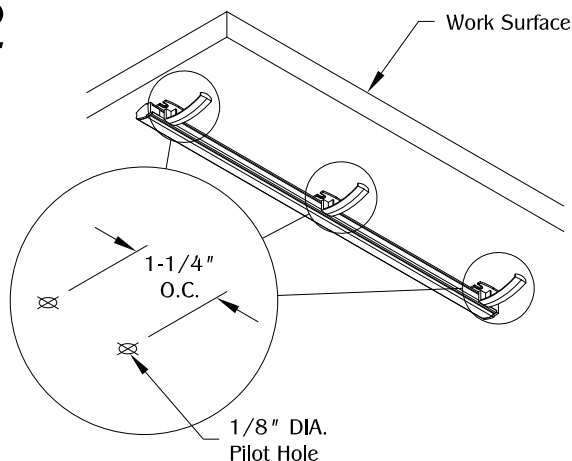



Determine the position and location of the wire manager under the work surface. Use the wire hook mounts as a guide to mark and drill pilot holes.

3

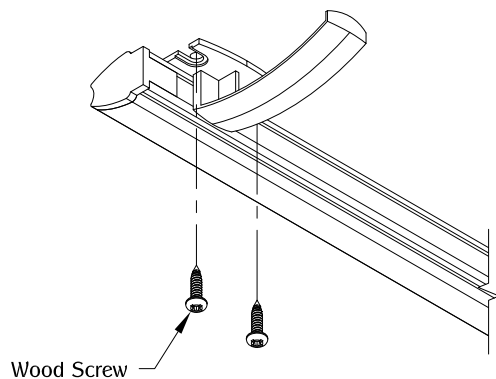


Align wire manager with pilot holes and secure part to work surface by using (6) wood screws.

TABLE OF CONTENTS:

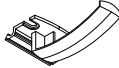
	1X Track
	3X Wire Hook Mounts
	7X Wire Flaps
	2X End Caps
	6X 5/8" #10 Pan-Head Wood Screws

4

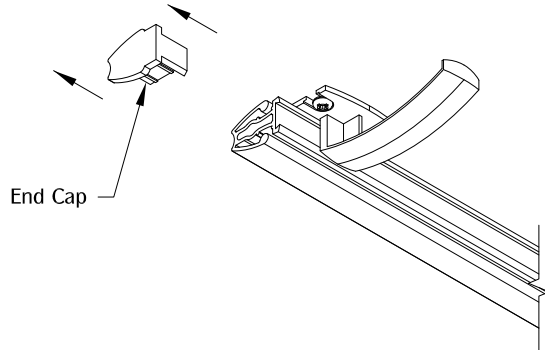


Remove the end caps from the track.

5

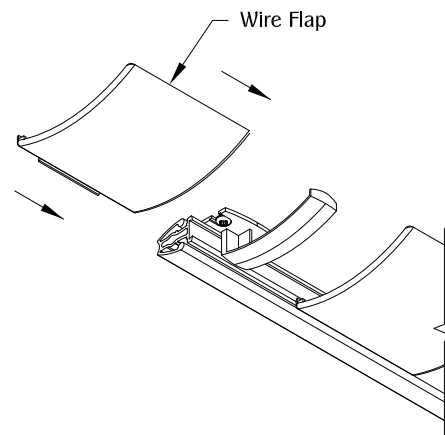

Slide the wire flaps into the open slot on the track.

6

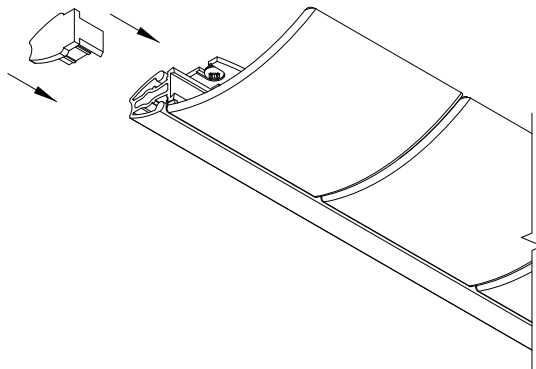

Reattach the end caps to the track.