
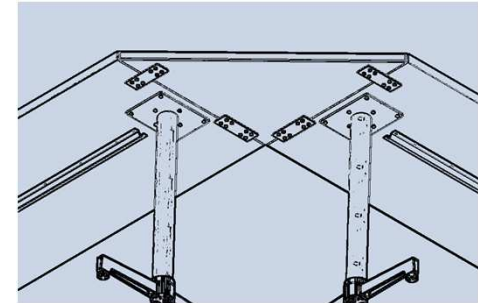



LOK TRAINING TABLES

Assembly Instruction

Wedge and Quarter Round linking tables

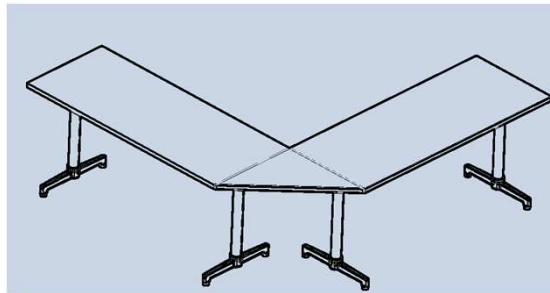

Recommended tools

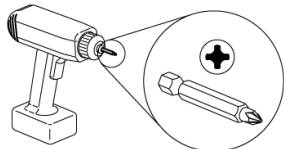

#2 Phillips Head



1/8" Drill Bit



Measuring Tape

1. Arrange flat brackets per Diagram A. Attach brackets to top using (16) #8x7/8" Panhead screws.
2. Attach between the ends of two rectangular training tables using (16) #8x7/8" Panhead screws.

Hardware enclosed



#8 x 7/8"
Panhead Screws
Qty= 32



Flat Bracket
2" x 5-1/2"
Qty= 4

NOTE: all screws provided must be installed for proper installation and compliance with product warranty.

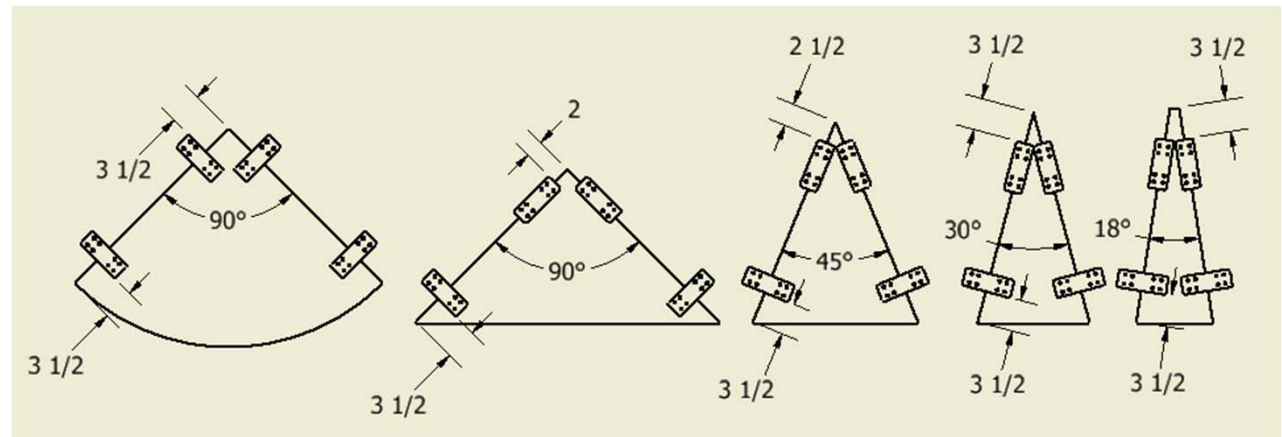


Diagram A