

Introduction

The purpose of this installation guide is to establish 3M-recommended procedures for installing the following “Product(s)”:

- 3M™ DI-NOC™ Architectural Finishes
- 3M™ DI-NOC™ Architectural Matte Finishes MT Series (“DI-NOC™ MT Series”)
- 3M™ DI-NOC™ Architectural Finishes EXR Series for Exterior (“DI-NOC™ EXR Series”)
- 3M™ DI-NOC™ Architectural Finishes E-Series RC Recycled Content* Film
- 3M™ DI-NOC™ Architectural Finishes E-Series PO Polyolefin Film
- 3M™ DI-NOC™ Architectural Finishes TIL Series for Tile (“DI-NOC™ EXR Series”)
- 3M™ DI-NOC™ Architectural Finishes Anti-Graffiti Series for Rail Interior
- 3M™ DI-NOC™ Whiteboard Film WH-111
- 3M™ DI-NOC™ Projection Screen Whiteboard Film PWF-500

NOTE

Please refer to the individual technical data sheets for additional information.

Table of Contents

Application Surfaces	1
Glossary of Terms	1
Installation Tools and Supplies	2
Adhesion	2
3M Adhesion Test	4
3M™ Enhanced Adhesion Cleaning Method	7
Surface and Work Area Preparation	8
Installation	9
Additional Recommendations by Product Series	13
Cleaning and Maintenance	16
Removal	16
Troubleshooting	17
Health and Safety	17
Warranty Information	18
Worksheet for Walls	19
3M Measured Reference Guide for Adhesion	20

Application Surfaces

The Products can be applied to many types of application surfaces. See [“Adhesion Compatibility with Application Surfaces” on page 3](#).

Glossary of Terms

Application Surface: The actual surface to which a Product is applied. This may be a bare application surface or a finish on an application surface, such as paint, varnish, or laminate.

Porosity: The amount of void compared to solid material in an application surface. Product may appear to adhere well initially to some porous application surfaces, but adhesion decreases significantly over time. Apply an appropriate product to seal porous surfaces.

Sealer: A coating applied to an application surface to seal a porous surface.

Below are some terms that describe the surface’s tactile feel, which has a significant effect on Product choice, ease of application, and adhesion. A very smooth application surface will have the best Product adhesion and coverage. For rough application surfaces, consider using a Product with more visual design and/or embossed texture.

- **Very smooth:** No surface variation, such as glass. Allows for the easiest Product application.
- **Fairly smooth:** Little surface texture, such as painted wallboard. Allows for easy Product application and good adhesion, but texture may show through some Products. A Level 5 Gypsum Board Finish (ASTM C840) is an example of a “fairly smooth” surface.

* E-Series RC Recycled Content Film has a base film layer made with 80% post-consumer recycled polyester and a colored layer made with 20% scallop shell powder as a bio-based filler.

- **Rough:** Has obvious visual and tactile surface variations, such as concrete block, brick, textured wallpaper, etc. Product may not adhere well due to the adhesive not having full contact with the surface. In addition, the surface's texture will show through almost all Products. See [“Adhesion” on page 2](#) and [“Surface and Work Area Preparation” on page 8](#) for instructions on rough application surfaces.
- **Non-compatible Application Surfaces**
 - Brass, copper and other corrosion-susceptible metals
 - Non-sealed concrete and stone
 - Non-sealed drywall, including skim-coat
 - Other porous substrates

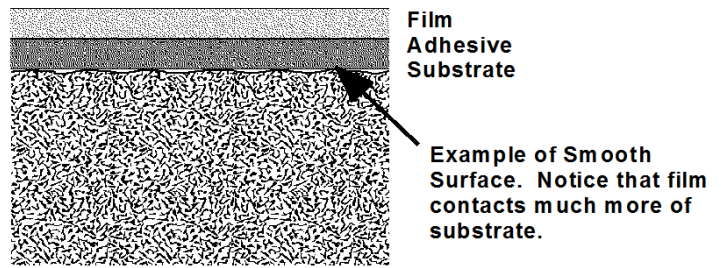


Figure 1. Examples of Film Contact on Smooth Surfaces

Installation Tools and Supplies

- 3M™ Hand Applicator PA-1 (Blue or Gold) (optionally apply the loop side of 3M™ Hook and Loop Tape or felt to reduce surface friction during application)
- Razor blade knife with stainless steel replacement break-away blades
- An appropriate container for holding discarded cutting blades or tools
- Liner cutting tool (i.e. Seam Buster tool)
- Steel ruler with nick-free edges
- Scotch® Masking Tape
- 3M™ Air Release Tool 391X
- Measuring tape
- Adhesion promoter and brush
- Industrial heat gun capable of attaining and sustaining 100°F to 500°F (38°C to 260°C) or equivalent equipment
- Clean, lint-free cloths
- 70% isopropyl alcohol (IPA) solution
- 3M™ Scotch-Brite™ Hand Pad
- Sand paper
- Soft-bristle brush

Adhesion

Initial and Final Adhesion

An adhesive-backed Product will have both initial and final adhesion. Adhesion will vary depending on the surface type and texture, installation conditions and techniques, and Product exposure conditions, any of which can prevent a Product from achieving a full bond to the application surface.

- Initial adhesion is the bond needed to hold the Product in place during installation. 800 grams of adhesion is recommended when tested using a spring scale per the 3M Adhesion Test section. Good initial adhesion requires a substantial portion of the adhesive to be in contact with the application surface.
- Final adhesion, or maximum bond, is achieved 24 to 48 hours after Product application. Good final adhesion requires a suitable application surface with an optimal surface, correct Product installation techniques, and Product exposure conditions within those specified for the Product.

Adhesion Considerations

- An adhesion promoter may aid in Product adhesion. See the “Adhesion Promoters” section below.
- If Product is stretched during application, it may shrink later, which decreases adhesion. Using an adhesion promoter may minimize shrinkage.

Adhesion Promoters

Using an adhesion promoter can significantly increase a Product's adhesion. When considering using an adhesion promoter users should understand the Product will be more difficult to reposition on the surface due to enhanced adhesion, and Product removal will be more difficult and may cause additional damage to the substrate.

Using Adhesion Promoter

- Use of an adhesion promoter is recommended at Product overlaps, ends, corners, edges, or around fixtures. It should also be used wherever the Product is stretched.
- Adhesion promoters are often not needed on flat or high energy application surfaces, such as metal or glass.
- Allow adhesion promoters to dry per manufacturer's instructions.
 - Allow water-based adhesion promoters to dry at least one hour before Product installation.
 - Allow solvent-based adhesion promoters to dry at least 5 minutes before Product installation.

Adhesion Promoter Properties

The following table contains general properties of adhesion promoters and general application surface types where useful.

Adhesion Promoter Properties	3M™ Water-based Adhesion Promoter WP-2000*	3M™ Tape Primer 94 (Solvent-based)
Type	Synthetic rubber	Acrylic
Container size	3.75 liter	Multiple sizes
Usage	Optional dilution with a maximum of four parts water	Do NOT dilute
Coverage	135 to 270 sq. ft./gal. (3.3 to 6.6 sq. meters/liter)	600 sq. ft./gal. (14.7 sq. meters/liter)
Color	Blue	Clear light yellow - clear dark orange
Solids	48%	6%
Viscosity	2400 cps (mPa-s)	1 to 10 cps (mPa-s)
Compatible Application Surfaces	• MDF (w/sealer) • Gypsum board (w/ sealer) • Previously applied 3M™ DI-NOC™ Finishes • Metals • Plastics	• MDF (w/sealer) • Gypsum board (w/ sealer) • Previously applied 3M™ DI-NOC™ Finishes • Metals • Plastics

*Product availability varies by region. Contact a local sales representative or application engineer for details.

Adhesion Compatibility with Application Surfaces

The chemistry of paints has been changing over the years to drive down the level of volatile organic compounds (VOCs) due to both sustainability efforts and regulatory requirements. These new paint formulations have changed how the painted surface interacts with the adhesive on the Product, affecting its ability to adhere to the paint.

Because paint formulations are protected trade secrets, it is difficult for film manufacturers to understand how adhesives interact with these paints. Products may perform well on one paint and poorly on another. However, by using the new 3M Enhanced Adhesion Cleaning Method and the 3M Adhesion Test, users can quickly and easily adhere almost any Product to nearly any paint or surface finish.

The following table contains peel adhesion information for the Product peeled from various surfaces. A number of surfaces have acceptable adhesion without using any adhesion promoter. Examples of increased adhesion with adhesion promoters on certain surfaces are presented. Surfaces vary widely, so adhesion should be assessed on each application surface. Some surfaces are porous and must be sealed before applying film to prevent outgassing of the surface over time.

3M™ DI-NOC™ Adhesion Compatibility with Application Surfaces

Application Surface		Adhesion Promoter		
		NO ADHESION PROMOTER lb./in. (N/25mm)	3M™ Water-based Adhesion Promoter WP-2000 ¹ lb./in. (N/25mm)	3M™ Tape Primer 94 (solvent-based) lb./in. (N/25mm)
Wood	MDF (w/ sealer)	● 2 (8) ⁴	● 11 (51)	● 4 (18)
	Painted MDF	● 4 (20)	● 12 (52)	● 7 (31)
Boards	Gypsum Board (w/skim coat & sealer)	● 2 (8) ⁵	● 8 (35)	● 4 (19)
Metals	Aluminum	● 11 (47)	● 11 (48)	● 11 (47)
	Anodized Aluminum	● 5 (23)	● 13 (56)	● 11 (49)
	Stainless Steel	● 6 (26)	● 13 (56)	● 6 (28)
Glass	Glass	● 6 (26)	● 13 (58)	● 6 (26)
Plastics ²	ABS	● 6 (28)	● 13 (56)	● 10 (44)
	Acrylic	● 5 (22)	● 12 (54)	● 10 (43)
	Polyester (PETG)	● 7 (29)	● 11 (51)	● 10 (45)
	Polypropylene	○ 1 (2)	● 4 (17)	● 4 (20)
	Polyethylene	○ 1 (3)	● 5 (21)	○ 1 (3)
	Polycarbonate	● 6 (28)	● 12 (53)	● 10 (44)
	3M™ DI-NOC™ Film	● 5 (24) ³	● 11 (49)	● 9 (42)

Test specimens were applied to the application surface and conditioned at 68°F (20°C) for 48 hours, then peel tested at a 180 degree angle at a tensile speed of 12 in. (300mm) per minute. 3M™ Water-based Adhesion Promoter WP-2000 undiluted for testing

- Acceptable adhesion
- Adhesion failure

¹ Product availability varies by region. Contact a local sales representative or application engineer for details.

² Bubbles may appear under film due to outgassing if the plastic application surface is not fully cured before application.

³ If the Product is wrapped and overlapped around edges, use of an adhesion promoter is highly recommended due to additional stress from wrapping the Product.

⁴ The sealer was wiped with isopropyl alcohol to improve adhesion. Adhesion was tested after 15 minutes using a spring scale per the 3M Adhesion Test and passed at 800-1000 g/in.

3M Adhesion Test

This test is designed to show the initial adhesion capability of a Product on a smooth indoor wall cleaned according to 3M's recommendations.

Product applied to contaminated walls, or walls exhibiting visible signs of peeling, lifting, bubbling, or dampness are likely to fail. The results of 3M Adhesion Tests will help determine if the wall is accurately prepared for 3M™ DI-NOC™ Architectural Finishes installation.

Paint that has not fully cured may continue to outgas. Product applied over paint that has not fully cured may develop air bubbles over time.

Before Doing the Test

1. Review and use the "Worksheet for Walls" on page 19.
2. Understand the types of wall surfaces and the variables that influence adhesion.
3. Test adhesion for three samples from each Product considered for each wall that will receive the Product and compare the results.

NOTE

3M is NOT responsible for the results of the Product installation.

Test Considerations

- Perform the adhesion tests in an inconspicuous area of the same wall on which the actual job will occur.
- Test the Product on each wall where the Product will be applied. While one wall may look the same as another in color and gloss, they may have been painted at different times and with different paint, affecting adhesion. Performing the test on a different wall/paint than that which will be used in the job will not provide the adhesion values and information necessary to make an accurate evaluation.

Limitations of Test and Cleaning Method

This test cannot detect problems with pre-existing variations in the wall or poor paint-to-wall bonds. Such problems may result in poor adhesion as well as wall damage upon attempted removal of the Product.

Adhesion Test Tools and Supplies

- Spring scale
 - 0 to 1000 grams, part number 8003-MN
 - 0 to 2000 grams, part number 8004-MA
- Isopropyl alcohol
- Lint free cloths
- 3M™ Rivet Brush Applicator, RBA-1
- Copy or cut out the [“3M Measured Reference Guide for Adhesion” on page 20](#). This will be used during the test to help you gauge how fast to pull the Product strip.
- Hole punch
- Strips of each Product to be tested

Prepare the Product Test Strips

1. Cut three, 1 in. by 10 in. (2.5 cm by 25 cm) strips of each Product to be tested for each wall to be tested.
2. Note the Product name or number on each test strip and on the Worksheet for Walls.
3. Remove about 2 in. (5 cm) of liner from each strip and fold the exposed adhesive back on to itself to make a tab.
4. Punch a hole in the tab.

Adhesion Test Procedure

1. Clean the area of the wall you will test using the 3M Enhanced Adhesion Cleaning Method.
2. Use your thumb to initially adhere the Product strips (punched hole at the top) to the cleaned wall.



Figure 2. Preparing the test strips

NOTE

Test THREE strips of each Product being evaluated on the same wall. After all three strips are tested, compare the results.

3. In a circular motion with firm pressure, move the 3M™ Rivet Brush Applicator, RBA-1 up and down the applied strips. Go over each strip three times to firmly adhere it to the wall. See Figure 3.
4. Tape the Measured Reference Guide Rule on the wall next to the Product strip you are testing. See Figure 4.
5. Wait 15 minutes to allow adhesion to build.
6. Zero out the scale, as shown in Figure 5.



Figure 3. Adhering Product Strips



Figure 4. Adhesion Test



Figure 5. Zeroing the Scale

7. Slide the scale's S hook through the punched hole in the Product strip.
8. Hold the scale in your palm, keeping it as straight as possible but without any portion of the scale or your hand contacting the wall during the test.
9. Pull the scale downward at a steady rate of about 1 in. (2.5 cm) in 5 seconds, using the Measured Reference Guide lines as a guide. Once you have started pulling, DO NOT STOP until the Product strip is fully released from the wall.

NOTE

The Measured Reference Guide in Figure 5 is included at the end of this guide.

10. As you pull down on the scale:
 - a. Observe the release characteristics of the Product and compare them to [“3M™ DI-NOC™ Adhesion Test Recommendations” on page 6.](#)
 - b. Note and record the value in grams/in. that registers on the scale on the [“Worksheet for Walls” on page 19.](#)
11. Repeat Steps 2 to 10 for each test strips. Average the three results together.

Test Evaluation - Smooth Walls Only

1. Averaging test results: If two or three out of three strips of the same Product perform the same way, use those characteristics to judge the suitability of that particular Product for that wall.
2. Use the table below to interpret scale values.

3M™ DI-NOC™ Adhesion Test Recommendations

Scale Value	Adhesion Characteristics	Recommendation
Less than 800 grams/in.	Removes very easily; little or no resistance	Unacceptable adhesion; additional cleaning may be necessary
800 to 1000 grams/in.	Smooth, consistent release; no jerkiness but more difficult to release	Acceptable adhesion; may be removable with heat/chemicals; removal may cause wall damage
Greater than 1000 grams/in.	Smooth consistent release; no jerkiness, but substantial resistance to releasing	Excellent adhesion; removal will cause damage

- Unsatisfactory test results occur when:
 - a. The test strip removes unevenly.
 - Inconsistent or low adhesion values due to high and low spots in the surface texture which cause the adhesive to not make full contact with the wall surface.
 - Cold wall and air temperatures which don't allow the adhesive to flow or make full contact.
 - b. The test strip pulls paint off wall.
 - If any paint is pulled off with the test strip, the paint is not sufficiently bonded to the wall and the Product should not be applied until the problem is corrected, a new paint is fully cured, and the [“3M Adhesion Test” on page 4](#) is performed again with satisfactory results.

3M Enhanced Adhesion Cleaning Method

Using the 3M Enhanced Adhesion Cleaning Method ensures that the application surface is ready to receive and hold the Product. The installer must evaluate each application surface to determine cleaning requirements prior to Product installation.

CAUTION

For your safety, always wear protective eye wear and disposable gloves when cleaning application surfaces.

1. Ensure that any needed repairs to the application surface are completed prior to performing the 3M Enhanced Adhesion Cleaning Method.
2. Clean stubborn grease and grime using an appropriate, commercially available cleaning product.
3. Prepare a cleaning solution with a 70% isopropyl alcohol/30% water cleaning solution in a spray bottle.
4. Soak a clean, lint-free cloth with the IPA cleaning solution until it is dripping wet. See Figure 6.
5. Clean the entire application surface with overlapping strokes. Some paint particles may migrate onto the cloth. See Figure 7.



Figure 6. Soaking a Lint Free Cloth



Figure 7. Removing Paint Particles



Before cleaning



After cleaning

Figure 8. Testing Wall Temperature

NOTE

Change cleaning cloths often to avoid redepositing contaminants on another part of the application surface. Soak each new cloth with the IPA cleaning solution.

6. Thoroughly soak another clean, lint-free cloth with the IPA cleaning solution and wash the application surface again.
7. The alcohol in the cleaning solution will lower the surface temperature of the application surface as much as 10°F (5.6°C), a noticeable difference. When the alcohol has completely flashed off, which takes about 10 minutes, the application surface will return to its normal temperature. Installers can use an IR gun (see Figure 8) to accurately measure the temperature before cleaning and immediately after cleaning, or simply touch the back of their hand to the cleaned area. When it no longer feels cool, it is dry and installers can proceed with the adhesion test, or with the Product installation.

Estimated Time for Cleaning

It takes about 30 minutes to clean a 125 sq. ft. (11.6 square meters) area, which is approximately an 8 ft. by 16 ft. (2.4 m by 4.9 m) wall. Keep this in mind as when providing job estimates.

Surface and Work Area Preparation

Use the following steps to prepare the application surface for Product application. An experienced installer's techniques may vary.

Inspect Application Surfaces

Before installation, contact the property manager or the general contractor of the installation site to ensure that the application surface is ready for installation.

NOTE

Before covering application surfaces susceptible to swelling, such as wooden doors, wood-core doors, or gypsum board, ensure that the environmental conditions, such as temperature and humidity, are stable. Wide changes in humidity or temperature can affect the application surface, which may cause wrinkles or bubbles in the applied Product.

NOTE

It is critical that the paint, sealer and/or primer coatings be allowed to fully cure for the entire time period stated by the manufacturer.

Repair Damaged Application Surfaces

Repair any damage such as holes, loose wallboard joints, and any chipped or peeling material.

1. Fill any holes or gouges with a Bondo® filler product or another non-water-based filler. Ensure that all filler is fully cured before proceeding.
2. For exterior surfaces, use a soft bristle brush to remove all loose particles, dust, sand, and gravel.
3. Sand the application surface.
4. Clean the application surface with IPA.
5. If the surface is porous, seal the application surface with a minimum of two coats of a primer or sealer. Follow the manufacturer's recommendations for surface preparation. Allow the sealer or primer to fully cure before installing the Product.

Clean the Application Surface

Wipe down the application surface with a lint-free cloth and a 70% IPA/30% water cleaning solution, or use the ["3M Enhanced Adhesion Cleaning Method" on page 7](#) if needed.

For 3M™ DI-NOC™ EXR Series Application Surfaces

3M™ DI-NOC™ EXR Series for exteriors can be applied to the following vertical application surfaces:

- Aluminum
 - Anodized aluminum
 - Colored aluminum
 - Painted aluminum
 - Aluminum composite panel
- Galvanized steel
- Painted steel

Textured Exterior Surfaces

Some exterior surfaces are highly dimensional and the adhesive may not have enough contact area to adhere properly to the surface. Contact 3M Commercial Solutions Technical Service with any questions about surface suitability.

Exterior Application Surface Conditions

Exterior application surfaces must not be loose, crumbling, contaminated, wet, or damp.

The Product can be applied at temperatures as low as 54°F (12°C) on days when the temperature is expected to rise to at least 70°F (21°C). Heat helps the adhesive bond to the application surface; therefore, the warmer the temperature, the better the bond.

NOTE

Do NOT apply the Product late in the day when the surface temperature is likely to drop.

Installation

Recommended application temperature: 54°F to 100°F (12°C to 38°C)

These are the general Product application steps. An experienced installer's techniques may vary.

1. Measure the application surface to be covered.
2. Cut the Product to size with a minimum 1/2 in. (1.3 cm) extra on all sides for trimming.
3. Put a set line in the liner 6 in. to 8 in. (15.2 to 20.3 cm) from the top.
4. Align the Product with the application surface and set the set line.
5. Pull out the liner approximately 8 in. (20.3 cm).
6. Starting in the center, use the squeegee to adhere the Product to the application surface using overlapping strokes. Repeat Steps 5 and 6 until the panel is completely applied.
7. Re-squeegee the entire panel for ultimate adhesion.

Create a Double Cut Seam

This technique is NOT recommended for 3D or curved surfaces. A standard overlap seam is recommended for those surfaces instead.

NOTE

If the same Product will be used on each side of the double cut, be sure to use Product from the same roll or lot.

1. Ensure that Product design and/or "grain" of an embossed pattern always runs in the same direction or the application may have obvious shifts in color, gloss and/or design.

NOTE

Do not use double cut seaming with Products that have a **W** designation in the 3M™ DI-NOC™ Architectural Finishes Product Catalog.

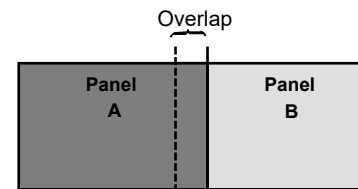


Figure 9. Creating a double cut seam

2. On the Product side where the seam will be, leave 1 in. (2.5 cm) of Product liner on the side of Panel A. See Figure 9.
3. Apply Panel A.
4. Apply Panel B overlapping Panel A by 1 in. (2.5 cm).
5. Remove the Panel B liner to adhere to panel A. The transition should be flat against application surface with no air pocket underneath.
6. Use a straight edge to cut through the overlap's center.
7. Remove the excess Product and then the Product liner.
8. Starting in the center of the seam, use a fingernail or appropriate tool to bring the two edges of the seam together and tight to the wall. There should be no overlap of the edges at this point. Complete a 1 in. (2.5 cm) section of the seam before proceeding to the next step.
9. Starting in the middle of the 1 in. (2.5 cm) section, firmly squeegee the seam together with a rocking motion. Work the squeegee along the seam, keeping it tight to the film.

For 3M™ DI-NOC™ WH-111 and PWF-500 Seams

Seams in 3M™ DI-NOC™ Whiteboard Films WH-111 and PWF-500 can accumulate marker residue. When creating a double-cut seam, make all seams as tight as possible. When creating an overlap seam, use 3M™ Tape Primer 94 adhesion promoter under the overlap, which should be 1/2 to 1 in. (1.3 to 2.5 cm). Horizontal application at eye level is preferred, so as to allow continuous writing and erasing along the length of the whiteboard area. See the [DI-NOC™ WH-111 Tech Data Sheet](#) and the [DI-NOC™ PWF-500 Tech Data Sheet](#).

Create an Overlap Seam

NOTE

Use Product from the same roll or lot on each side of the seam.

For Most 3M™ DI-NOC™ Series:

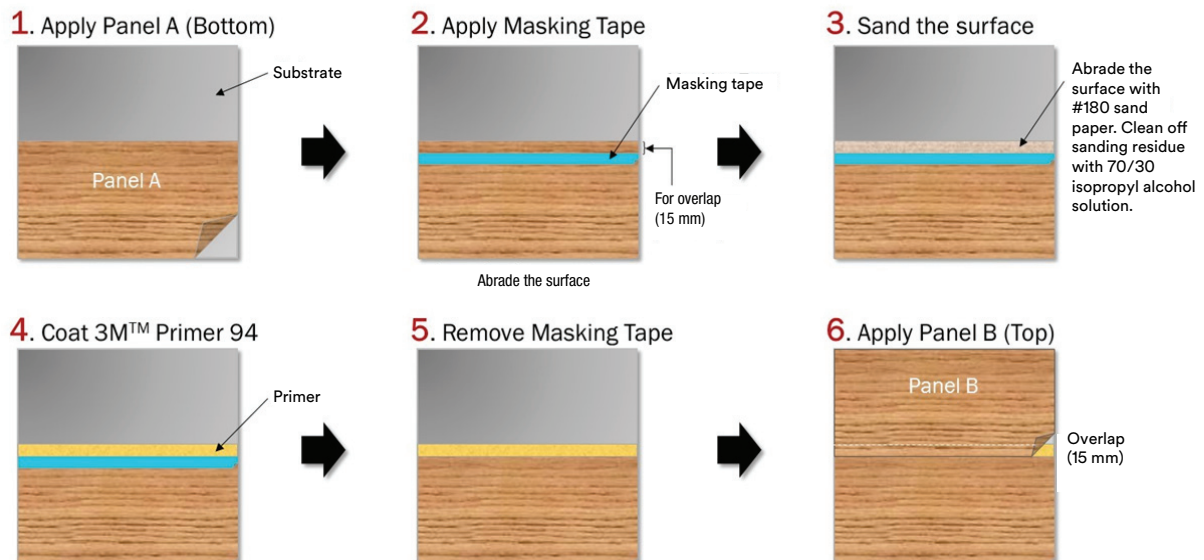


Figure 10. Creating an Overlap Seam For Most DI-NOC™ Films

For 3M™ DI-NOC™ EXR Series Seams

3M™ DI-NOC™ EXR Series for exteriors must have an overlap seam of at least 0.6 in. (15 mm). Apply with 3M™ Tape Primer 94 at the overlap. Overlap panels in the shortest direction, where possible. Apply the lower panel first, then apply the upper panel after priming the edge of the lower panel.

NOTE

Overlaps of 3M™ DI-NOC™ EXR Series films do not require sanding. See [Figure 12 on page 11](#).

This allows water to shed away from the seam. Multiple layers of overlapped film can cause edge lifting problems in high winds. Make sure there are no more than three layers of film at any overlapped seam intersection. See Figure 11.

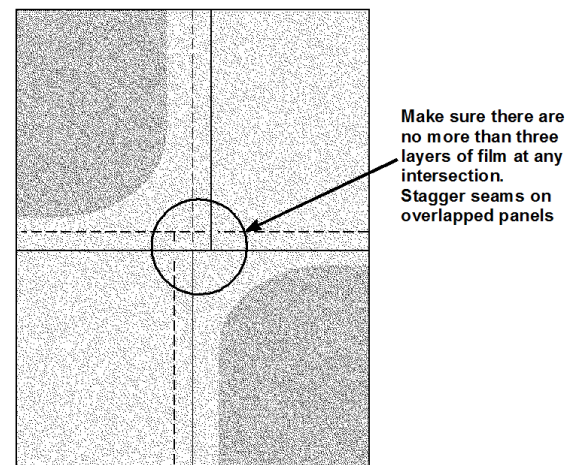


Figure 11. Stagger seams on overlapped panels

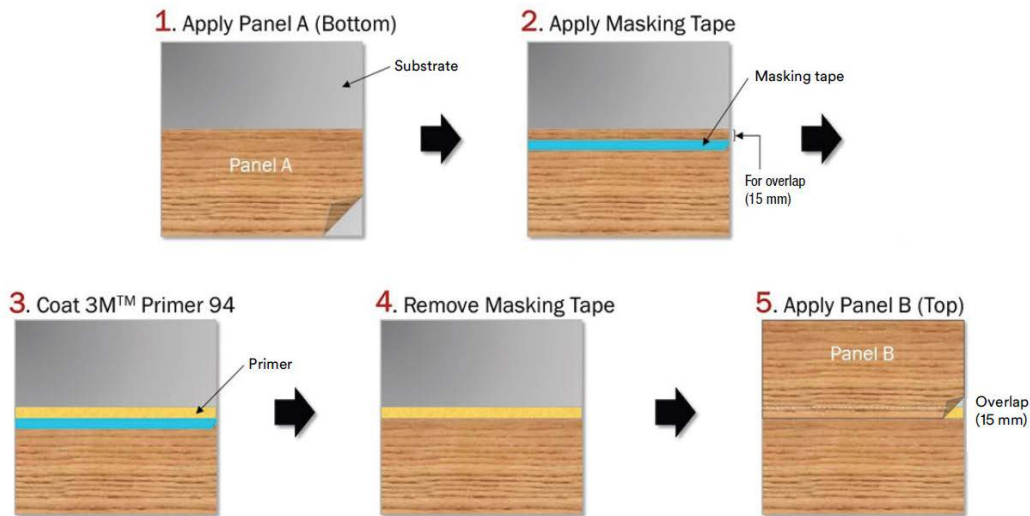


Figure 12. Creating an Overlap Seam For DI-NOC™ EXR Series Films

Trimming

After application, re-squeegee all Product edges to help ensure good edge adhesion before trimming. See Figure 12.

Outside corners should be cut at a 45 degree angle. Inside corners should have an overlap of 1/8 in. (3.2 mm).

For 3M™ DI-NOC™ EXR Series Trimming: Inside corners should have a double-cut seam.

Compound Curved Surfaces

NOTE

Use of 3M™ DI-NOC™ products on compound curved surfaces is strictly on a user test-and-approve basis.

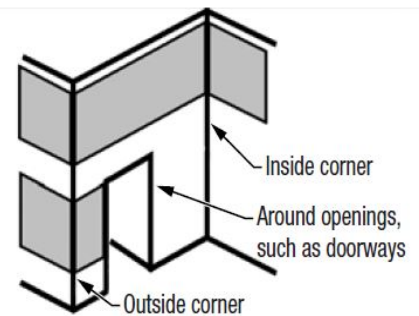


Figure 13. Re-squeegee to ensure good adhesion.

Using Heat to Conform Product Around Three Dimensional Surfaces

Installers can improve many Products' conformability by heating the surface of the Product until it is pliable enough to form around a three dimensional surface.

CAUTION

Overheating can damage the Product. Practice this technique on a test piece before attempting it on finished Product.

1. Ensure that you have enough Product to wrap around the edges to the surface's bottom. Allow a minimum of 3 in. (7.6 cm) around the entire panel.
2. Apply adhesion promoter to the edges, starting about 1/2 in. (1.2 cm) from where the shape changes (see Reference X in Figure 13) and extending to the back side of the surface for at least 1/2 in. (1.2 cm) (see Reference Y in Figure 13).
3. Allow the adhesion promoter to dry to improve adhesion and minimize shrinkage..
4. Apply the Product to the flat surface before conforming the corners and then along the straight edges in this sequence: A, then B, C and D, then E and F, etc. See Figure 14.



Figure 14. Apply adhesion promoter between X and Y.

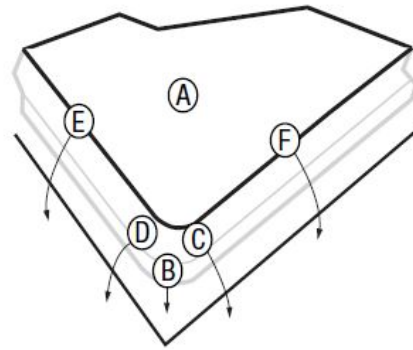


Figure 15. Apply the product on the corner.

5. Neatly trim excess Product on the surface's back side.

NOTE

For products identified in the 3M™ DI-NOC™ Architectural Finishes Product Catalog with the following symbols:

-  Do NOT use on 3D Compound Curved Surfaces. Film will not conform around compound curves.
-  Use caution when applying to 3D compound curved surfaces to prevent damage to product. Film may distort or not conform around compound curves.

For DI-NOC™ EXR Series on Compound Curved Surfaces: Compound curved surfaces are NOT recommended. Stretching the film can adversely affect Product performance including outdoor durability.

3M™ DI-NOC™ EXR Series Edge Sealing

The edges of 3M™ DI-NOC™ EXR Series films should not be covered by sealing material except when absolutely necessary. Certain exterior applications of 3M™ DI-NOC™ EXR Series films may require an edge sealer by the installer. When necessary, the film edge should be covered 1 to 2 mm maximum by the sealer.

CAUTION

Application to exterior glass surfaces is NOT warranted due to the risk of glass breakage caused by thermal expansion.

NOTE

Adhesion to exterior glass is NOT warranted, but caulking the entire edge of the installed film may help prevent water penetration. Application to exterior glass is to be done strictly on a user test-and-approve basis.

Additional Recommendations by Product Series

3M™ DI-NOC™ EXR Series Exterior Architectural Finishes (“DI-NOC™ EXR Series”)

1. Consider the following points when applying 3M™ DI-NOC™ EXR Series.
2. 3M™ DI-NOC™ EXR Series films are designed for installation on exterior building elements.
3. Although the product is highly durable when used outdoors, the expected performance life will be reduced when used on non-vertical surfaces. See warranty in 3M™ DI-NOC™ EXR Technical Data Sheet.
4. Aluminum, galvanized steel, or painted steel are the preferred substrates for DI-NOC™ EXR Series films for maximum expected performance life.
5. In low temperature environments, the product can whiten at creases, tears, and folded corners. Apply at recommended exterior air and surface temperatures between 54°F to 100°F (12°C to 38°C).
6. Handle with care during application to avoid creases and tears if the film is excessively bent. The product creases and tears more easily than standard DI-NOC™ Architectural Finishes. Applying and repositioning the product requires careful handling.
7. DI-NOC™ EXR Series are not as conformable as standard DI-NOC™ Architectural Finishes. Do NOT use on compound curved (3D) surfaces or deep channels. Avoid stretching the product during application due to low conformability. If the product is stretched it may be distorted. Accurately determine the starting point for the application of the product so there will be no need for adjustments.
8. DI-NOC™ EXR Series films are more difficult to cut than standard DI-NOC™ Architectural Finishes films. Cut the product through to the adhesive with a sharp tool to avoid unexpected tearing or rough edges.
9. Seams require a ½ in. (13 mm) overlap joint. When making an overlap joint, install masking tape ½ in. (13 mm) in from the edge of the DI-NOC™ EXR Series film. Clean the area with a microfiber or soft cloth and 70/30 isopropyl alcohol/water solution. Apply 3M™ Tape Primer 94 in the overlap area, remove the masking tape and install the next sheet of DI-NOC™ EXR Series with a ½ in. (13 mm) overlap.
10. The edge of the DI-NOC™ EXR Series film should not be covered by sealing material except when absolutely necessary.

3M™ DI-NOC™ MT Series Matte Architectural Finishes (“DI-NOC™ MT Series”)

Consider the following points when applying DI-NOC™ MT Series:

1. DI-NOC™ MT Series films utilize a new state of the art matte surface texture. The matte surface of the film has less scratch and stain resistance compared to other DI-NOC™ Architectural Finishes series. Avoid applications in high traffic areas and impact with hard objects. Customers should test and approve the installation location.
2. Apply in a dust-free environment to avoid dust particles scratching the surface during installation.
3. Wrap the application squeegee in a clean, soft cloth to avoid scratching the surface of the film, especially on inside corners or butt joints. Alternately, use the loop side of the 3M™ Hook and Loop Tape on the edge of the squeegee. Be careful to avoid making marks during application, especially VM-MT Series and dark colors of PS-MT and SU-MT Series, as these marks may be especially noticeable. Pressure from squeezing during installation may leave marks resembling white indentations which may recover with time. Wipe with a damp microfiber or soft cloth to shorten the recovery time. Deep indentations and scratches may not recover.
4. Handle with care during application to avoid creases if the film is excessively bent. Applying and repositioning the product requires careful handling.
5. DI-NOC™ MT Series films may be applied to shallow complex curved (3D) surfaces with caution to avoid excessive heating and over stretching, except VM-MT Series is NOT recommended for 3D applications. Excessive heating and stretching may cause discoloration and/or damage to the matte surface. If cold wrapping around sharp outside corners causes whitening of the film, warming with a heat gun will make this less noticeable. Customers should test and approve 3D installations.
6. Cut edges may become noticeably white for dark colored patterns. Warming with a heat gun will make this less noticeable.
7. When making an overlap joint, install masking tape ½ in. (13 mm) in from the edge of the DI-NOC™ MT Series film. Lightly sand the exposed ½ in. (13 mm) section of DI-NOC™ up to the masking tape until it is smooth. Clean the area with a microfiber or soft cloth and a 70% isopropyl alcohol solution. Apply 3M™ Tape Primer 94 in the overlap area, remove the masking tape and install the next sheet of DI-NOC™ MT Series with a ½ in. (13 mm) overlap.
8. Do NOT pierce the film to release air bubbles which may show white marks.
9. To remove oil stains, wipe with a microfiber or soft cloth dipped in 70/30 isopropyl alcohol solution. Dark colors may have a white stain after cleaning with this method. Do not put solution directly on the surface.

NOTE

For additional questions, refer to 3M Technical Service 1-800-328-3908.

3M™ DI-NOC™ White Board Film WH-111 and 3M™ DI-NOC™ Projection Screen Whiteboard Film PWF-500

NOTE

Refer to the 3M™ DI-NOC™ WH-111 and PWF-500 Tech Data Sheets for complete product information.

1. Always handle the Product with care.
2. The Product edges may be sharp; use caution when handling.
3. Avoid scratching or denting the surface during installation as this may affect writing performance.
4. Before setting the adhesive to the application surface:
 - a. Ensure proper alignment by using a guideline. Allow additional material for trimming as necessary.
 - b. Ensure that the entire surface of the film is flat against the application surface and the ends of the film do not sag.
5. Stretching or attempting to reposition the Product during application may deform, buckle, or ripple the Product.
6. Wrinkles created during application cannot be removed with heat due to polyester construction.
7. Seams tend to accumulate ink from the markers. Make seams as tight as possible.
8. Horizontal installation at eye level is preferred, to allow continuous writing and erasing along the length of the whiteboard area.
9. If additional sections are installed, seams should be overlapped 1/2 to 1 in. (1.3 to 2.5 cm). Use Primer 94 adhesion promoter under the overlap.
10. If installed on drywall (or painted drywall), follow the Drywall Preparation & Installation Guidelines, [3M™ DI-NOC™ Surface Prep Guide](#).

3M™ DI-NOC™ E-Series RC Recycled Content* Film

Consider the following points when applying 3M™ DI-NOC™ Architectural Finishes E-Series RC Recycled Content* Film:

1. 3M™ DI-NOC™ Architectural Finishes E-Series RC Recycled Content* Film products utilize a new state of the art matte surface texture. The matte surface of the film has less scratch and stain resistance compared to other DI-NOC™ series. Avoid applications in high traffic areas and impact with hard objects. Customers should test and approve the installation location.
2. Apply in a dust-free environment to avoid dust particles scratching the surface during installation.
3. Wrap the application squeegee in a clean, soft cloth to avoid scratching the surface of the film, especially on inside corners or butt joints. Be careful to avoid making marks during application, especially with dark colors, as these marks may be especially noticeable. Deep indentations and scratches may not recover.
4. Handle with care during application to avoid creases that may occur when the film is excessively bent. Applying and repositioning the product requires careful handling.
5. With an approximate thickness of 5 mils (127 microns), these films are thinner than the standard 3M™ DI-NOC™ Architectural Finishes line. Because the product is thin, it can easily tear and/or wrinkle.
6. This product is designed for smooth substrates such as metal or laminate. Apply to smooth substrates so the surface texture does not show through the film.
7. This product CANNOT be applied to 3D complex surfaces because it is not elastic and does not absorb wrinkles. Cuts in the film are prone to tearing, and wrinkles do NOT recover when heated.
8. When aligning, the film may unintentionally stick to the substrate, so conduct all work with care.
9. This product is for indoor use only. Do NOT use the product outdoors, in hot and humid conditions, or on expanding and contracting substrates.
10. Cut edges may become noticeably white for dark colored patterns. Warming the edges with a heat gun will make this less noticeable.
11. Do NOT make double-cut seams. The film may lift at double-cut seams over time.
12. Make overlap seams. Install masking tape with the outer edge 1/2 in. (1.3 cm) in from the edge of the film. Either lightly sand the exposed 1/2 in. (1.3 cm) section of the film up to the masking tape until it is smooth and clean the overlap film area with a microfiber or soft cloth and isopropyl alcohol and 30% water solution. Or apply 3M™ Tape Primer 94 in the overlap area. Then remove the masking tape and install the next sheet of film with a 1/2 in. (1.3 cm) overlap.
13. Small scratches or stains may be reduced by wiping with a clean, soft dry cloth. If scratches or stains can not be reduced by dry wiping, wipe with water and a clean, soft cloth. Do NOT use hard cloths or organic solvents as they may damage the film surface.
14. Stains may be noticeable on light colored products. To remove oil stains, wipe with a microfiber or soft cloth dipped in a 70% isopropyl alcohol and 30% water solution. Dark colors may have a white stain after cleaning with this method. Do NOT put solution directly on the film surface.

3M™ DI-NOC™ Architectural Finishes TIL Series

Consider the following points when applying 3M™ DI-NOC™ Architectural Finishes TIL Series:

1. Always handle the film with care.
2. The film edges may be sharp; use caution when handling.
3. Use a 3M™ Hand Applicator PA-1 (Blue or Gold) with the loop side of 3M™ Hook and Loop Tape, or wrap the applicator in a soft cloth to reduce surface friction during application.
4. In addition to the standard DI-NOC installation tools, a smooth wooden spatula (the width of the grout line) will be needed to work the film into the grout line.
5. Before setting the adhesive to the application surface:
 - a. Fix any loose or damaged tiles as required. Fill and sand any holes flush with the tile surface.
 - b. Ensure the substrate is completely dry before installation. Moisture on the substrate after direct application to tiles or mortar will cause the Product to peel after application.
 - c. Ensure proper alignment of the film by using a guideline. Allow for additional material for trimming as necessary.
 - d. Ensure the entire surface of the film is flat against the application surface and the ends of the film do not sag.
6. Dry time prior to installation: Allow a minimum of 12 hours of drying time in wet areas prior to installing the film (especially shower area.) Moisture on the substrate after direct application to tiles or mortar will cause the film to peel after application.
7. Stretching or attempting to reposition the film during application may deform, buckle, or ripple the film.
8. If additional film sections are installed, seams should be overlapped one tile width with the edges hidden in the grout lines. If no tile is present, overlaps should be a minimum of 1/2 in. (1.3 cm) wide. Installers may optionally apply Primer 94 under the overlap.

NOTE

Do NOT use Primer 94 under the overlap when using 3M™ Knifeless Tape Precision Line to trim excess film.

9. 3M recommends removing all fixtures possible from the walls prior to film installation. Wrinkles, increased seams, and lower work efficiency will occur when attaching film around many obstacles due to the stiff nature of the film. These obstacles include but are not limited to:
 - a. Toilet room partitions, light fixtures, flush valves, plumbing fixtures, grab bars, mirrors, paper dispensers, soap dispensers, wall mounted trash receptacles, coat hooks, doors, door stops, electrical outlet and light switch cover plates, etc.
 - b. Where necessary, used licensed plumbers, electricians, etc. for removal and re-installation of fixtures.
10. Completely remove all caulk, sealant, silicone, etc. from all surfaces before installing the film.
11. Once the film is installed on the face of the tile wall, use a smooth, wooden spatula approximately the width of the grout line to work the film in. Applying too much pressure could tear the film.
12. After film installation, re-squeegee the entire surface of the film to check for any air bubbles under the film. Use a 3M™ Air Release Tool 391X or a sharp razor blade tip to pierce any air bubbles and use the squeegee to remove the trapped air.
13. Reinstall all removed fixtures to their original locations.
14. Apply sealant to all of the following places to prevent film edges from peeling off and water from getting under the film:
 - a. All film edges (excluding overlap seams) including joints between the ceiling and walls and between the floor and walls
 - b. Around plumbing and other fixtures

3M™ DI-NOC™ Architectural Finishes Anti-Graffiti Series for Rail Interior

The following process helps minimize the effects of train vibrations which can cause creases or wrinkles where 3M™ DI-NOC™ Architectural Finishes Anti-Graffiti Series for Rail Interior ("DI-NOC™ AG Series") has been clamped down and is unable to move with the substrate, such as when applied under fixtures.

1. Remove fixtures where DI-NOC™ AG Series will be applied underneath.
2. Clean the substrate.
3. Apply 3M™ Primer 94 around the outline of the fixture, extending a minimum of ¼ in (0.6 cm) in each direction.
4. Apply DI-NOC™ AG Series as usual.
5. Reinstall the fixture.
6. Make relief cuts around the perimeter of the fixture.

Cleaning and Maintenance

Regular cleaning helps maintain the appearance of the finish. Use mild detergent, water, and a soft cloth or sponge without abrasives. For difficult stains, spot clean with a solution of 70% isopropyl alcohol (IPA) and 30% water and a soft cloth. Avoid using strong solvents or detergents that are either highly alkaline (pH>11) or highly acidic (pH<3). Do NOT use ammonia, chlorine, strong organic-based cleaning products, polishing or cleaning compounds, hard-bristle brushes, or electric polishing equipment. Use only clean, nick-free tools and wipe gently.

Problem	Solution
Dust and Grit	Wipe with a soft, damp cloth.
Soiled (but not gritty)	Use water and a soft cloth.
Heavily Soiled	Clean first using a solution of mild liquid detergent and water, then use clear water. Wipe gently with a soft cloth.
Difficult Stains	Spot clean with a solution of 70% IPA and 30% water.

Type of Surface Damage	Cause of Surface Damage	Method to Reduce Visibility
Mar	Dragging an item (such as a colored briefcase) across the film, leaving a deposit of color on the surface.	Rub with a soft cloth and warm soapy water to remove the mar.
Indentation	Pressing into the film surface without breaking the surface, such as pressure from a chair.	Carefully heat the indentation with a heat gun, which allows the film surface to rebound and reduce the indentation's visibility.
Scratch	Breaking the surface layer of film leaving a slightly jagged whitish mark on the surface, such as by dragging a sharp rivet from a purse.	Rub with a surface restorer such as 3M™ Marine Vinyl Cleaner & Restorer to reduce the visibility of scratches.
Gouge	Breaking through the entire film, such as from a severe impact from sharp chairs or carts.	Repair the film by cutting out the damaged film and replacing it with the same pattern of film, or remove and replace the entire film panel.

For DI-NOC™ EXR Series

Power Washing Films

Power-washing, or pressure-washing, may be used. However, aggressive washing can damage the Product.

Excessive pressure during power-washing can damage the Product, by forcing water underneath the surface. Water lowers the adhesion force of the Product to the substrate, allowing the graphic to lift or curl. These problems are further worsened by high winds, which can remove the Product from the substrate. Avoid pressure-washing perforated films applied without edge-sealing tape.

To avoid edge-lifting, or other damage to the Products, follow these important steps:

- Use a spray nozzle with a 40°-wide (minimum) spray pattern
- Ensure the spray nozzle includes a nozzle protector (or tip guard)
- Use a maximum pressure of 1200 psi (80 bar)
- If the system is heated, limit the water temperature to 140°F (60°C) or less
- Hold the nozzle at least 12 in. (30 cm) away from, and perpendicular to, the Product, or a minimum of 39 in. (1 m) away from the Product at spray angles of 30° or greater.
- Do NOT direct the water stream between 0° and 60° from the Product surface.

Removal

Although Products may be removed, application techniques and adhesion promoters increase adhesion, so clean removal without substantial damage is unlikely. The following removal technique may be attempted, but effort levels and results will vary.

1. Cut the product into 4 in. (10.2 cm) wide segments, taking care to avoid damaging the substrate.
2. Optionally, use a heat gun set to 150°F to 200°F (66°C to 93°C) to soften Product adhesive.
3. Immediately pull the heated section of Product down at about a 180 degree angle.
4. Repeat Steps 2 and 3 with subsequent pieces of the Product.

Troubleshooting

Every effort should be made to ensure that walls are in good condition before applying the Product. This generally reduces installation time while improving the Product's appearance and removal characteristics.

- Review all troubleshooting options before deciding on a course of action.
- Every wall paint must be fully cured for the full amount of time recommended by the paint manufacturer.
- Follow the 3M Adhesion Test for every Product you intend to use and on each different wall included in the installation.
- Every installation wall must be cleaned with the 3M Enhanced Adhesion Cleaning Method before doing the 3M Adhesion Test and before doing the full installation.

Problem	What To Look For	Recommended Solutions
Installation Problems - Smooth Walls		
The Product does not adhere well or falls off wall.	The Product was not tested on the wall prior to installation.	Always perform the 3M Adhesion Test for each Product and on each application surface before committing to the complete installation.
	Low VOC paint was used on the wall.	
	Wall repairs were not properly sealed, primed, painted, or cured.	
	Walls were not cleaned with a solution of 70% isopropyl alcohol and 30% water.	Always follow the 3M Enhanced Adhesion Cleaning Method in this guide to increase adhesion.
	The texture of the application surface is not well suited to the Product being used.	• Some textured paint additives create too much texture for Products that are intended for smooth walls. • A wall with too little texture may prevent proper air bleed during installation, trapping air under the film. In this case, use the 3M™ Air Release Tool 391X to make a small hole in the film to allow the air to escape. Re-squeegee as necessary.
	The temperature of the application surface was too low.	Refer to the "Installation" section on page 9 for the proper installation temperature range.
Post-Installation Problems - All Walls		
Edges of the Product are lifting from the application surface.	Poor installation technique, or wrong tools	Review this bulletin and ensure you are using the right Product, tools, and techniques for the application surface. Lots of practice is critical for consistent success.
A large portion of the Product lifts or falls off.	Poor initial bond of paint to wall	Perform the 3M Adhesion Test. Perform the 3M Enhanced Adhesion Cleaning Method if the test results are less than 800 grams.
	Wall not properly cleaned	Follow the procedure "Surface and Work Area Preparation" on page 8 .
	Under-cured paint.	Ensure the paint is properly applied and fully cured per the manufacturer's specifications before applying the Product.

Health and Safety

Tools and Equipment Usage

When using any equipment, always follow the manufacturer's instructions for safe operation.

Chemicals

When handling any chemical products, read the manufacturers' container labels and the safety data sheets (SDS) for important health, safety, and environmental information.

[Follow this link to obtain SDS sheets for 3M products.](#)

[Follow this link to obtain information about substances of very high concern \(SVHC\) for EU products.](#)

WARNING

To reduce the risks of personal injury and/or property damage associated with glass breakage:

A glass surface covered by a film with areas of high opacity or dark-colored ink will absorb more heat than other glass surfaces when exposed to sunlight. Heat absorption can create thermal expansion that could result in glass breakage or cracking. Do not use a film with areas of high opacity or dark-colored ink on glass surfaces with significant exposure to sunlight.

Warranty Information

Warranty

Refer to the applicable product's technical data sheet for warranty information.

Technical Information

Technical information, guidance, and other statements provided by 3M are based upon records, tests, or experience that 3M believes to be reliable, but the accuracy, completeness, and representative nature of such information is not guaranteed. Such information is intended for people with knowledge and technical skills sufficient to assess and apply their own informed judgment to the information. No license to any intellectual property rights is granted or implied with respect to this technical information.

Product Selection and Use

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. Customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment, reviewing all applicable regulations and standards, and reviewing the product label and use instructions. Failure to properly evaluate, select, and use a 3M product in accordance with instructions or to meet all applicable safety regulations may result in injury, sickness, death, and/or harm to property.

Warranty, Limited Remedy, and Disclaimer

Unless a different warranty is specifically stated on the applicable 3M product packaging or product literature (in which case such warranty governs), 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ARISING OUT OF A COURSE OF DEALING, CUSTOM, OR USAGE OF TRADE. If a 3M product does not conform to this warranty, the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

Limitation of Liability

Except for the limited remedy stated above, and except to the extent prohibited by law, 3M will not be liable for any loss or damage arising from or related to the 3M product, whether direct, indirect, special, incidental, or consequential (including, but not limited to, lost profits or business opportunity), regardless of the legal or equitable theory asserted, including, but not limited to, warranty, contract, negligence, or strict liability.

Commercial Branding and Transportation

3M Center, Building 223-3N-30
St. Paul, MN 55144

1-888-650-3497
3M.com/AMD

© 3M 2026. All rights reserved.
3M, DI-NOC, Scotch, Scotch-Brite, and Bondo are trademarks of 3M.
Used under license in Canada.
All other trademarks are property of their respective owners.
Revision M, February 2026 Please recycle.



Worksheet for Walls

Make copies of this page as needed.


Installation Site Information
Business Name
Address
City/State/Zip
Customer Information
Contact Name
Business Name
Address
City/State/Zip
Area Code/Phone

Adhesion Test Results		
Test Strip	Test Strip Product Number	Adhesion Value
3M™ DI-NOC™ Sample 1		
3M™ DI-NOC™ Sample 2		
3M™ DI-NOC™ Sample 3		

Installation Site Information
Business Name
Address
City/State/Zip
Customer Information
Contact Name
Business Name
Address
City/State/Zip
Area Code/Phone

Adhesion Test Results		
Test Strip	Test Strip Product Number	Adhesion Value
3M™ DI-NOC™ Sample 1		
3M™ DI-NOC™ Sample 2		
3M™ DI-NOC™ Sample 3		

3M Measured Reference Guide for Adhesion

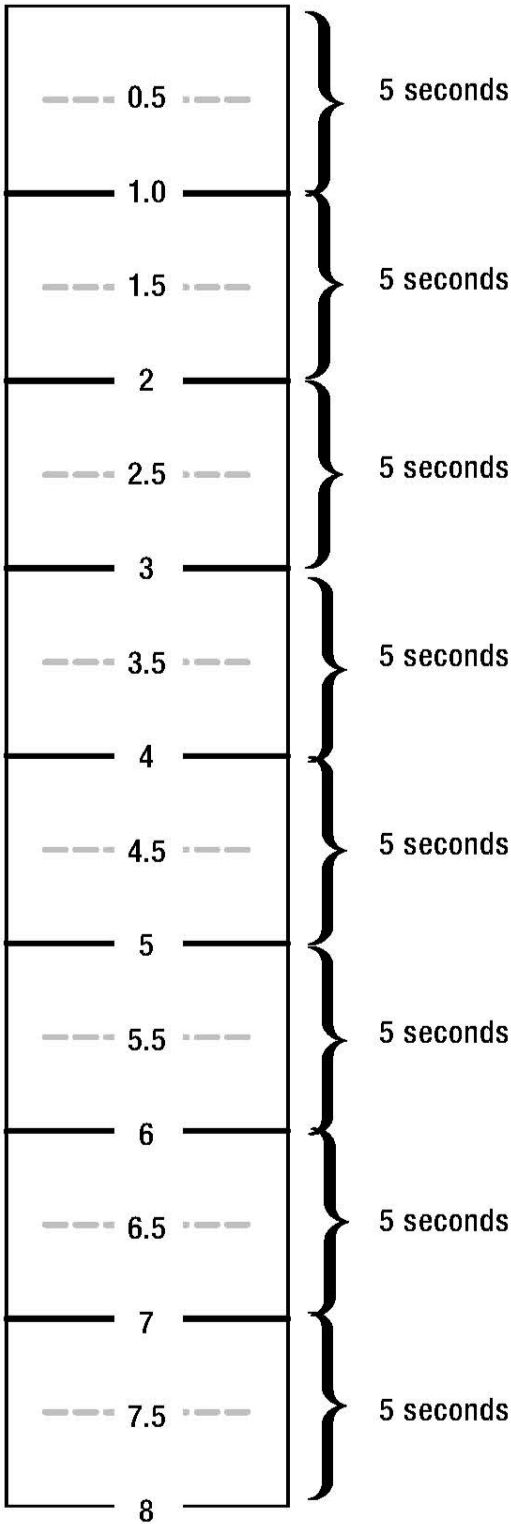

Two Methods for Surface Preparation

1. Standard DI-NOC™ Installation – Dry Method
2. DI-NOC™ Installation with Wallcovering Paste – Wet Method

Standard DI-NOC™ Installation – Dry Method

Surface Preparation & Sealer/Primer Application:

- It is very important that drywall application surfaces are prepared correctly prior to applying 3M™ DI-NOC™ Architectural Finishes (DI-NOC™).
- Provide a Level 5 drywall finish per Gypsum Association GA-214-10e. The finish needs to be very smooth, as any imperfections or texture in the finish can show through the 3M™ DI-NOC™ film.
- Once the Level 5 drywall skim coat is dry and sanded, clean all debris and dust residue from the walls, ceilings, soffits, and any other application surfaces.
- Apply a coat of 3M approved sealer/paint primer to the drywall application surface. Use a foam or low-nap (1/4 in.) roller to maintain the Level 5 smooth finish and avoid an orange-peel texture. Refer to FAQ: Smooth, Indoor Wall applications for a list of 3M approved sealers/paint primers. The use of non-approved 3M sealers and primers is strictly on a user test-and-approve basis.
 - Rust-Oleum® Zinsser® GARDZ® Problem Surface Sealer has been shown to aid in successful installations.

NOTE: Application of the sealer/primer must be very smooth in order to maintain a very smooth wall finish.

- Allow the sealer/primer to dry per manufacturer's specifications as indicated on the container.
- Thoroughly clean the surfaces again to remove any accumulated debris and/or dust residue.
- Apply a second coat of a high-quality sealer/primer, again using a foam or low nap (1/4 in.) roller to maintain the Level 5 smooth finish and avoid an orange peel texture.
- Allow the sealer/paint primer to cure per the manufacturer's specifications as indicated on the container, prior to installing DI-NOC.

3M™ DI-NOC™ Installation - Dry Method:

- Once the sealer/paint primer is fully cured, perform the 3M™ Adhesion Test per the [3M™ DI-NOC™ Installation Guide](#) using 1 in. x 10 in. strips of DI-NOC™ or the roll of "Not Removable/Permanent" film supplied in the 3M™ Adhesion Test Kit to ensure proper adhesion before installation.

NOTE: Refer to [3M Instruction Bulletin 5.37](#), Section 6, for details on the 3M Wall Film Adhesion Test for SMOOTH Walls process.

- Wipe down the surface with a mixture of 70% isopropyl alcohol and 30% water, and allow the surface to dry completely.
- Use adhesion promoter (i.e. 3M™ Primer 94 or 3M™ DI-NOC™ WP2000 Primer) on edges, around objects, or on other areas where adhesion might be compromised.

NOTE: Application of the adhesion promoter must also be very smooth in order to maintain in a very smooth wall finish.

- Apply DI-NOC™ to the application surface, following the [3M™ DI-NOC™ Installation Guide](#) for detailed instructions. The use of a 3M™ DI-NOC™ Architectural Finishes Preferred Installer to apply DI-NOC™ is recommended. A list of 3M Endorsed Preferred is available online at "[Find an Installer](#)" at [3M.com/AMD](#).



Drywall Preparation & Installation Guidelines Using 3M™ DI-NOC™ Architectural Finishes

DI-NOC™ Installation With Wallcovering Paste – Wet Method

Recommended Products:

Products from ROMAN™ Products, LLC, were tested and shown to aid in successful installations. Testing was performed on all combinations of two (2) ROMAN™ wallcovering primers and three (3) ROMAN™ wallcovering adhesives. Testing showed all primer/adhesive combinations produced an acceptable installation. The primers/adhesives recommended below are those that performed best in testing and are most readily available across the United States. Primers and adhesives from other manufacturers should only be used on a user test-and-approve basis.

Primers:

1. ROMAN™ PRO-977 Ultra Prime® Pigmented Wallcovering Primer (*available at in-store locations) - For use on Level 5 drywall finish (new construction) or on existing painted surfaces (see the “Surface Preparation & Sealer/Primer Application” below).
2. ROMAN™ PRO-999 Rx-35® Sealer / Primer for Porous Surfaces (*available at in-store locations) - For use on Level 5 drywall finish (new construction) without paint.

Adhesives:

1. ROMAN™ PRO-880 Ultra® Clear Strippable Wallcovering Adhesive (*available at in-store locations)
2. ROMAN™ PRO-838 Heavy Duty Clear Adhesive (*special order or online purchase only)
3. ROMAN™ PRO-505 TEKNAgrip® Pre-Pasted Wallcovering Activator (*available at in-store locations)

*See <http://romandecoratingproducts.com/retailers/> for a list of regional retailers.

Recommended tools:

- Standard DI-NOC™ installation tools:
 - Razor knife
 - Seam buster (liner cutter)
 - Plastic wallpaper smoother (6 in. to 8 in. in width) with “loop” (from “3M™ Hook & Loop”), felt, or equivalent
 - Putty knife
 - Straight edge
 - Level or laser leveling tool
 - Pencil
 - Tape measure
 - ScotchBlue™ Painters Tape
 - Roller & roller covers
 - Sponge & bucket of clean water
 - Step stool
 - Drop cloths
 - Work table

Mold and Mildew

Before installing any DI-NOC™, the building must be checked for any moisture problems which could effect mold and mildew growth after the film is installed. Do not install DI-NOC™ if the walls appear to have any moisture damage or if the building appears to have moisture infiltration problems. If there is any uncertainty regarding the presence of moisture problems, contact the architect, mechanical contractor, or general contractor for the standard of care and best application or finish for that area and design of a building. 3M does not take responsibility for any quality issues arising from users’ failure to address moisture problems prior to installation.

Drywall Preparation & Installation Guidelines Using 3M™ DI-NOC™ Architectural Finishes

Surface Preparation & Sealer/Primer Application:

- **Site conditions:** For best results, lighting should be in place at the time of wall preparation and wallcovering installation.
- Do not install DI-NOC™ unless a temperature above 55°F (13°C) is maintained.
- All mildew must be removed from the walls and surfaces treated, in order to inhibit further mildew growth. More extensive moisture problems may require additional steps before installation.
- Seal damaged drywall facing paper before priming and skim coating.

NOTE: Crayon, pen, markers, ink, screw and nail heads, heavy pencil marks, and stains need to be sealed with a stain-killer prior to priming.

- Acceptable Level 5 drywall finishes must be clean, smooth, dry, and structurally intact.
- For all new or refinished wall surfaces, a water-based wallcovering primer should be applied to the surfaces before applying DI-NOC™. Apply at the recommended spread rate using a brush, roller, or spraying system. Do not overspread.
- Where there is a color contrast between the wall surface and the DI-NOC™, it is always best to tint the primer to match the color of the DI-NOC™.
- It is critical to test the recommended primer on the surface to ensure compatibility. Select a small, inconspicuous area of the surface for testing and apply the primer as specified. Inspect the test area after 24 hours for any defects before installing DI-NOC™.
- Use PRO-977 Ultra Prime® Pigmented Wallcovering Primer over flat, satin, and eggshell finish water-based paints. The surface must be free from grease and other residues, dry, smooth, and structurally sound. Check surfaces for paint bonding and damaged wallboard or plaster. Repair all unsound surfaces.
- PRO-977 Wallcovering Primer is not recommended for use over paints with a glossy finish. Dulling the surface by lightly sanding or by using a deglosser may allow the PRO-977 to adhere to a glossy finish. This should be done on a user test and approve basis only.
- PRO-977 Wallcovering Primer is not recommended for use over oil/alkyd-based paints.
- Use PRO-999 Rx-35® Sealer/Primer for Porous Surfaces or PRO-977 Wallcovering Primer directly over Level 5 drywall finish.

Adhesive Application:

- 3M recommends the use of a quality, pre-mixed, “clear” adhesives designed for vinyl wallcoverings. “See “Recommended Products:” on page 2.”

NOTE: 3M recommends using a primer and adhesive from the same manufacturer.

- Users must test the surface with the recommended adhesive to ensure compatibility. Select a small, inconspicuous area of the surface for testing and apply the adhesive as specified. After 24 hours, inspect the test area for any defects before installing DI-NOC™.
- Do not dilute the adhesive.
- The recommended adhesive can be applied with a roller directly to the wall surface or to the back of the DI-NOC™ film over its existing pressure sensitive adhesive. A thin, uniform layer of adhesive should be applied.

NOTE: The paper liner must be removed prior to applying the wall covering adhesive.

- If the back of the DI-NOC™ is to be pasted, ensure the adhesive completely covers the back of the DI-NOC™, especially at the edges, to minimize the risk of failure.

Drywall Preparation & Installation Guidelines Using 3M™ DI-NOC™ Architectural Finishes

DI-NOC™ Installation – Wet Method:

- Measure the wall height, add 2 in., and cut the DI-NOC™ to that dimension. It will overlap onto the ceiling and the baseboard by approximately 1 in. each.
- Remove the main section of the paper liner on the DI-NOC™ prior to installation. However, do NOT remove the 4 in.-wide hinge sections until directed to do so. When applying adhesive to the wall, use caution after removing the liner as exposed pressure sensitive adhesive on DI-NOC™ may permanently bond with dust, debris, and other material.
- Apply adhesive as described above. Hang the first DI-NOC™ panel to a plumb line and allow it to overlap onto the ceiling, baseboard, and inside corner as required. Use a plastic wallpaper smoother to remove any air bubbles and ensure the entire DI-NOC™ panel has made good contact with the wall. The smoothing tool should be covered with “loop” (from “3M™ Hook & Loop”), felt, or an equivalent material to prevent scratching the face of the DI-NOC™. Use light, even pressure. Do not press hard enough to push the adhesive out from under the DI-NOC™.
- Trim the film with a razor knife and putty knife at the ceiling, baseboards, window, door frames, etc. Once trimmed, remove the liner in its entirety and install the film. This will keep the DI-NOC™ from adhering to the adjacent dry surfaces, preventing possible damage to those surfaces.
- Overlap the second DI-NOC™ panel 1 in. over the edge of the first panel, and smooth it out firmly.
- Double-cut the panel edges within the overlapped area. Take care to avoid scoring the wallboard underneath. A seam buster tool is recommended for this purpose.
- Remove excess DI-NOC™ from the wall and close the seam within an hour.
- Immediately clean off any paste that gets on the front of the DI-NOC™ during installation, using warm water and a clean, soft sponge. Change the wash water frequently, and dry the surface with a clean towel. Also wash the ceiling, baseboards, window, door frames, etc. to remove any paste residue.
- Do NOT leave any overlap at the seams. Seams should be double-cut and have a tight fit, free from air and paste bubbles.
- Proceed in the same manner for the remaining DI-NOC™ panels.
- For inside corners, bring the first DI-NOC™ panel around the inside corner by 1/8 in. to 1/4 in. The second panel should then be trimmed directly into the inside corner, overlapping the material from the first panel.
- Wrap the film around outside corners. For non-straight corners, wrap the film around the outside corner as far as possible to achieve a 6 in. lay flat minimum.
 - Use a straight edge to cut off any excess material that will not lay flat. Take care to avoid scoring the wallboard underneath. A seam buster tool is recommended for this purpose.
 - Add a new panel with a 1 in. overlap and double cut as stated above.

Commercial Solutions

3M Center, Building 220-12E-04
St. Paul, MN 55144

1-800-328-3908
3M.com/Graphics

© 3M 2022. All rights reserved.

3M and DI-NOC are trademarks of 3M. Used under license by 3M subsidiaries and affiliates.

All other trademarks are property of their respective owners.

Revision C, January 2022 Please recycle.

