


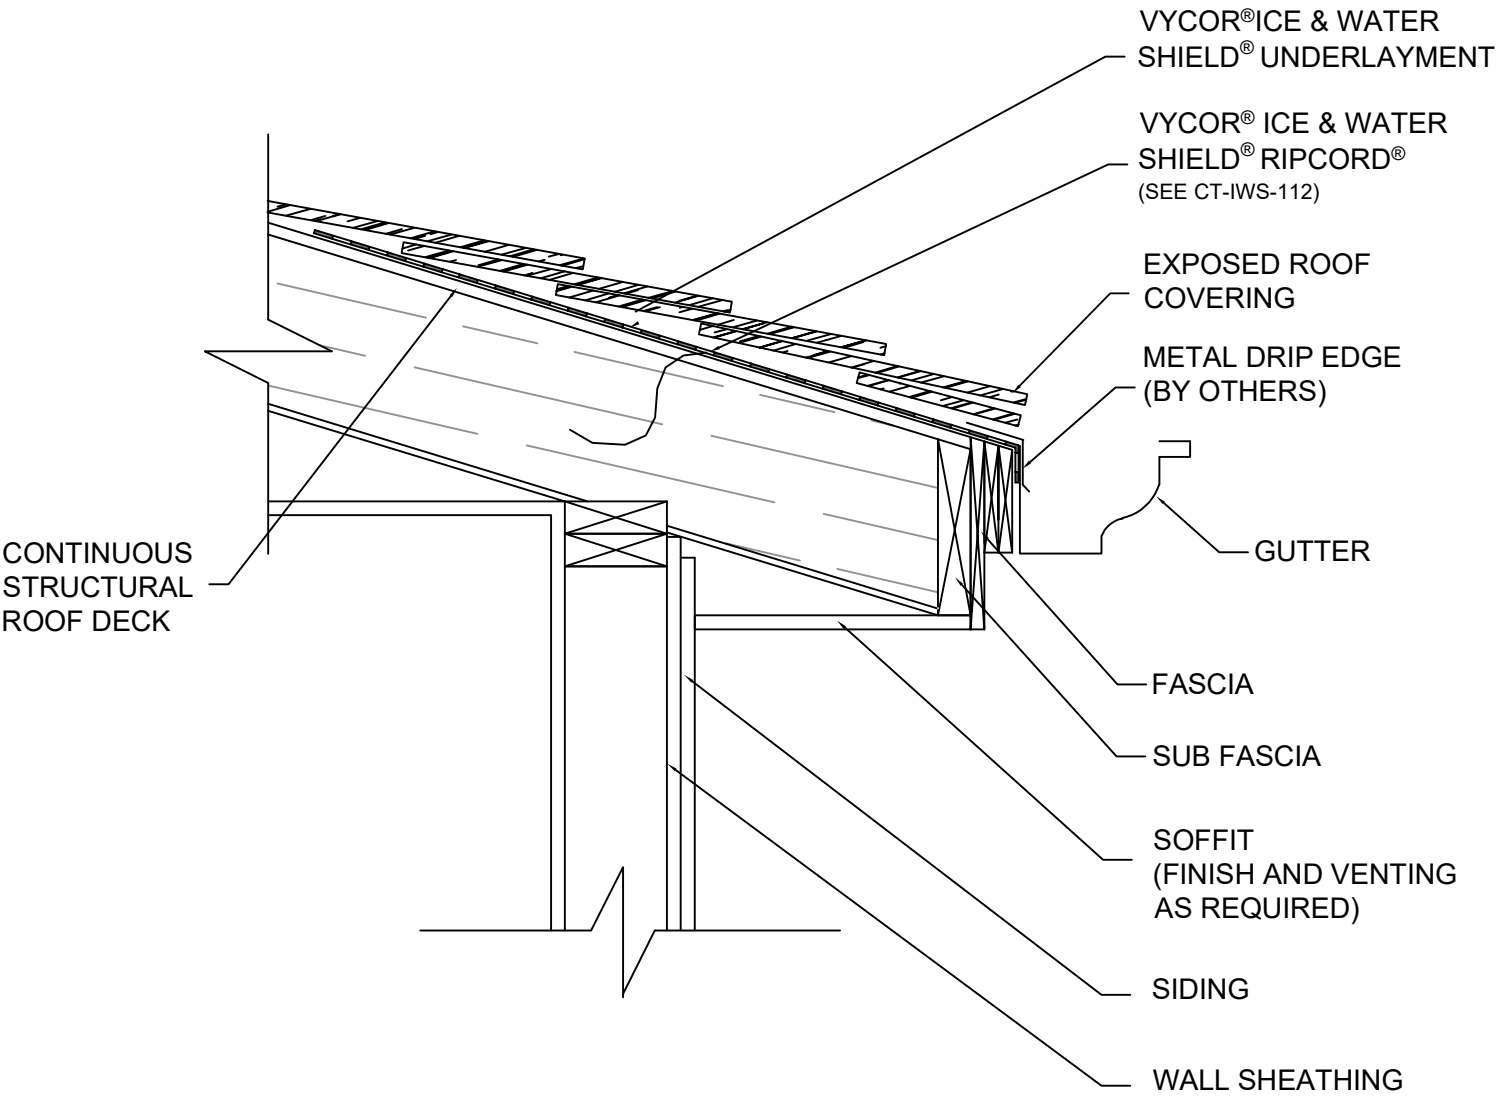

NOTES:

- A. VISIT [CERTAINTEED.COM](https://www.certainteed.com) FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- B. REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- C. RIPCORD® HAS BEEN REMOVED ALONG EDGE OF ROOF FOR EASE OF INSTALLATION OF EXTENDED FASCIA BOARD(S)
- D. THE DRIP EDGE IS INSTALLED OVER THE FIRST LAYER OF INSTALL VYCOR® ICE & WATER SHIELD® UNDERLAYMENT
- E. INSTALL VYCOR® ICE & WATER SHIELD® UNDERLAYMENT TO FORM WATER-SHEDDING LAPS
- F. REPAIR ALL HOLES LEFT FROM REMOVAL OF TOE BOARDS, ROOF JACKS, ETC.