


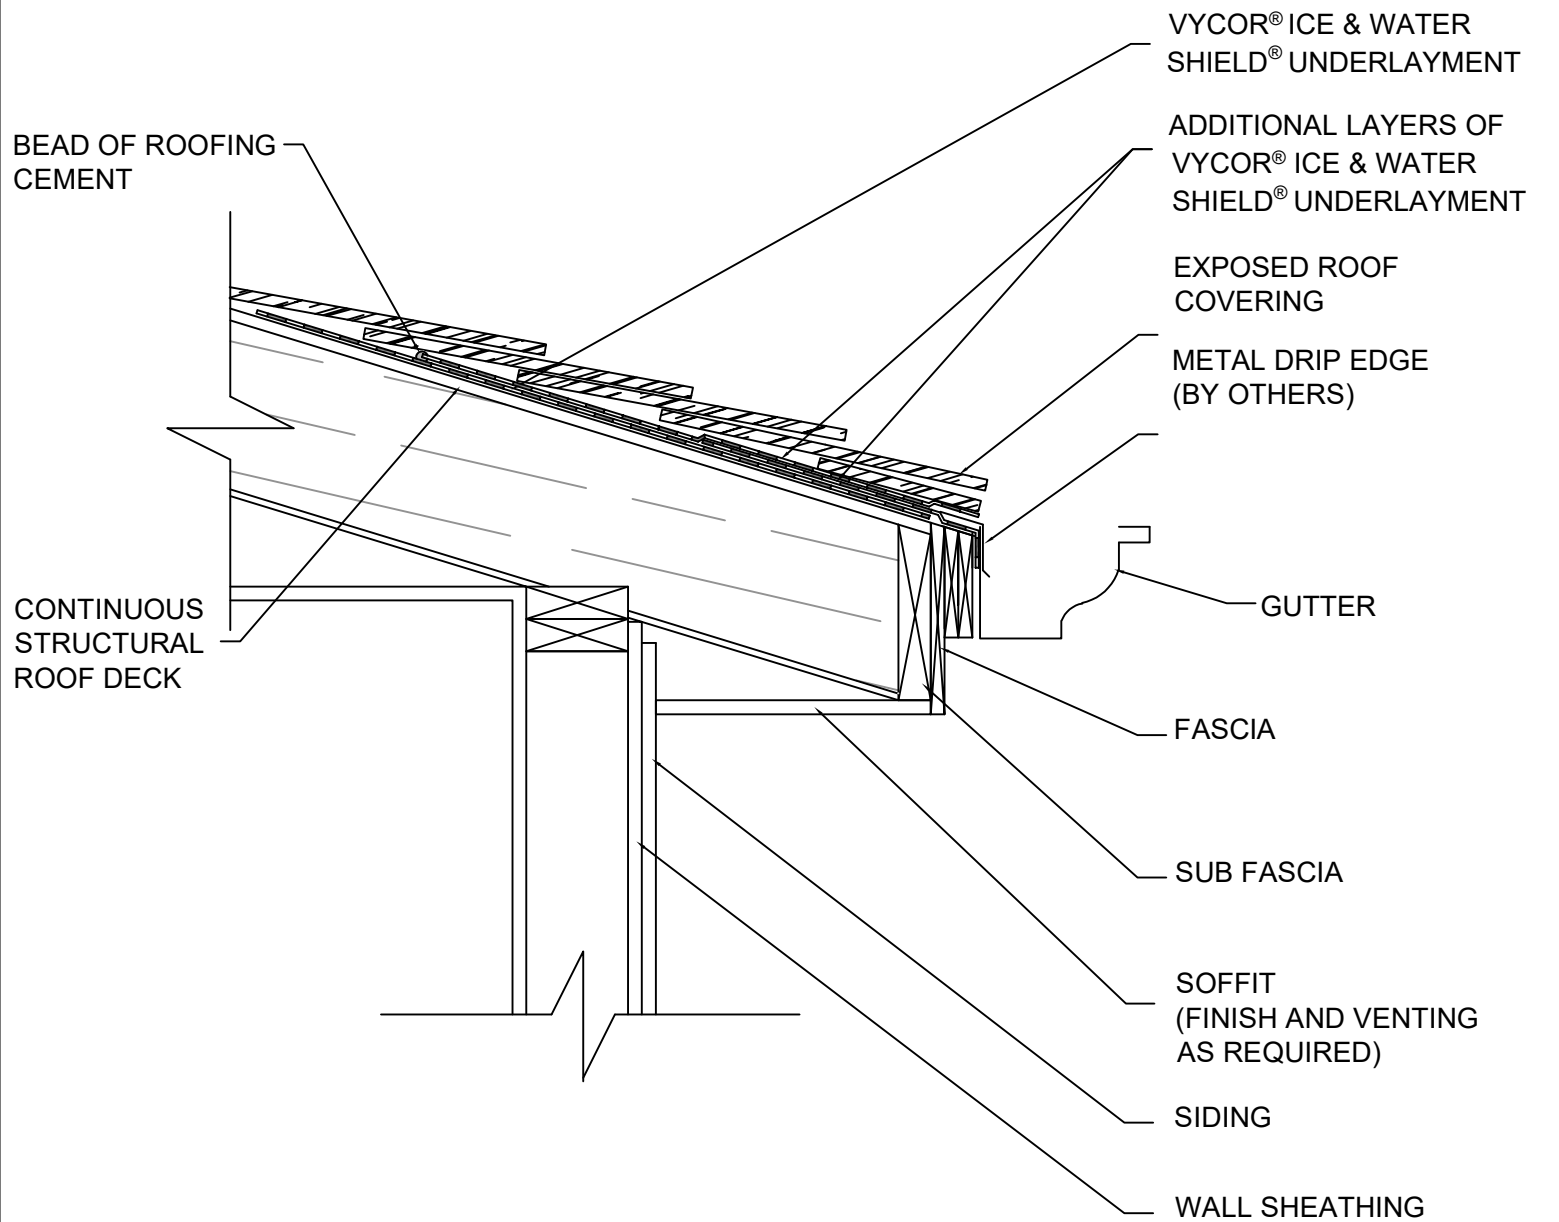

NOTES:

- A. VISIT [CERTAINTEED.COM](https://www.certainteed.com) FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- B. REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- C. THE DRIP EDGE IS INSTALLED OVER THE FIRST LAYER OF VYCOR® ICE & WATER SHIELD® UNDERLAYMENT
 1. A SECOND LAYER OF VYCOR® ICE & WATER SHIELD® UNDERLAYMENT IS INSTALLED OVER THE DRIP EDGE
- D. SEAL NON-WATER SHEDDING LAP WITH A BEAD OF ROOF CEMENT
- E. INSTALL REMAINING VYCOR® ICE & WATER SHIELD® UNDERLAYMENT TO FORM WATER-SHEDDING LAPS
- F. REPAIR ALL HOLES LEFT FROM REMOVAL OF TOE BOARDS, ROOF JACKS, ETC.



EAVE OPTION-3
EXTENDED PERIMETER FOR EXISTING CONSTRUCTION
VYCOR® ICE & WATER SHIELD®

Drawing: CT-IWS-103

Scale: Not to scale

Effective Date: 11/01/2025

Supersedes: 06/25/2024