


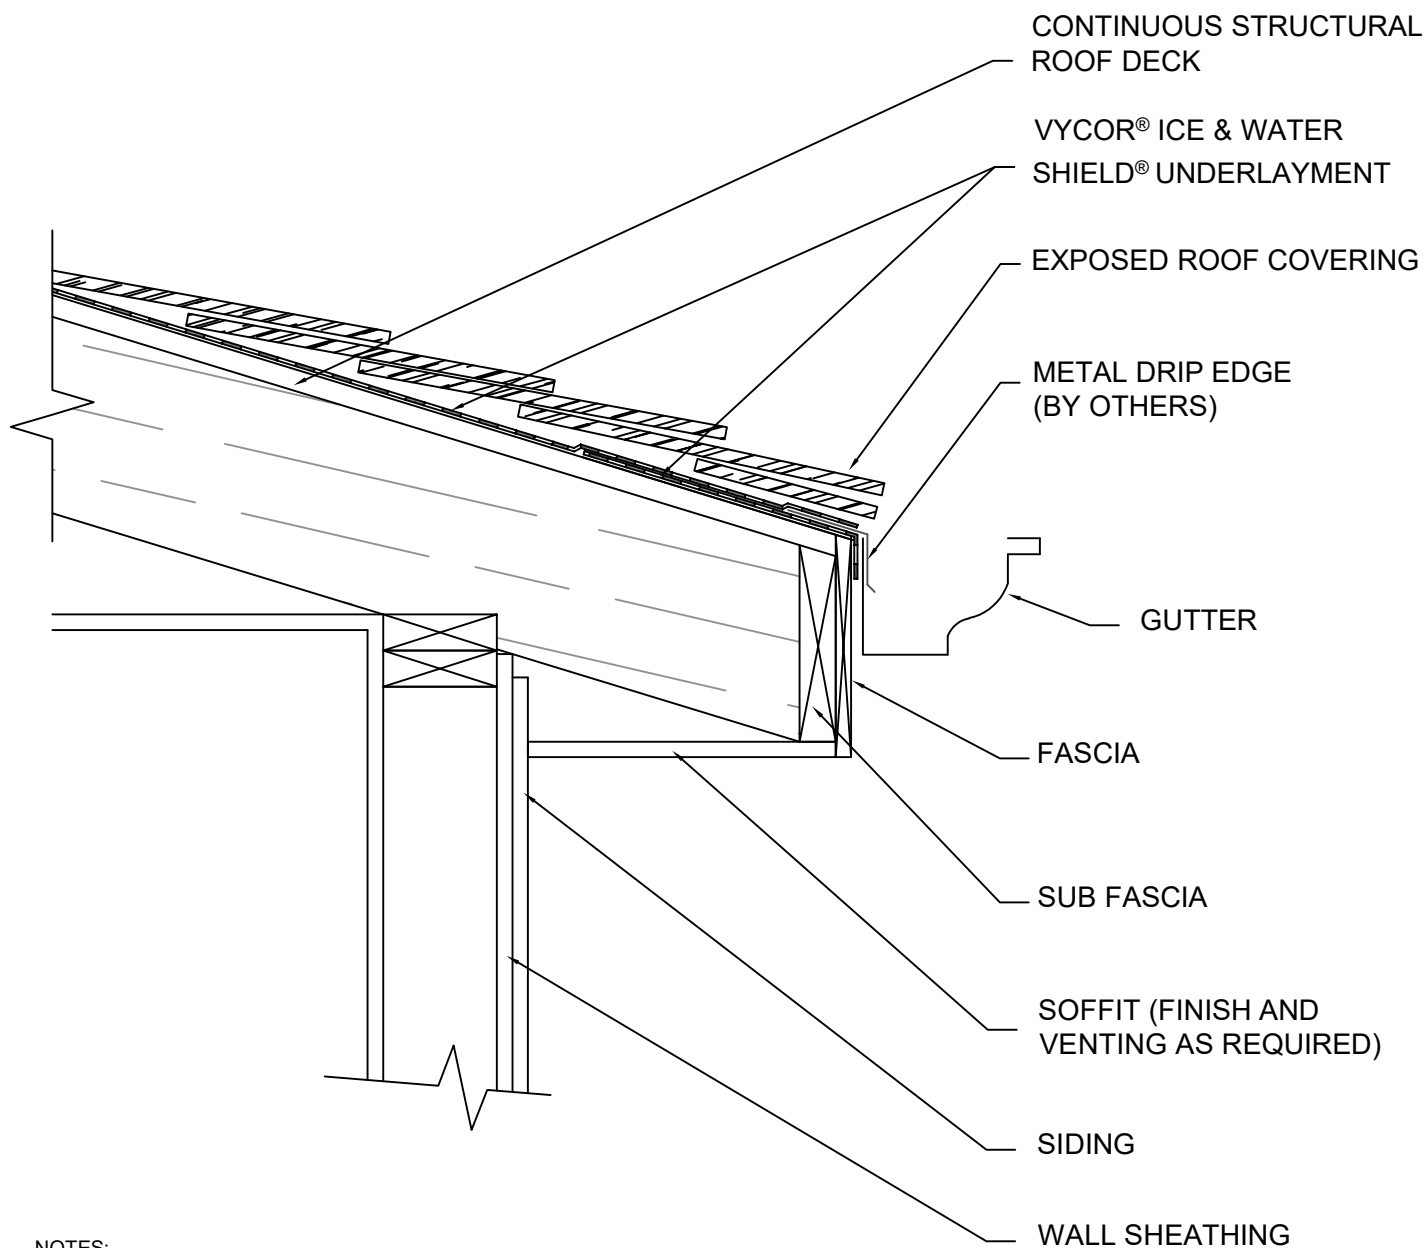

NOTES:

- A. VISIT [CERTAINTEED.COM](https://www.certainteed.com) FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- B. REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- C. THE DRIP EDGE IS INSTALLED OVER THE FIRST LAYER OF VYCOR® ICE & WATER SHIELD® UNDERLAYMENT
- D. DO NOT INSTALL VYCOR UNDERLAYMENT OVER CEDAR SHINGLES (REFER TO TECHNICAL LETTER #15)
- E. A SECOND LAYER OF VYCOR® ICE & WATER SHIELD® UNDERLAYMENT IS INSTALLED OVER THE DRIP EDGE
- F. INSTALL VYCOR® ICE & WATER SHIELD® UNDERLAYMENT TO FORM WATER-SHEDDING LAPS
- G. REPAIR ALL HOLES LEFT FROM REMOVAL OF TOE BOARDS, ROOF JACKS, ETC.