


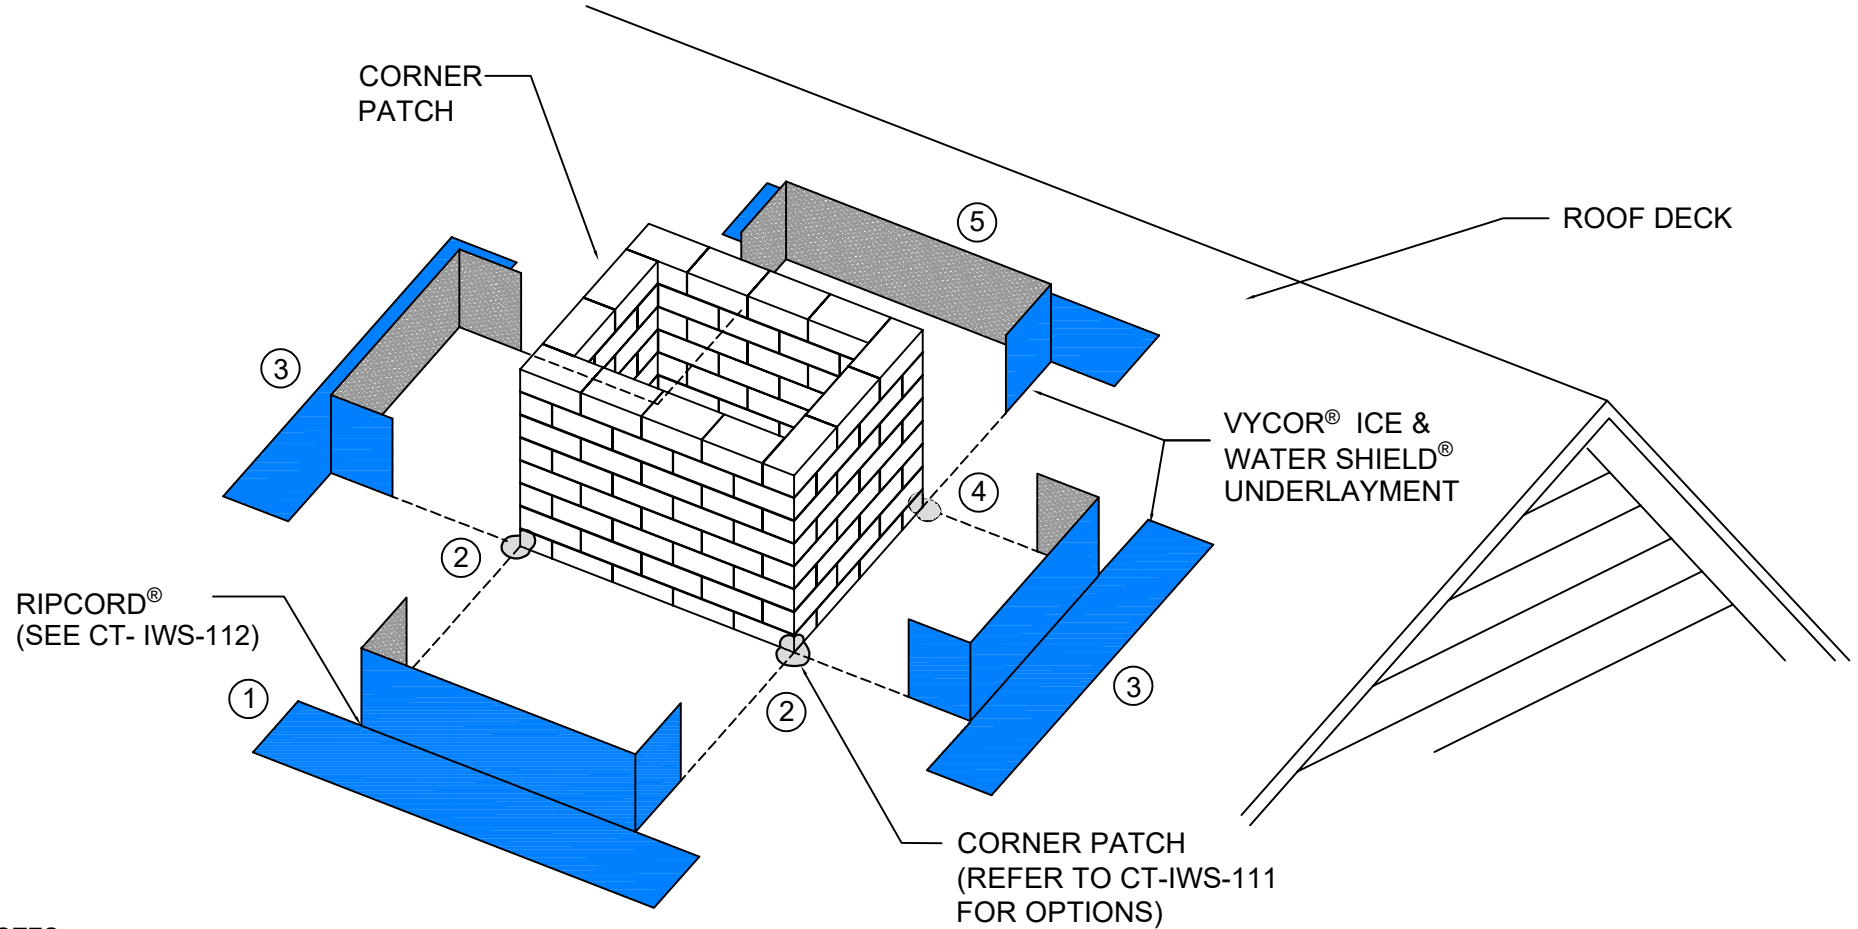

NOTES:

- A. VISIT CERTAINTEED.COM FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- B. REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- C. PRIME MASONRY CHIMNEY WITH PERM-A-BARRIER® WB PRIMER AS NECESSARY
- D. RIPCORD® HAS BEEN REMOVED ALONG ROOF AND CHIMNEY FOR EASE OF INSTALLATION
- E. INSTALL VYCOR® ICE & WATER SHIELD® UNDERLAYMENT IN ORDER AS SHOWN BY NUMBERS
- F. APPLY A BEAD OF COMPATIBLE SEALANT ALONG THE TOP TERMINATION EDGE OF VYCOR® ICE & WATER SHIELD® UNDERLAYMENT ON CHIMNEY
- G. EXTEND VYCOR® ICE & WATER SHIELD® UNDERLAYMENT FROM EAVE TO BELOW CHIMNEY AND FROM ABOVE CHIMNEY TO RIDGE
- H. INSTALL VYCOR® ICE & WATER SHIELD® UNDERLAYMENT TO FORM WATER-SHEDDING LAPS
- I. REFER TO NRCA OR SMACNA FOR METAL COUNTERFLASHING AND ROOFING OPTIONS AT CHIMNEY
- J. FOR WOODEN CHIMNEY, REFER TO DETAILS CT-IWS-105 AND CT-IWS-106