



VALLEY

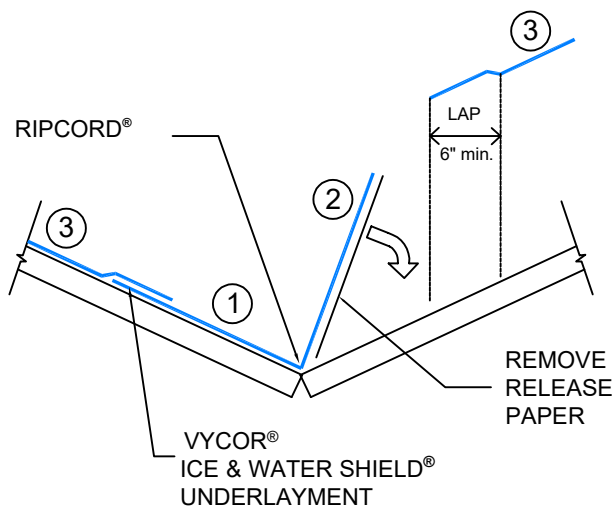


- INSTALL IN ORDER AS SHOWN BY NUMBERS
- ENGAGE RIPCORD® TO SPLIT RELEASE PAPER
- ALIGN & INSTALL VYCOR® ICE & WATER SHIELD® UNDERLAYMENT OVER VALLEY
- REFER TO NRCA OR SMACNA FOR VALLEY METAL FLASHING AND ROOF COVERING OPTIONS

EAVE: VYCOR® ICE & WATER SHIELD® UNDERLAYMENT PRIOR TO FASCIA

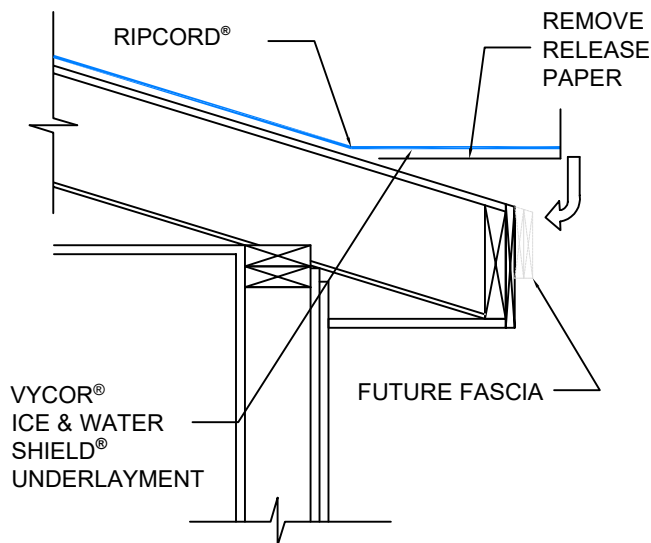

- ENGAGE RIPCORD TO SPLIT RELEASE PAPER
- ALIGN VYCOR® ICE & WATER SHIELD® UNDERLAYMENT ALONG EAVE
- REMOVE RELEASE PAPER FROM UPPER HALF OF VYCOR® ICE & WATER SHIELD® UNDERLAYMENT AND APPLY TO ROOF DECK
- REMOVE RELEASE PAPER ALONG EAVE AFTER FASCIA IS INSTALLED OR FOR FUTURE TIE-IN

FRONT WALL TO ROOF DECK

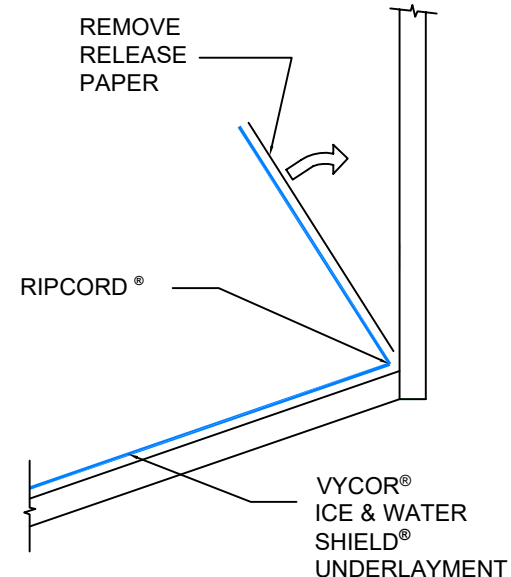

- ENGAGE RIPCORD® TO SPLIT RELEASE PAPER
- REMOVE RELEASE PAPER FROM GCP UNDERLAYMENT AND APPLY TO ROOF DECK
- REMOVE REMAINING RELEASE PAPER AND APPLY TO WALL
- EXTEND VYCOR® ICE & WATER SHIELD® UNDERLAYMENT ON THE WALL SHEATHING ABOVE THE HIGHEST EXPECTED LEVEL OF SNOW AND ICE

NOTES:

- VISIT CERTAINTEED.COM FOR THE MOST CURRENT DETAILS AND INSTALLATION VIDEO
- REFER TO PRODUCT DATA SHEETS ON WEB SITE FOR FURTHER INFORMATION
- RIPCORD® HAS BEEN REMOVED FOR EASE OF INSTALLATION