

KOHLER[®]

TELLIEUR[™] BASES

INSTALLATION INSTRUCTIONS

MATERIALS NEEDED:

- Level
- Drill
- Measuring Tape
- Pencil
- Safety Glasses
- Fasteners (see **steps 8. & 9.**)

BEFORE YOU BEGIN

1.

Unpack the storage case and any accessories, and inspect for damage.


INSTALLATION TO A FREE-STANDING BASE

2.

Carefully turn the storage case over so the bottom of the storage case is facing up.

Place the base upside down onto the storage case.

Make sure the edges of the back legs are flush with the back and sides of the storage case.

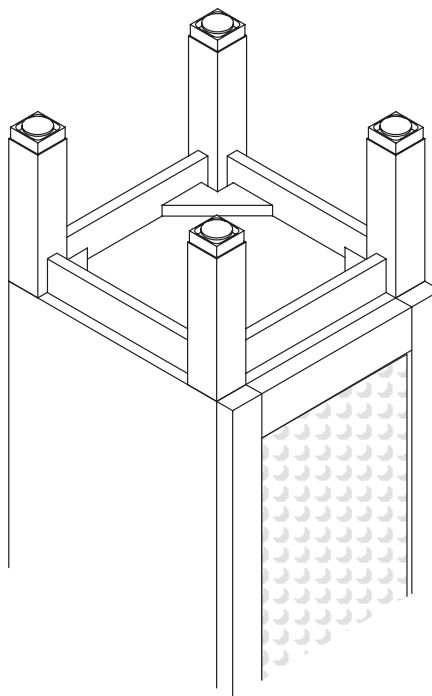


3.

Insert screws into the holes in the corner brackets of the base.

Secure the base to the storage case.


Carefully turn the assembly right-side up and position where desired.

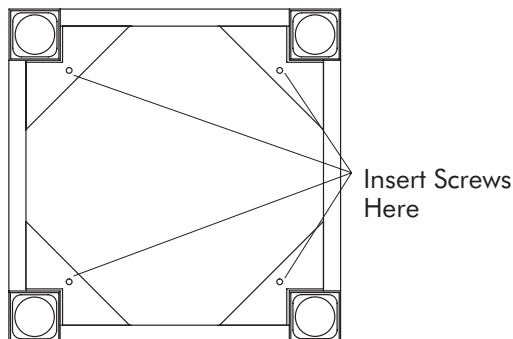

4.

Verify that the storage case is level, both front-to-back and side-to-side. If the storage case is not level, adjust by turning the leveling feet as needed.

Make sure the storage case is supported by all four feet and does not rock.

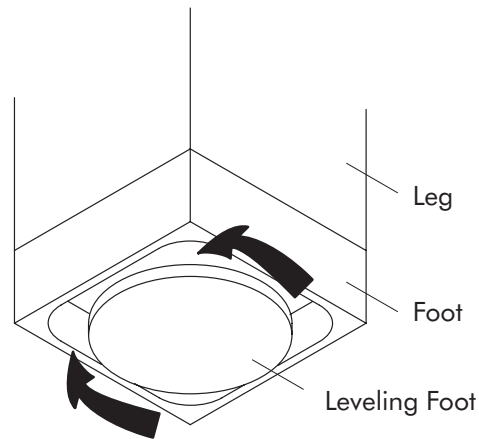


INSTALLATION TO A WALL-MOUNT BASE

5.

Carefully turn the storage case over so the bottom of the storage case is facing up.

Place the base upside down onto the storage case with the two legs toward the front of the cabinet.

Make sure the edges of the front legs are flush with the front and sides of the storage case.

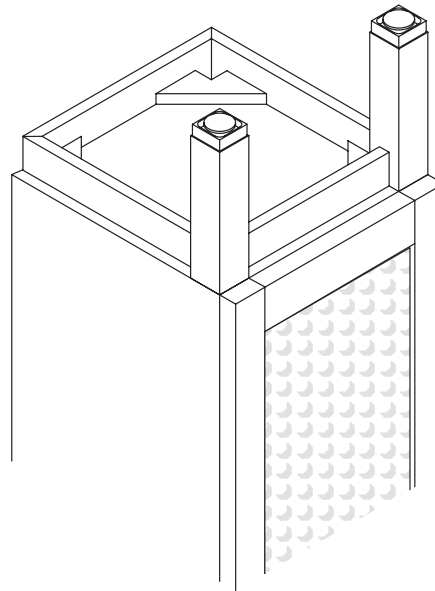


6.

Insert screws into the holes in the corner brackets of the base.

Secure the base to the storage case.


Carefully turn the assembly right side up and position against the wall where it is to be installed.

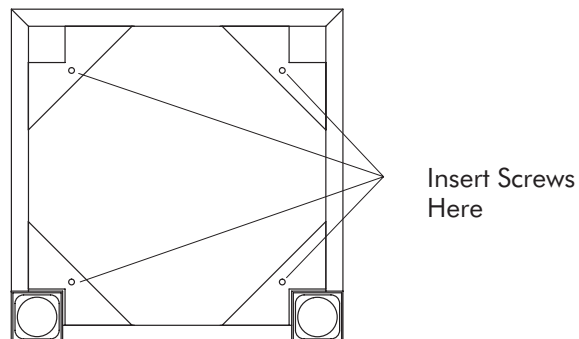

7.

Verify that the storage case is level, both front-to-back and side-to-side. If the storage case is not level, adjust by turning the leveling feet as needed.


Make sure the storage case is supported by both feet and does not rock.

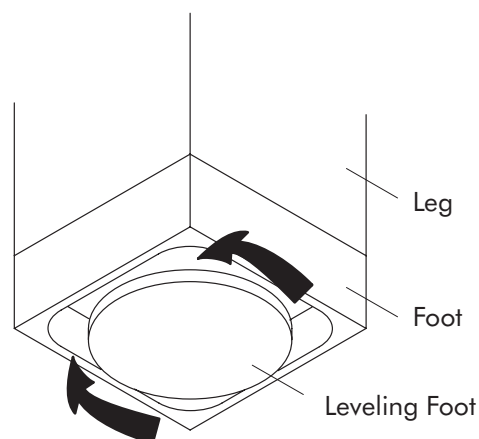

8.

Drill at least one hole through the back rail of the base and into the wall.

Secure with a fastener (not provided).

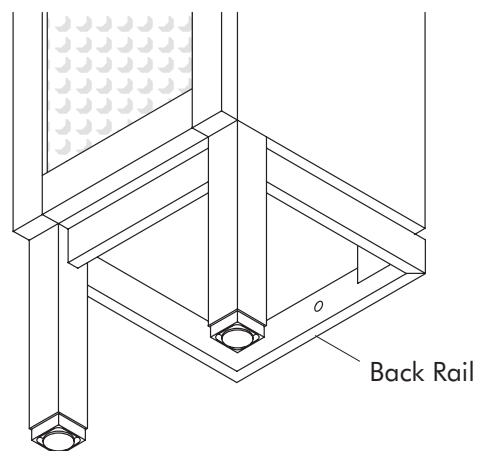


9.

Measure down 3/4" from the top inside edge of the storage case and 3" in from either side.

Drill a hole at each location through the back of the box, bottom cleat, and into the wall. Make sure the drill is of adequate diameter to accommodate fasteners (not provided).

Secure storage case to wall with fasteners (not provided).

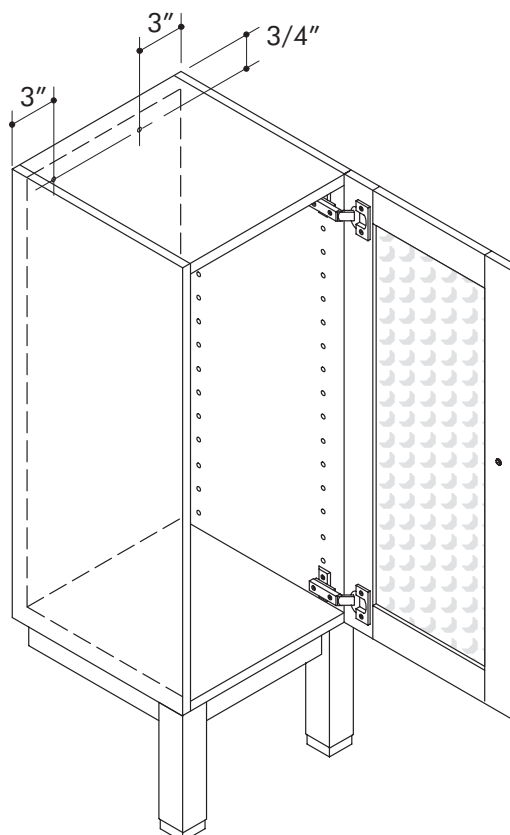

STACKING MULTIPLE UNITS

10.



CAUTION: RISK OF PERSONAL INJURY OR PRODUCT

DAMAGE. The following cautions apply to stacking on freestanding bases.

-  The higher units are stacked, the more unstable the assembly becomes.
-  If units are utilized in a manner where most of the weight is placed in the upper part of the cabinet the units may become unstable.
-  If units are stacked above 60" high the assembly becomes very unstable.

NOTE: When stacking units on wall-mount bases, make sure to secure each cabinet to the wall.


NOTE: Only the case drawers may be stacked with the storage cases or other case drawers. The case drawers have two equal sized drawer compartments.

Stack the two units on top of one another. Make sure units are square to each other.

Measure in from the front edge of the top unit approximately 1" and approximately 1" from either side. Mark each location.

Drill a hole at each mark through the top of the bottom unit and approximately 1/4" into the bottom of the top unit. Do not drill completely through the bottom of the top unit. Make sure to use a drill of adequate diameter to accommodate fasteners (not provided).

Secure with fasteners (not provided).

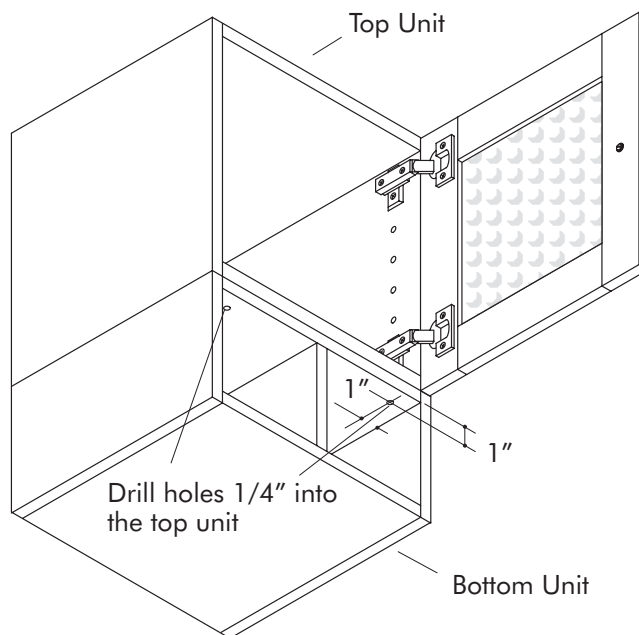

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance in the USA, call our Customer Service Department for direct help. You may also contact us at our web site.

THE BOLD LOOK
OF **KOHLER**®

1-800-4-KOHLER
www.kohlerco.com