


K-3082, K-3083, K-3089, K-3090 **PURIST**TM **MIRROR CABINET**

Product Information


Required Accessory:	
End Cap Kit (shown installed)	K-3094

Installation Notes

Install this product according to the installation guide.

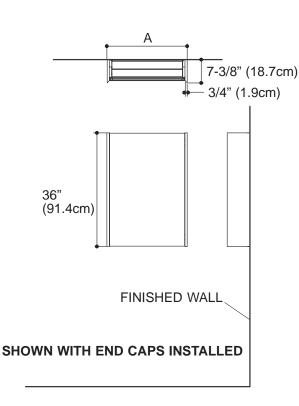

	А
K-3082 & K-3083	13-1/2" (34.3cm)
K-3089 & K-3090	25-1/2" (64.8cm)

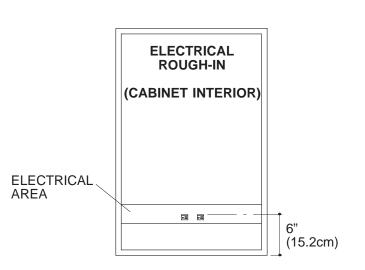

K-3082, K-3083, K-3089, K-3090 Purist™ Mirror Cabinet 1010988-1-**A**

