Installation Guide

Kitchen Accessories

K-9110, K-9111



M product numbers are for Mexico (i.e. K-12345M) Los números de productos seguidos de M corresponden a México (Ej. K-12345M) Français, page" Français-1" Español, página" Español-1"



1043942-2-A

Tools and Materials



Blade Screwdriver




Hose Clamps

Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and web site are listed on the back cover. Thanks again for choosing Kohler Company.

Before You Begin

□ Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

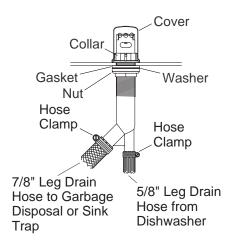

1. Install the Air Gap

NOTE: If your sink does not have an unused hole for mounting the air gap body, bore a hole 1-3/8" (3.5 cm) in diameter next to the sink using an electric drill and hole saw.

- □ Remove the cover and collar from the top of the air gap body. Leave the gasket, washer, and nut threaded to the bottom of the air gap body.
- \Box Attach the 5/8" (1.6 cm) drain hose from the dishwasher to the 5/8" (1.6 cm) leg. Secure with a stainless steel hose clamp.
- \Box Attach the 7/8" (2.2 cm) drain hose from the garbage disposal or side inlet piece of the sink trap to the 7/8" (2.2 cm) leg. Secure with a stainless steel hose clamp.
- □ Push the air gap body up through the unused hole of the sink rim or countertop. Approximately 2-1/4″ (5.7 cm) of the air gap body should appear above the sink rim or countertop.
- □ Securely tighten the nut and collar against the sink rim or countertop. Place the cover over the air gap body.

Kohler Co. 3 1043942-2-A

USA: 1-800-4-KOHLER Canada: 1-800-964-5590 México: 001-877-680-1310

kohler.com



1043942-2-A