

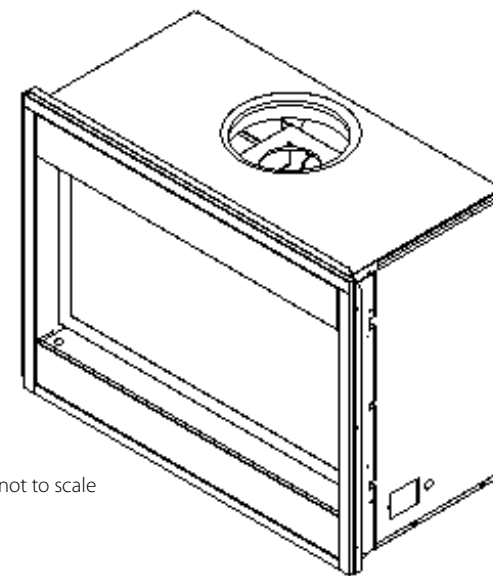
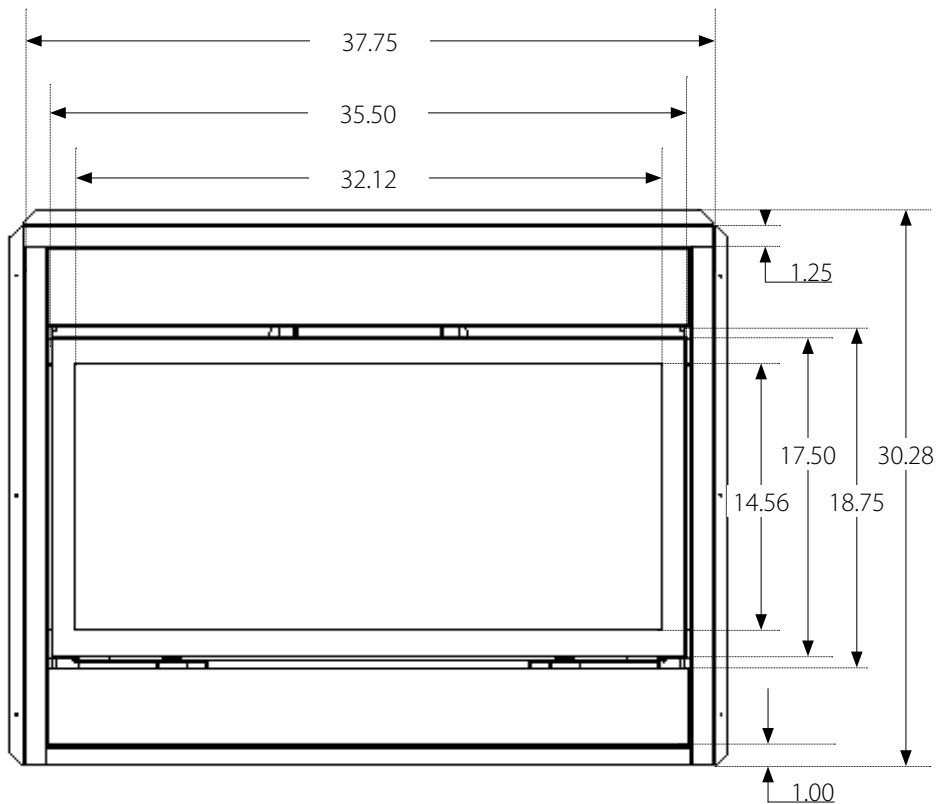




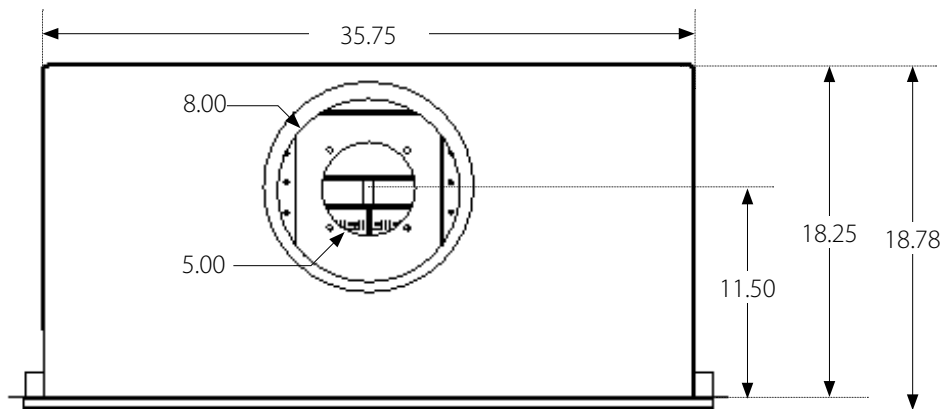


all dimensions in inches, not to scale

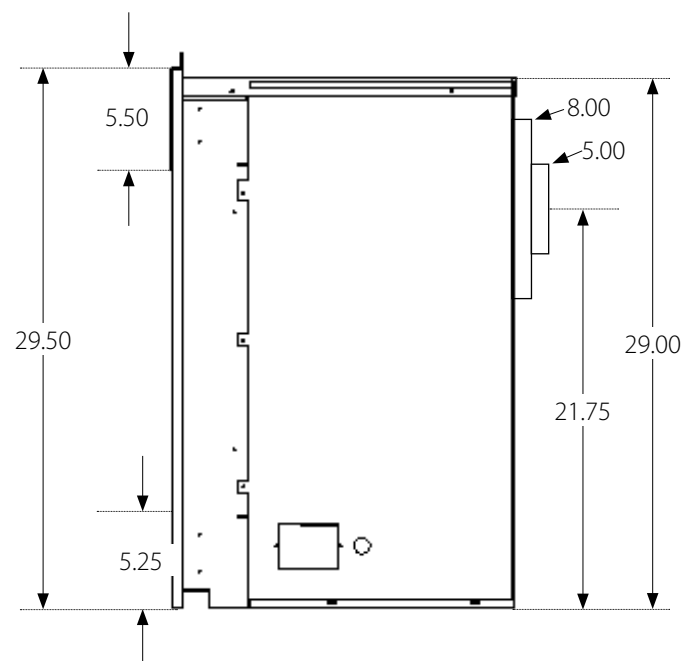

This information is for reference only. Please consult the Installation Manual for all details prior to making any design decisions.

- May be vented through the top (default) or rear of the cabinet.
- The minimum vent run is via the rear of the cabinet for no more than 12 inches.
- Vent rise and run must intersect in a white graph square, below. (Top vent graph shown, see Installation Manual for rear vent and multi-elbow graphs.)
- A power venting option is available for "off-the-chart" applications.

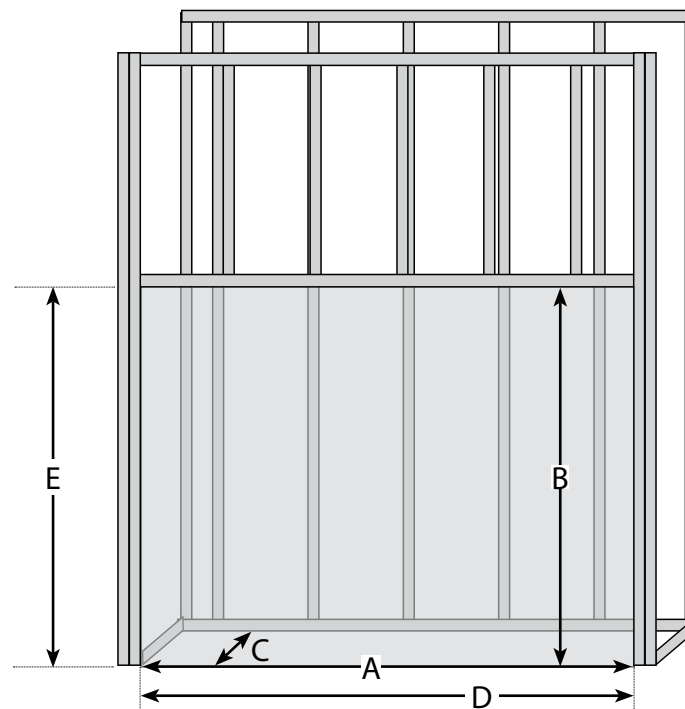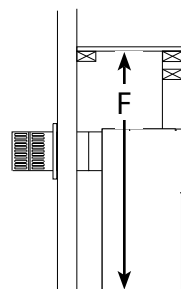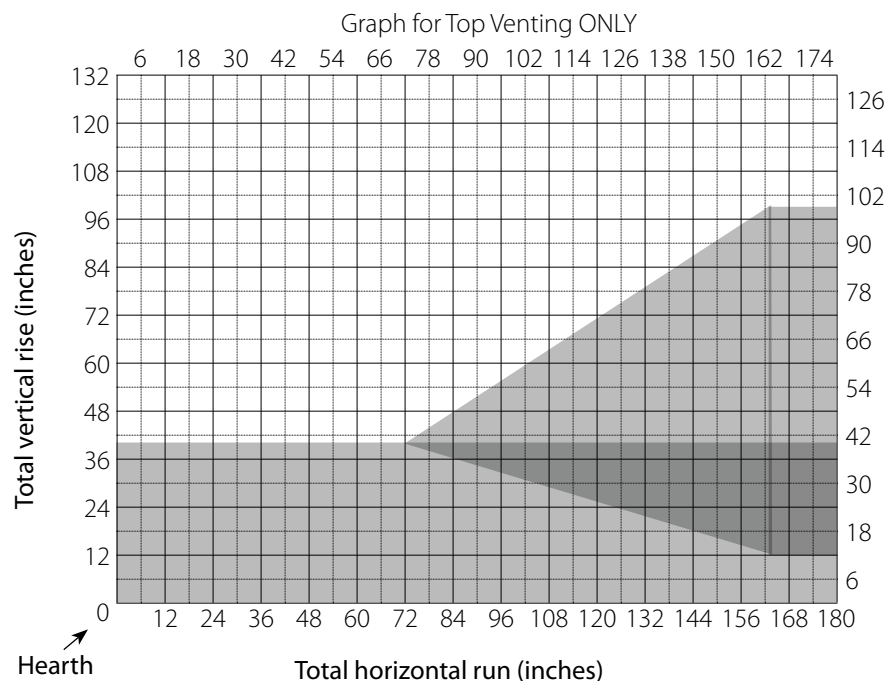

A	Rough Opening Width	38"
B	Rough Opening Height	35¼"
C	Rough Opening Depth	20⅞"
D	Non-combustible Zone Width	37¾"
E	Non-combustible Zone Height	35½"
F	Minimum Height to Chase Ceiling	38"

all dimensions in inches, -0.0