4400 Bear Series

Model	Description	Overall Dimensions					Specific Dimensions														
		Width		Depth		Height		Back Height		Seat Height		Back Width		Seat Depth		Seat Width		Weight		Volume Reg/K.D.	
		(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(lbs.)	(kg.)	(cu.ft.)	(cu.mt.)
4400D	High Back Task	24-27	609-685	26	660	38-441/2	965-1130	201/2-221/2	520-571	171/2-23	444-584	20	508	19	482	21	533	62	28	14 / 9.6	0.48 / 0.27
4400	Mid Back Task	24-27	609-685	26			901-1104		482-533	171/2-23	444-584	191/2	495	18	457	191/2	495	59	27	12.5 / 9.6	0.35 / 0.27
4450	Low Back Task	231/2-261/2	597-673	26	660	331/2-391/2	850-1003	181/2-201/2	470-520	16-20	406-508	183/4	476	171/2	444	191/2	495	57	26	12.5 / 9.6	0.35 / 0.27
4401	Guest-Armchair	211/2	546	26	660	33	838	15	381	18	457	18	457	18	457	181/2	470	25	11	11	0.31

Standard Features •

- Swivel tilt mechanism (4400D, 4400, 4450) (Type 17) Infinite position swivel tilt lock, back angle adjustment, pneumatic height adjustment, 6° forward tilt, back height adjustment, tension control. Molded seat foam and high resiliency back foam for comfort and durability (4400D, 4400, 4450).
- Wood seat and back contoured for correct lateral support.
- Protective back bumper guard on the outside back.
- Lever operated horizontal and height adjustable arms with tear drop polyurethane arm pads. (Type HA) (4400D, 4400, 4450)
- Guest Armchair oval steel frame (4401) finished with high impact, textured, black Crinkle epoxy powder coat electrostatically applied for corrosion resistance.
- Waterfall seat design to reduce muscle fatigue.
- California fire code #117.
- 5 prong heavy duty nylon base.
- dual wheel carpet casters.
- Finish mechanism, arms, base, casters and trim available in black only.
- ANSI/BIFMA.

	Adju	stable Arm	Arms Pads	Arm Pad	Misc.			
Model	Description To specify any option(s) simply add the suffix(s) to the model number. (ie) 4400D-HP	Elongated Pad - HP	Semi-Loop Pad - HASL	Swing Arm Pad - HY	Loop Arm - HL	Gel Arm Pad - GE	Enersorb Foam Seat - E	Soft Wheel Casters - TC
4400D	High Back Task	0	0	0	0	0	0	0
4400	Mid Back Task	0	0	0	0	0	0	0
4450	Low Back Task	0	0	0	0	0	0	0
4401	Guest-Armchair							

Option - Enersorb Foam Seat



Reduces sitting fatigue

- · Creates a high comfort factor by providing evenly distributed support
- User does not sit on top, but sits into the
- Dispenses weight horizontally and vertically



This adjustable arm pad was designed and developed to help relieve tension and pressure on the hand, wrist and forearm that can lead to "Carpel Tunnel Syndrome" and related problems.

Arms & Arm Pads



Type HP Lever operated height & width adjustable arms with polyurethane elongated arm



Type HASL Lever operated height & width adjustable arms with semi-loop



Type HY Lever operated height & width adjustable arms polyurethane swing arm pad



Type HL Lever operated height & width adjustable arms with polyurethane loop arm pad.




Type GE Gel arm pads. A unique silicone gel fully encapsulated in polyurethane,



Type HA Lever operated height & width tear drop arm

Mechanism User Guide

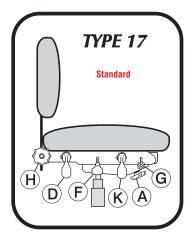

- (A) Tension Knob
 - Turn clockwise to increase tension, turn counterclockwise to decrease tension.
- Back Angle Adjustment
 - While seated, pull paddle up, when desired angle is achieved push paddle down to lock.
- F) Pneumatic Height Adjustment
 - To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.
- - Lean back in chair and roll or turn lever back for forward tilt, push or turn lever forward for straight position.
- (H) Back Height Adjustment
 - Turn knob counter-clockwise to loosen, lift or lower chair back to desired position and re-tighten.
- (K) Infinite Position Tilt Lock
 - To lock chair in position, push paddle down, to allow free movement, pull paddle up.

General Information:

- Soft wheel casters should be specified for hard floor surfaces.
- Upholstery All models 2 yds / chair
- · Patented
- Fabric Selection To specify simply add the suffix provided on the fabric card swatch of your choice to the chair model number (ie) 4400 -E01 (Epic Expresso)

Nightingale Inc.

2301 Dixie Road, Mississauga, Ontario, Canada L4Y 1Z9 Tel: (905) 896-3434 Toll Free: 1-800-363-8954 Fax: (905) 896-7011 Toll Free: 1-800-637-6784 E-mail: info@nightingalechairs.com Website: www.nightingalechairs.com

Showrooms in

• Toronto • Vancouver

Montreal