

# 3200 Edge Series

Model	Description	Overall Dimensions						Specific Dimensions													
		Width		Depth		Height		Back Height		Seat Height		Back Width		Seat Depth		Seat Width		Weight		Volume Reg./K.D.	
		(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(in.)	(mm.)	(lbs.)	(kg.)	(cu.ft.)	(cu.mt.)
3200D	High Back Task	28	711	27	685	40-47 1/2	1016-1206	24 1/2-26 1/2	6220-673	17 1/2-23	444-584	20	508	20	508	21 1/2	546	57	26	17 / 9.6	0.48 / 0.27
3200	Mid Back Task	27	685	24	609	34 1/2-42	876-1066	19-21	482-533	17 1/2-23	444-584	19	482	19	482	20 1/2	520	53	24	12 1/2 / 9.6	0.35 / 0.27
3207	Mid Back Task Armless	27	685	24	609	34 1/2-42	876-1066	19-21	482-533	17 1/2-23	444-584	19	482	19	482	20 1/2	520	46	21	12 1/2 / 9.6	0.35 / 0.27
3250	Low Back Task	27	685	24	609	32-40	812-1016	16-18	406-457	17 1/2-23	444-584	18	457	19	482	20 1/2	520	38	17	12 1/2 / 9.6	0.35 / 0.27
3215	Low Back Task Armless	27	685	24	609	32-40	812-1016	16-18	406-457	17 1/2-23	444-584	18	457	19	482	20 1/2	520	34	16	12 1/2 / 9.6	0.35 / 0.27
3207DS	Drafting Stool	27	685	24	609	42 1/2-54 1/2	1079-1384	19-21	482-533	24 1/2-34 1/2	622-876	19	482	19	482	20 1/2	520	45	20	12 1/2 / 9.6	0.35 / 0.27



## Standard Features •

- Swivel tilt mechanism (3200D, 3200) (Type 17) Infinite position swivel tilt lock, back angle adjustment, pneumatic height adjustment, 6° forward tilt, back height adjustment, tension control.
- Swivel tilt mechanism (3250, 3215) (Type 20) single position tilt lock, pneumatic height adjustment, tension control, seat depth adjustment.
- Swivel mechanism (3207DS) (Type 13), Infinite seat angle adjustment with 6° forward tilt, pneumatic height adjustment, back angle adjustment, back height adjustment.
- Waterfall seat design to help reduce muscle fatigue.
- High density seat and back foam.
- Wood seat and back contoured for lateral support and comfort.
- Extra wide seat for 3250 and 3215 for added comfort and support.
- Height adjustable arm with tear drop polyurethane arm pads (Type A) (3200D, 3200).
- Fixed height arms with tear drop polyurethane arm pads. (Type UR) (3250)
- Attractive modern spider design - 5 prong heavy duty nylon base.
- California Fire Code #117.
- 2" dual wheel carpet casters.
- Finish - mechanism, arms, base, casters and trim standard in black.
- ANSI/BIFMA.

## Options - ○

Model	Description	Mechanism	Adjustable Arms with Arm Pads								Arm Pads	Misc.											
			Height Adj.		Height & Width Adj.		Lever Operated Height & Width Adj.		Fixed Loop Arm - LP	Gel Pad - GE			Energorb Foam Seat - E	Soft Wheel Casters - TC	Fire Code #133 - FR								
			Tear Drop Pad - A	Elongated Pad - AP	Semi-Loop Pad - ASL	Swing Arm Pad - YA	Loop Arm - AL	Tear Drop Pad - AA			Elongated Pad - AAP	Swing Arm Pad - YAA				Loop Arm - AAL	Tear Drop Pad - HA	Elongated Pad - HP	Semi-loop Pad - HASL	Swing Arm Pad - HY	Loop Arm - HL		
3200D	High Back Task	○																					
3200	Mid Back Task	○																					
3207	Mid Back Task Armless	○																					
3250	Low Back Task		○	○																			
3215	Low Back Task Armless																						
3207DS	Drafting Stool																						

## Option - Energorb Foam Seat

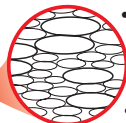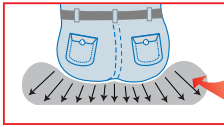

- Reduces sitting fatigue
- Creates a high comfort factor by providing evenly distributed support
- User does not sit on top, but sits into the cushion
- Dispenses weight horizontally and vertically

## Option - Swing Arm





This adjustable arm pad was designed and developed to help relieve tension and pressure on the hand, wrist and forearm that can lead to "Carpel Tunnel Syndrome" and related problems.

## Arms & Arm Pads

 <b>Type A</b> Height adjustable arm with polyurethane tear drop arm pad.	 <b>Type AP</b> Height adjustable arm with polyurethane elongated arm pad.	 <b>Type AL</b> Height adjustable arm with loop arm pad (Black only).	 <b>Type ASL</b> Height adjustable arm with polyurethane semi-loop arm pad.	 <b>Type YA</b> Height adjustable arm with polyurethane swing arm pad (Black only).	 <b>Type AA</b> Height & width adjustable arms with polyurethane tear drop arm pad.
 <b>Type AAP</b> Height and width adjustable arm with polyurethane elongated arm pad.	 <b>Type AAL</b> Height and width adjustable arm with polyurethane loop arm pad.	 <b>Type YAA</b> Height and width adjustable arm with polyurethane swing arm pad.	 <b>Type HA</b> Lever operated height & width adjustable arms with polyurethane tear drop arm pad.	 <b>Type HP</b> Lever operated height & width adjustable arms with polyurethane elongated arm pad.	 <b>Type HL</b> Lever operated height & width adjustable arms with polyurethane loop arm pad.
 <b>Type HY</b> Lever operated height & width adjustable arms with polyurethane swing arm pad.	 <b>Type HASL</b> Lever operated height & width adjustable arms with semi-loop arm pad.	 <b>Type LP</b> Polyurethane loop arm, steel reinforced (Black only).	 <b>Type GE</b> Gel arm pads. A unique silicone gel fully encapsulated in polyurethane.	 <b>Type UR</b> Fixed height arm with polyurethane tear drop arm pad.	

## Mechanism User Guide

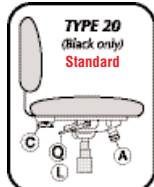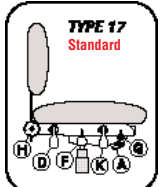

- (A) Tension Knob**  
Turn clockwise to increase tension, turn counter-clockwise to decrease tension
- (C) Seat Depth Adjustment**  
Loosen hand wheel (do not remove) and slide back to desired position, then re-tighten hand wheel.
- (D) Back Angle Adjustment**  
While seated, pull paddle up, when desired angle is achieved push paddle down to lock.
- (F) Pneumatic Height Adjustment**  
To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.
- (G) Forward Tilt**  
Lean back in chair and roll or pull lever back for forward tilt, push or roll lever forward for straight position.
- (H) Back Height Adjustment**  
Turn knob counter-clockwise to loosen, lift or lower chair back to desired position and re-tighten.

- (I) Infinite Seat Angle Adjustment with 6° Forward Tilt**  
To change seat angle, pull paddle up while seated, push paddle down to lock when desired angle is achieved.
- (K) Infinite Position Tilt Lock**  
To lock chair in position, push paddle down, to allow free movement, pull paddle up.
- (M) Seat Slider**  
While seated, pull knob out, push seat to desired depth and release knob to lock. Locks in 6 positions over 3 inches.
- (L) Single Position Tilt Lock**  
Push lever into lock chair in forward position, pull lever out to unlock.
- (Q) Pneumatic Height Adjustment**  
To lower, turn paddle while seated. To raise, turn paddle with your weight off seat.

## General Information:

- Soft wheel casters should be specified for hard floor surfaces.
- Upholstery All models 2 yds / chair
- Fabric Selection To specify simply add the suffix provided on the fabric card swatch of your choice to the chair model number (ie) 3200 -E01 (Epic Expresso)

## Nightingale Inc.

2301 Dixie Road, Mississauga, Ontario, Canada L4Y 1Z9  
Tel: (905) 896-3434 Toll Free: 1-800-363-8954  
Fax: (905) 896-7011 Toll Free: 1-800-637-6784  
E-mail: info@nightingalechairs.com  
Website: www.nightingalechairs.com

## Showrooms in

- Toronto
- Vancouver
- Montreal