


Installation Instructions

Flush Mount Corner Guards

Models: 150F, 160F, 170F, 130F, G150F, G130F


FIG. 1

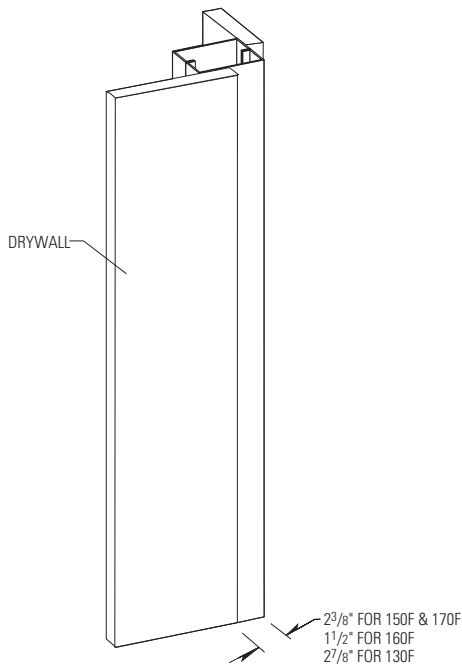

Please read all instructions before installing corner guards.
Material must be stored, installed and used in environmentally controlled conditions.

1. From the corner of the stud, drywall must be installed back:
2³/₈" (60mm) back for models 150F, 170F and G150F
1¹/₂" (38mm) back for model 160F
2⁷/₈" (73mm) back from the imaginary apex where the steel studs would intersect to form a 135° corner for models 130F and G130F.
See Figure 1.
2. Position aluminum retainer in the recess formed by the drywall with mounting flange of retainer resting over edge of drywall. If using aluminum cove base retainer, snap it on the aluminum retainer before attaching retainer to stud. Screw retainer to stud through the pre-punched holes on the mounting flange.
See Figure 2.

FIG. 2

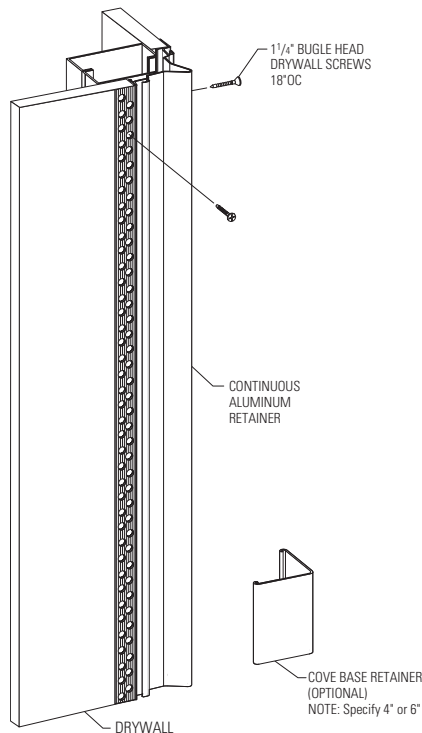

IPC.405/REV.3

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556


INPRO
IPC Interior Protection Products
and Decorative Surfaces

Installation Instructions

Flush Mount Corner Guards

Models: 150F, 160F, 170F, 130F, G150F, G130F

FIG. 3

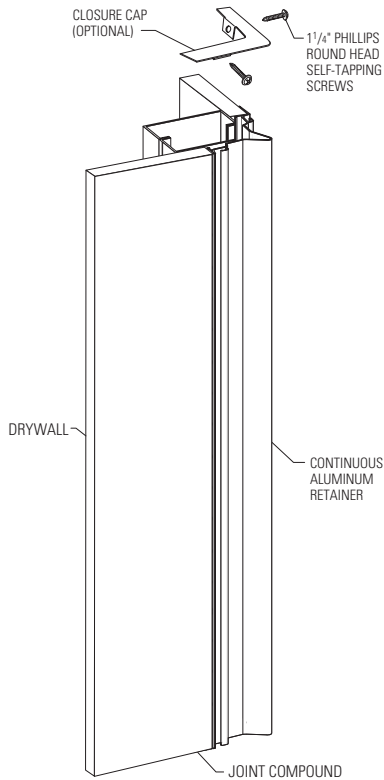


3. Cover mounting flange with joint compound. Feather and finish with surface of drywall. See Figure 3.

Note: When installing at less than ceiling height, use optional closure cap or standard drywall trim to finish the top edge. **OPTIONAL CLOSURE CAP:** Attach the closure cap to the top of the aluminum retainer with 1 1/4" Phillips round head self-tapping screws through each mounting tab. Feather and finish the exposed edge of the cap with the surface of drywall. **DRYWALL TRIM:** Use appropriate trim to finish the top edge. Appropriate use of trim will aid in the feathering of joint compound to the corner guard cover.

4. After the joint is finished, position cover over the aluminum retainer. Push the cover over the retainer, pressing over the entire length until the cover snaps in place. See Figure 4.

FIG. 4

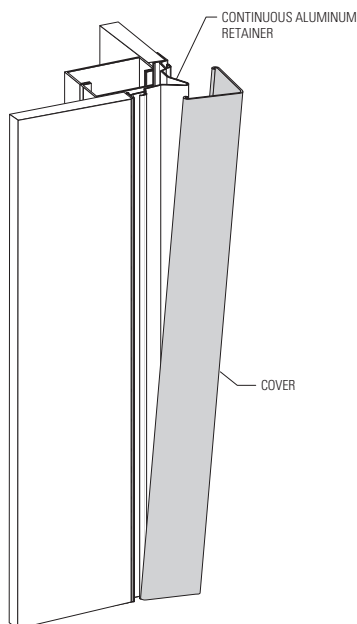

Installation Questions?

Contact our Installation Hotline 866.EZINPRO
For Sales & Customer Service call 800.222.5556