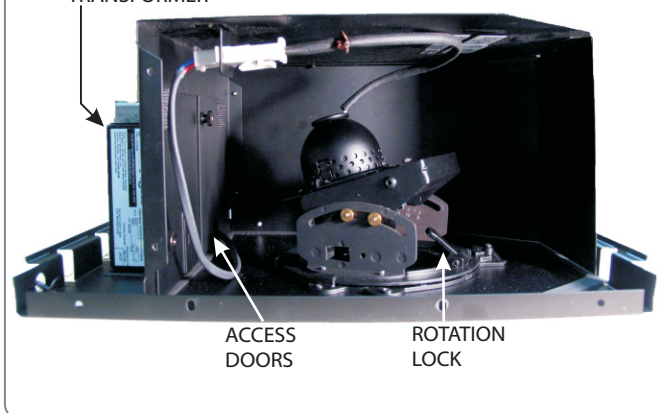
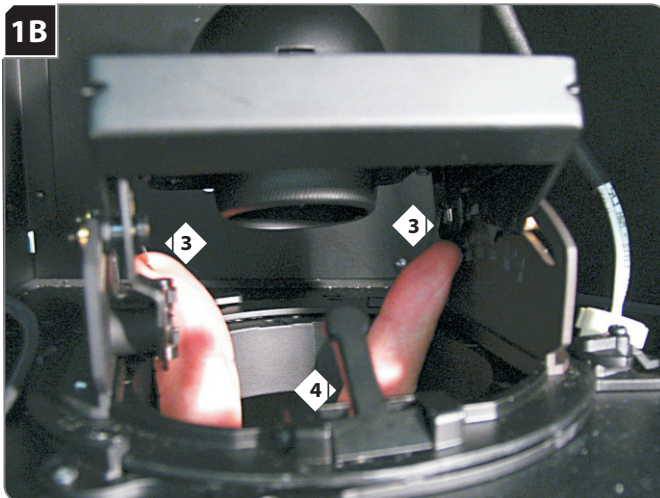
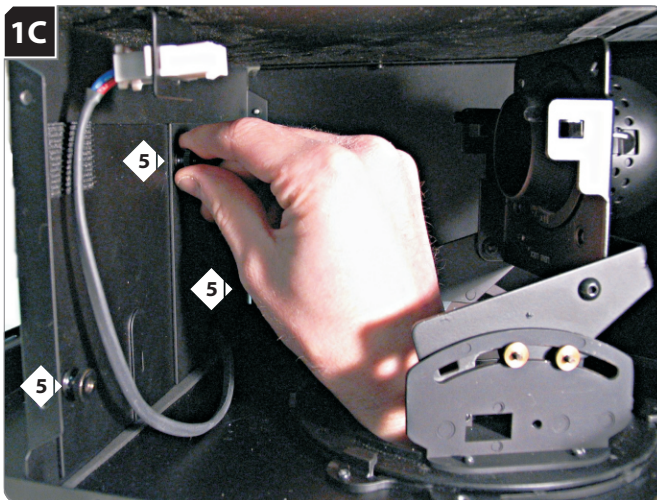


Instructions for Replacing


Element Housing Electronic Transformer


ELEMENT
 a brand of TECH LIGHTING®
**CAUTION - RISK OF FIRE**

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and **TURN THE POWER TO THE ELECTRICAL BOX OFF.**


1AELECTRONIC
TRANSFORMERACCESS
DOORSROTATION
LOCK**1** Turn off power to the housing.**2** Remove the trim.**1B****3** Squeeze the tabs to release the lamp housing and push the housing back.**4** Release the rotation lock and rotate the housing so the opening faces the access doors.**1C****5** Remove all three thumb nuts on the access doors.**6** Remove the access doors.

NOTE: The access doors are too large to fit through the fixture opening. Set them aside within the fixture during this repair.

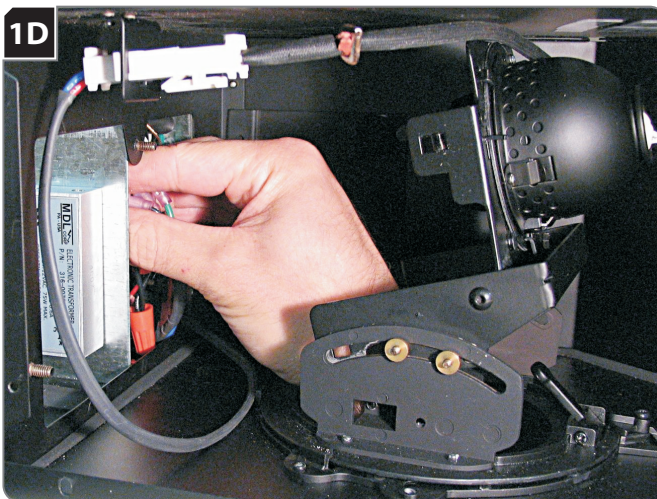1D**7** Remove the two thumb nuts inside the electrical box. These thumb nuts hold the transformer in place.**8** Pull the transformer out of the housing. Do not disconnect any wires at this time. The wires have enough slack to pull the transformer completely out without disconnecting.

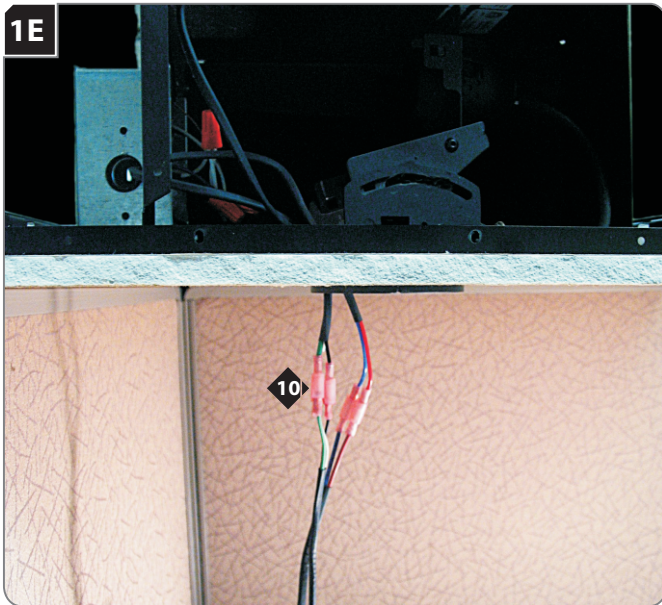

- 9 Pull the ballast wires out until the terminals are accessible.
- 10 Disconnect the original transformer at the terminals and connect the new transformer, matching the wires by color.
- 11 Feed the wires back into the electrical box and put the new ballast in place.
- 12 Tighten the two thumb nuts on the transformer.

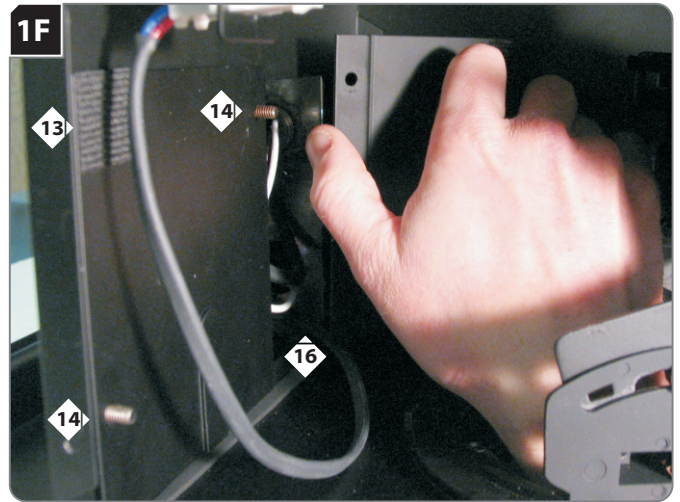

- 13 Install the left door first. The hook-and-loop fastener should be located in the top left corner of the door, facing into the fixture.
- 14 Slide the left access door onto the bolts.
- 15 Install the right door second. The hook-and-loop fastener should be located in the top right corner of the door, facing into the fixture.
- 16 Slide the right access door onto the bolts, making sure the lamp wire goes through the cutout in the right access door.
- 17 Install and tighten all 3 thumb nuts on the access doors.
- 18 Pull the lamp housing back into place, rotate it to the desired position, and set the rotation lock.
- 19 Reinstall the trim.

SAVE THESE INSTRUCTIONS!

ELEMENT 
a brand of TECH LIGHTING™

7400 Linder Ave, Skokie, IL 60077
847.410.4400

www.element-lighting.com

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Element" graphic is a registered trademark of Element. Element reserves the right to change specifications for product improvements without notification.
A Generation Brands Company