

GATEWAY™ MEDIA LIFT TABLE



INSTALLATION GUIDE

SUGGESTED MINIMUM CREW: 2
APPROXIMATE INSTALL TIME: 1.5 Hr


TOOLS REQUIRED:

4mm Hex Key
 5mm Hex Key
 1/4" Hex Key
 Philips Screwdriver / Bit
 Drill


HARDWARE:

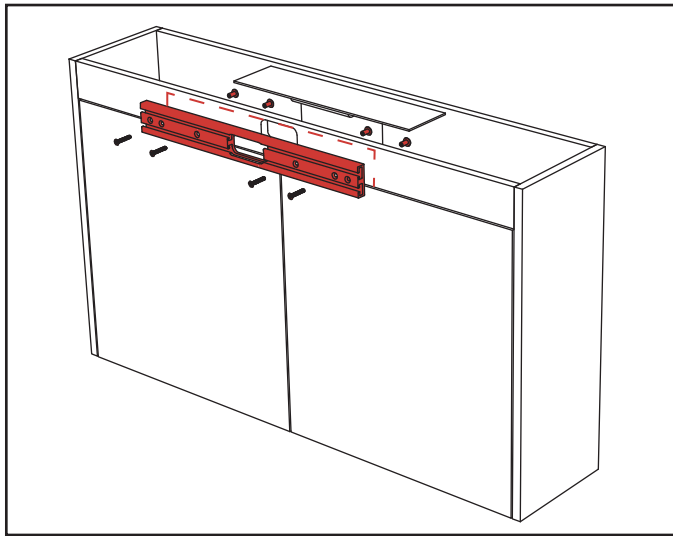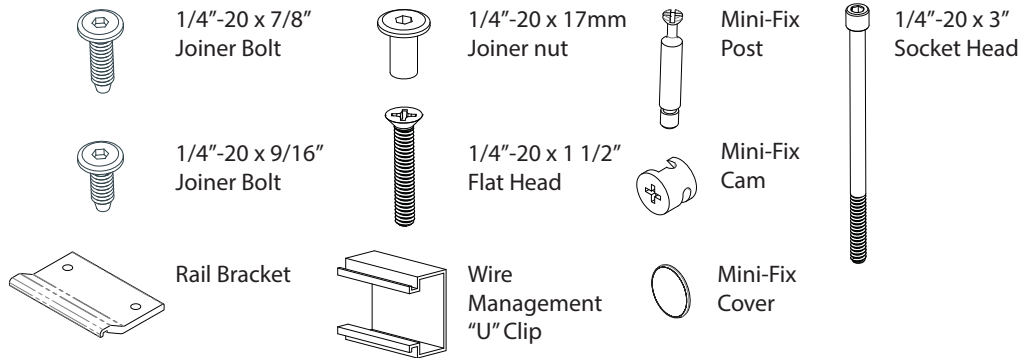


Align through holes in rail mounting profile with corresponding holes in media case and lock plate. Secure with 1/4"-20 x 1 1/2" flat head bolts and joiner nuts.

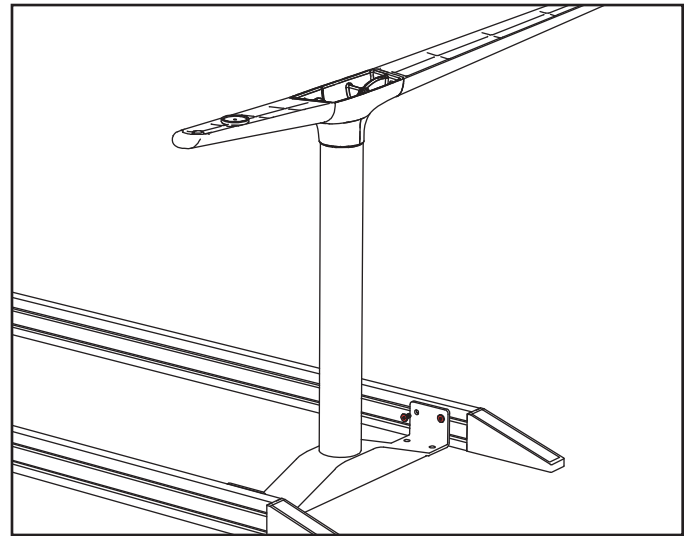


With both rails and end base upside down, align base through holes with pre-installed rail t-slot nuts and fix with 1/4"-20 x 9/16" joiner bolts.

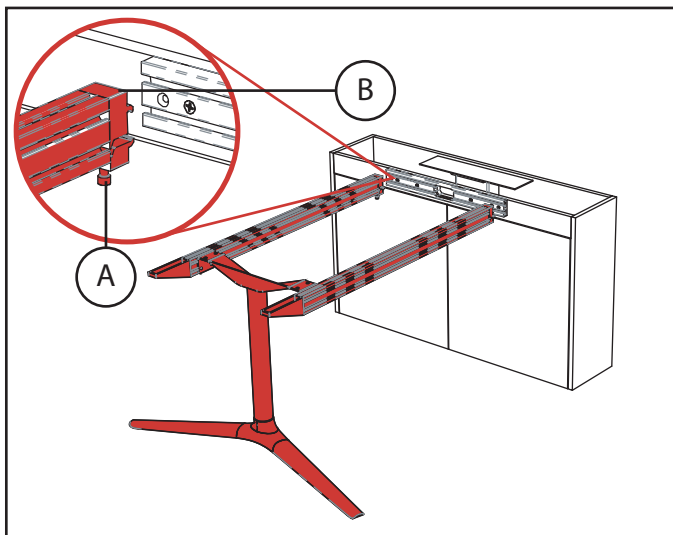


Loosen gripper socket head screws (A). Rotate base / rail assembly and align gripper fitting (B) with mounting profile. Position assembly centered on case and tighten gripper screws to lock.

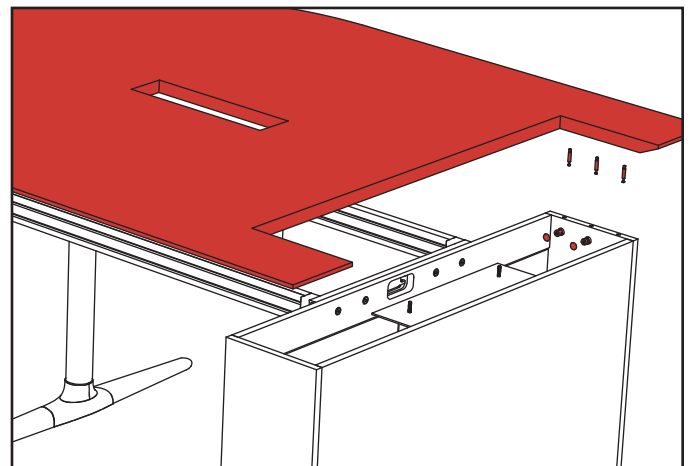


Insert mini-fix cams into rebated holes inside of media case. With top upside down on a protective surface, install mini-fix posts in bottom of top. Rotate top, align posts with holes in top of case and set in place. Turn mini-fix cam 1/4" turn to lock. Press cap in place over all cams.

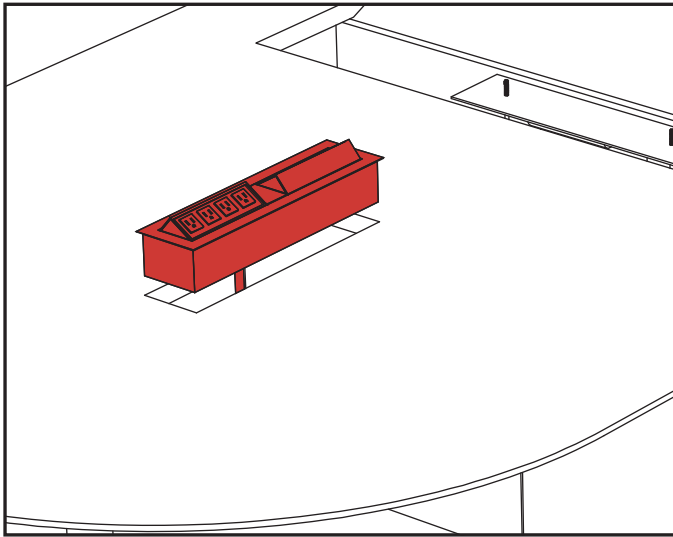


If your installation includes a power / connectivity unit , follow detailed installation instructions included with that unit.

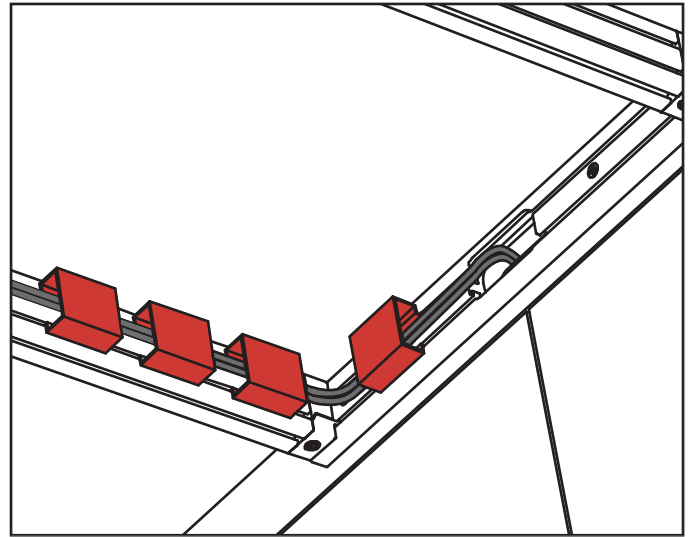

Wiring is routed to the media case with "U" clips that install to both rail and mounting profile.

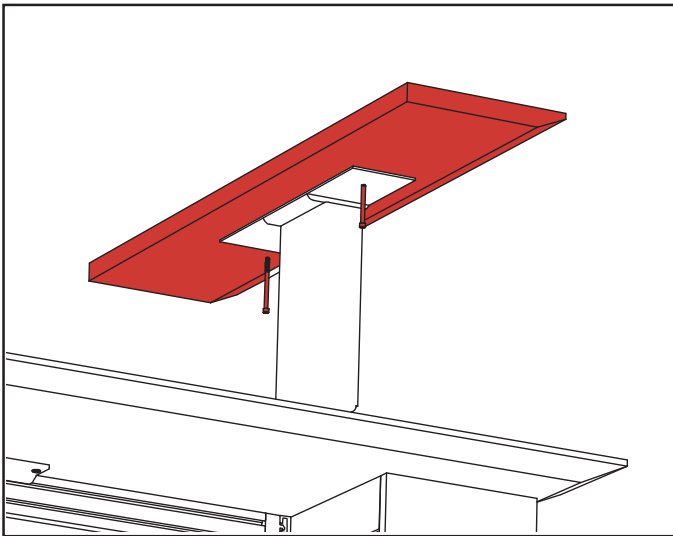

The lift lid is installed by aligning threaded inserts with through holes in TV bracket. Secure with 1/4"-20 x 3" socket head screw. **Note, the lid is meant to be loose. This is to ensure fingers are not pinched during operation- see lift guide for further safety features.**

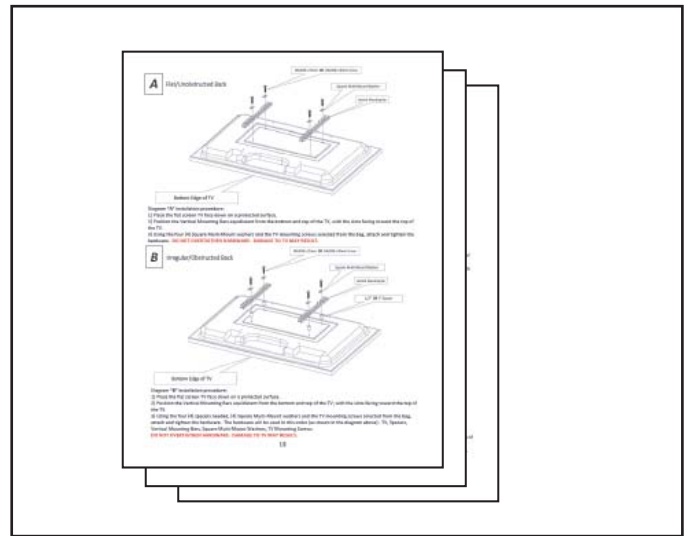

All Media Lift tables ship with a separate hardware box containing TV mounting brackets, RF remote, spare lift hardware and a detailed installation / operation guide. Consult this guide for detailed TV mounting specifics.