UNIFRAME **ROLLAWAY TABLE**

Operating Instructions

Tables with Benches, Split Benches or Stool Seats - UF12, UF10 or UF08 Series

TO OPEN 1. Find an appropriately sized area for opening of table. Be sure there are no small children, people or obstacles which could accidentally be

injured or damaged by opening table.

2. Locate storage lock release handle on either side of table. Lift (turn) the handle end to release storage lock Push table halves apart by applying an outward force to the center of each top until the table is 1/2 to 3/4 open.

3. Place each hand approximately 12 from table center and apply a down-


ward force to top until gravity lock engages. WARNING: Failure to ensure gravity lock engagement may cause table to become unstable with possibility of



TO CLOSE Push down gently on top at table center and lift (turn) gravity lock from either side of table. Lift table center slightly to ensure gravity lock disengagement. Place each hand approximately 12" from table center

on each halve and apply an upward force until table is 1/2 to 3/4 closed. Place hands at center of each top and apply an inward force until

storage lock engages. WARNING: Failure to ensure storage lock engagement may cause table to become unstable with

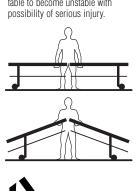

1330 Bellevue Street Green Bay, Wisconsin 54302