


Parts Diagram

LimeLite™ Seating

Tablet Arm Task Chair (Model LL51 & LL52)

December 2023

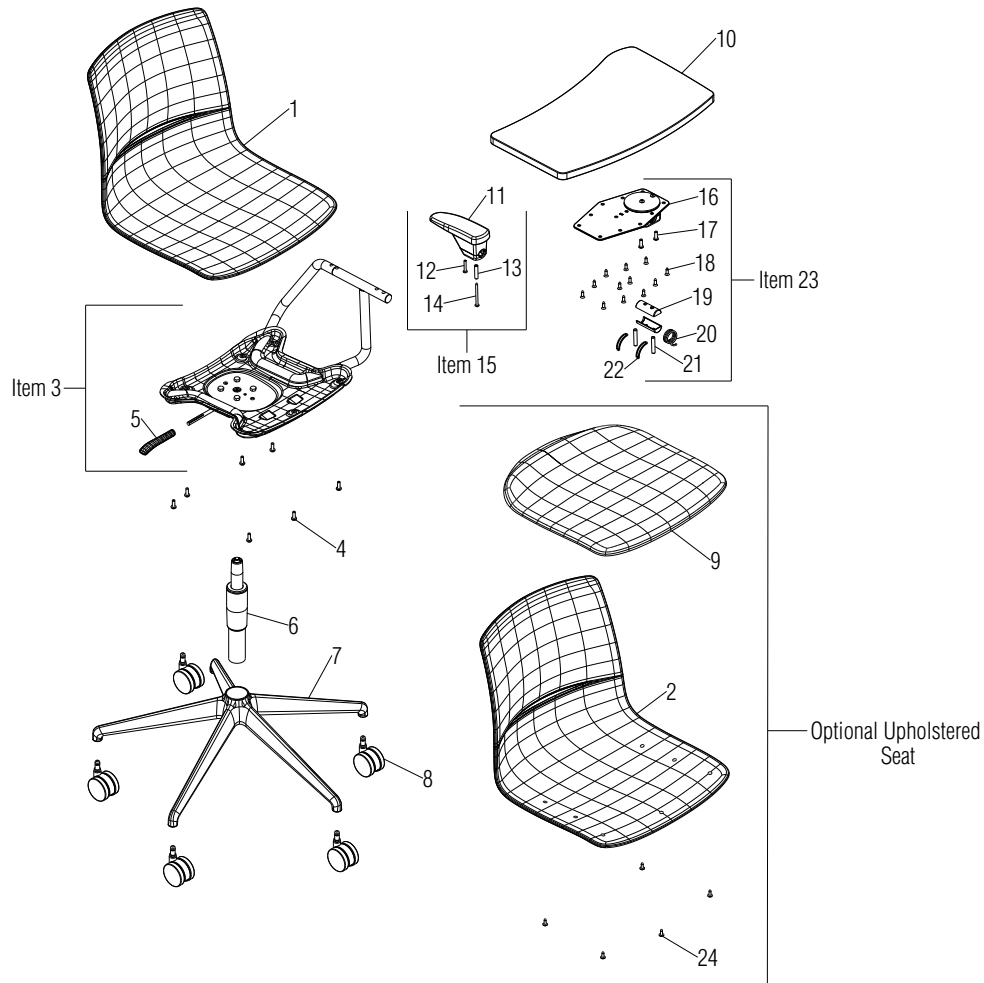

.XX = Select Color

Item 3 includes Item 5.

Item 15 includes items 11, 12, 13 & 14.

Item 23 includes items 16, 17, 18, 19, 20, 21 & 22.

Item	Part Number	Item Description	Req Qty	Item	Part Number	Item Description	Req Qty
1	46.6401.XX.X	Shell, Poly Seat and Back One Piece	1	12	12.0553.X	Screw, #10 X 1-1/4" PPH TYPE AB	1
2	46.6401.XX.U.X	Shell, Uph. Seat and Poly Back One Piece	1	13	47.1095.X	Sleeve, ChangeUp Tablet Arm Armrest	1
3	LLRF	Assembly, ChangeUp Arm Base Plate LH (shown) (see note)	1	14	12.9131.X	Screw, #10 X 2-1/2" PPH T-AB Tapping	1
	LLRF	Assembly, ChangeUp Arm Base Plate RH (see note)	1	15	CUTA.ARM.XX.X	Assembly, Armrest	1
4	12.0011.X	Screw, M6 x 18mm Phillips Pan Head BosScrew	7	16	47.1080.L.BL.X	Assembly, Tablet Hinge LH (shown)	1
5	46.6416.XX.X	Handle, Task Chair Height Adjust	1		47.1080.R.BL.X	Assembly, Tablet Hinge RH	1
6	15.1103.X	Cylinder, Black Pneumatic Height Adjustment	1	17	12.0241.BL.X	Screw, 1/4-20 X 3/4" Socket BHCS w/ Patch	2
	15.1104.XX.X	Cylinder, Pneumatic Height Adjustment	1	18	12.5042.X	Screw, #12 X 3/4" 6-LOBE T25 FL HD TAP	12
7	46.6411.XX.X	Base, 27" 5-Blade Black Plastic	1	19	47.1089.BL.X	Sleeve, ChangeUp Tablet Arm Rotation	2
	46.6410.XX.X	Base, 27" 5-Blade Aluminum	1	20	47.1098.L.X	Spring, LH ChangeUp Tablet Arm (shown)	1
8	09.0441.XX.X	Caster, Dual Surface	5		47.1098.R.X	Spring, RH ChangeUp Tablet Arm	1
9	LLRSC	Seat, Upholstered	1	21	47.1096.X	Dowel Pin, Ø 5/16 X 1-3/4"	1
10	TARM	Board, LH ChangeUp Tablet Arm (shown)	1	22	47.1101.X	Strip, Pin Wear	1
	TARM	Board, RH ChangeUp Tablet Arm	1	23	CUTA.MECH.LH.X	Assembly, ChangeUp Tablet LH (shown)	1
11	STV.CUTA.XX.X	Assembly, Armrest Cap and Mount	1		CUTA.MECH.RH.X	Assembly, ChangeUp Tablet RH	1
				24	12.0511.X	Screw, #10-16 x 5/8" Phillips Truss Head	5

