


Repair & Replacement Instructions ■


Lyra® Lounge Furniture

Lounge Chairs, Loveseats & Sofas - Cushion Removal & Replacement


November 2023

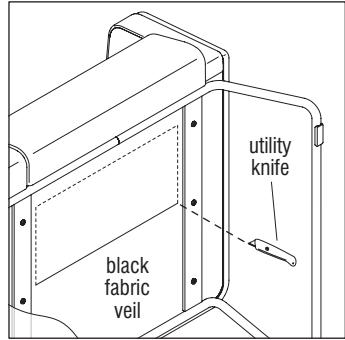

Detail A

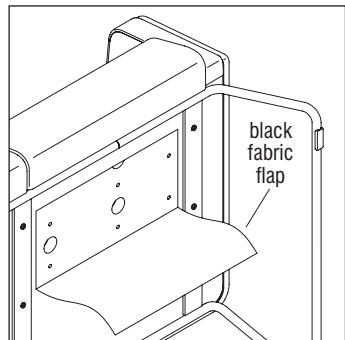

Detail B

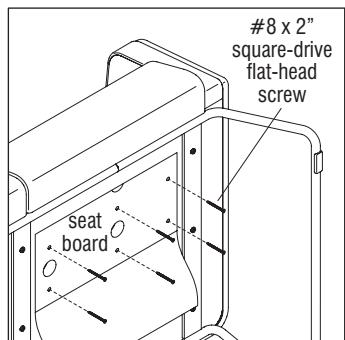

Detail C

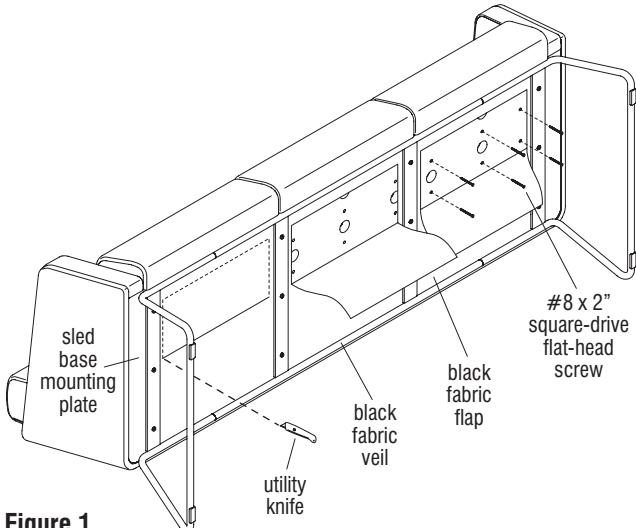


Figure 1

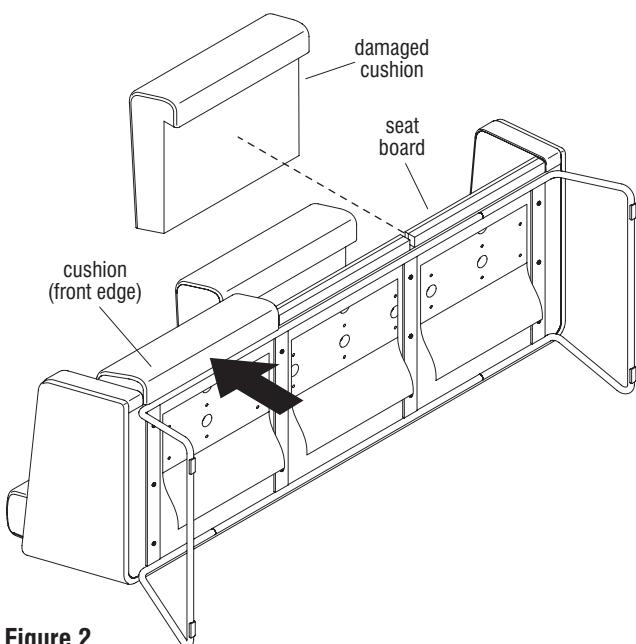


Figure 2



Cushion Removal

Note: Lounge seating units may be heavy based on the material and size of the unit, and may require the assistance of two or more people when placing units upside down or onto their back.

1. With the assistance of a second person, if needed, carefully lay the lounge unit onto its back, or upside down on a soft, protective surface (Figure 1).

Note: If cutting the black fabric veil is not desired to gain access to the screws which secure the cushion bottoms to the seat board, an alternate method may be used. This involves removal of the sled base frame first (save the #14 x 1 1/4" Phillips pan head screws). Then using a staple pliers, remove the upholstery staples holding about half of the fabric veil at the front and allow the fabric veil to drape down similar to Figure 1. Only if using this alternative method, skip step 2 and proceed to step 3.

2. To gain access to the screws securing the affected cushion to the seat board, use a utility knife to cut three sides of a rectangle in the black fabric veil on the bottom of the lounge unit to make a flap near the affected cushion as illustrated. Let the fabric drape down so it does not interfere with removing the screws in the next step (Figure 1, Details A & B).
3. Remove the six #8 x 2" square-drive flat head screws securing the seat cushion to the lounge seating seat board (Figure 1).
4. Push the bottom, front edge of the damaged cushion towards the top of the lounge unit to partially dislodge the cushion from the seat board as illustrated (Figure 2).
5. The cushions are designed to fit snug. Carefully, fully remove the damaged cushion from the seat board without damaging the surrounding fabric on the arms, backrest or adjacent cushions.
6. Repeat steps 2 through 5 to remove any additional damaged cushions. Once all affected cushions have been removed, proceed to the next page.

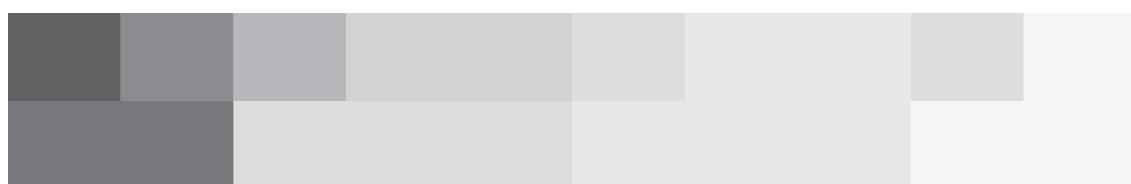

■ Lyra® Lounge Furniture - Cushion Replacement

Repair & Replacement Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

Cushion Replacement

Important: Lyra loveseat and sofa seat cushions are specifically shaped to be placed in their corresponding left-hand, right-hand, or center locations on the seat board, and cannot be interchanged. If replacement cushions are not placed in the proper left-hand, right-hand, or center locations, cushions will not fit properly between the arms of the unit and must then be rearranged (Figure 3).

1. The replacement cushions are designed to fit snug. Carefully set all replacement cushions in their appropriate mounting locations on top of the seat board without damaging the surrounding fabric on the arms, backrest or any adjacent cushions. Use of a soft-face dead blow hammer may be required to fully set the replacement cushion. If the cushion is not fully set upon placement, use the soft-face dead blow hammer to carefully tap the front edge of the cushion to position the back of the cushion fully against the backrest. Next, tap the top of the cushion down to position the bottom of the cushion fully against the top of the seat board (Figure 4 & Detail D).


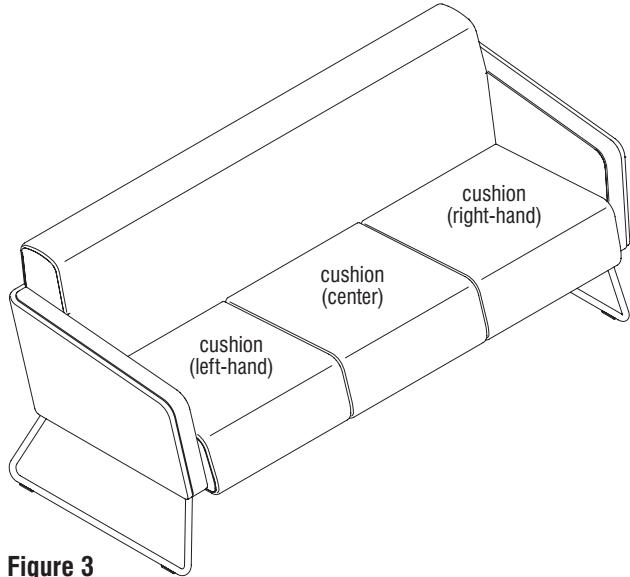


Figure 3

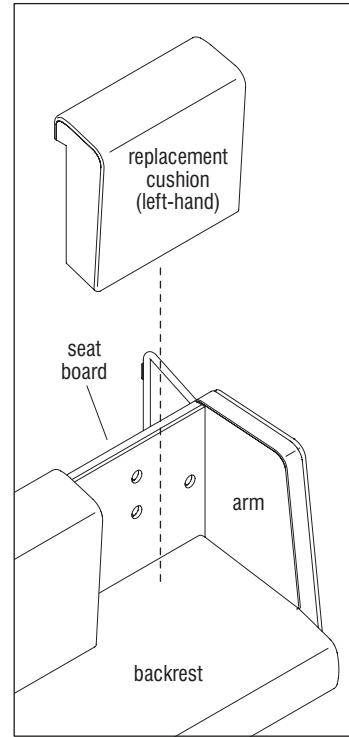

Detail D


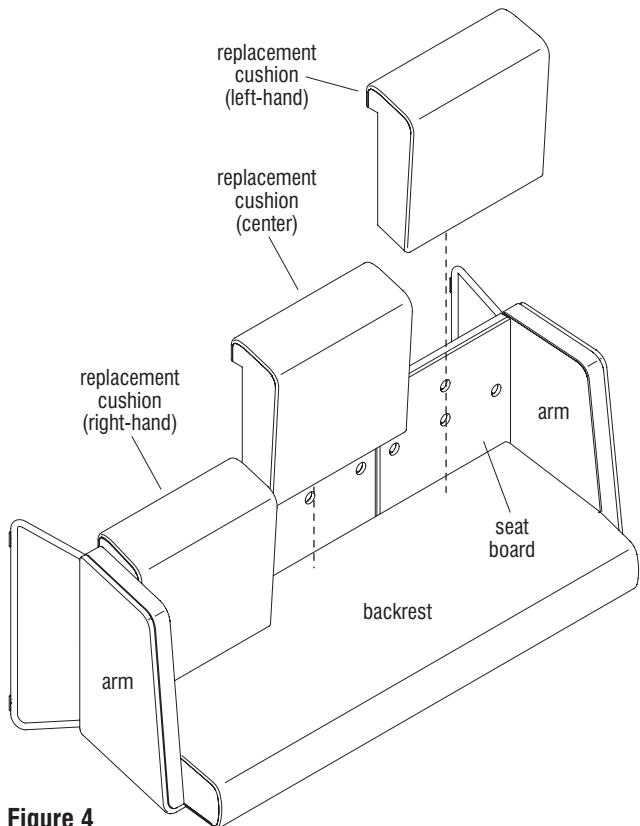



Figure 4




Detail E

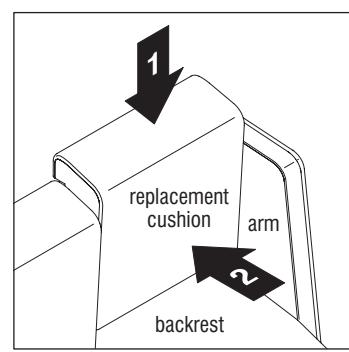


Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and personal injury.

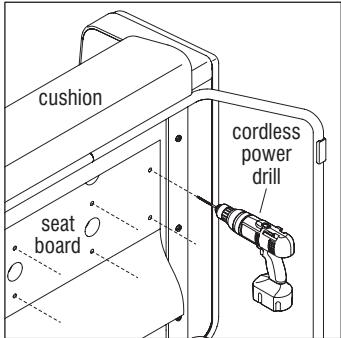


Detail F

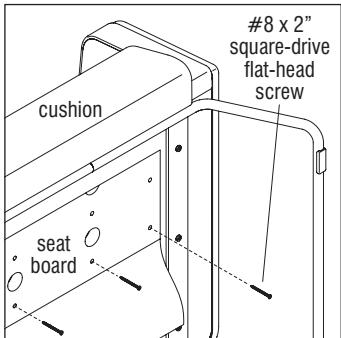

Detail G

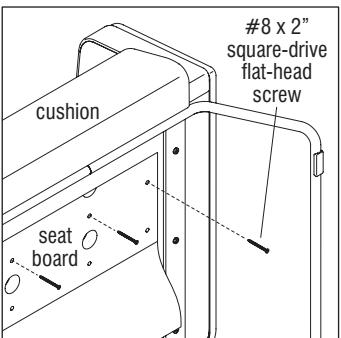

Detail H

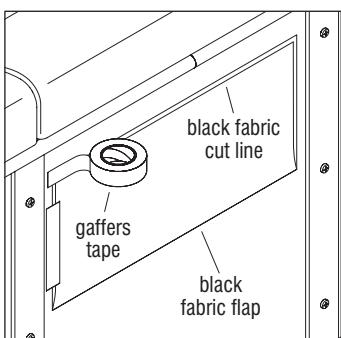

Detail I

- Using the six previous seat board mounting hole locations used to secure the cushion, carefully bore a $3/32$ " pilot hole at the center of each seat board mounting hole location, into the base of the properly positioned cushion using a cordless power drill (Detail F).

Note: When securing the cushions to the seat board, the three screws closest to the rear of the cushion should be secured first followed by the three screws closest to the front of the cushion.

- Using the three mounting holes closest to the rear of each cushion, press down on the top, rear of the cushion and secure the cushions to the seat board using three previously removed #8 x 2" square-drive flat head screws per cushion (Figure 5 & Detail G).

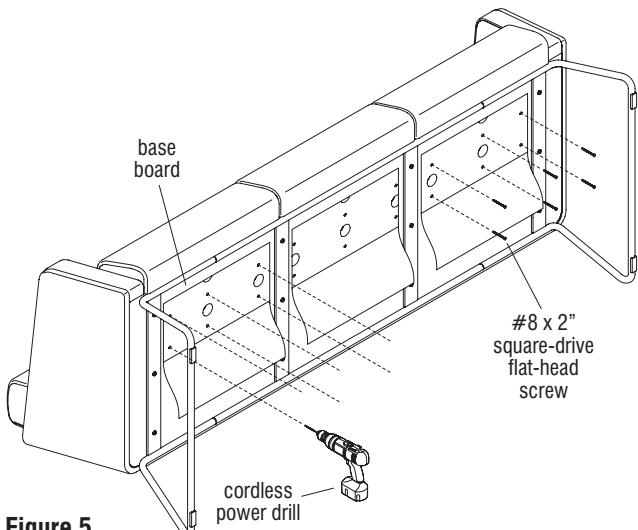


Figure 5

- Using the three mounting holes closest to the front of each cushion, press down on the top, front of the cushion and secure the cushions to the seat board using three previously removed #8 x 2" square-drive flat head screws per cushion (Figure 5 & Detail H).

Note: If the black fabric veil and sled base were fully removed to gain access to the screws securing the cushions to the seat board, re-staple the fabric veil to the bottom of the seat board using a staple gun. Once the fabric veil is secured, position the sled base in its original mounting location based on the measurements taken at the beginning of the instructions and secure the base to the bottom of the seat board using the previously removed #14 x $1\frac{1}{4}$ " Phillips pan head screws.

- For cut flaps of the black fabric veil, reattach the fabric flap underneath the lounge unit by applying 2" wide Gaffers tape strips along the cut line of the fabric flap, and the fabric veil underneath the base of the lounge (Figure 6 & Detail I).

- With the assistance of a second person, if needed, carefully turn the lounge unit to the upright position.

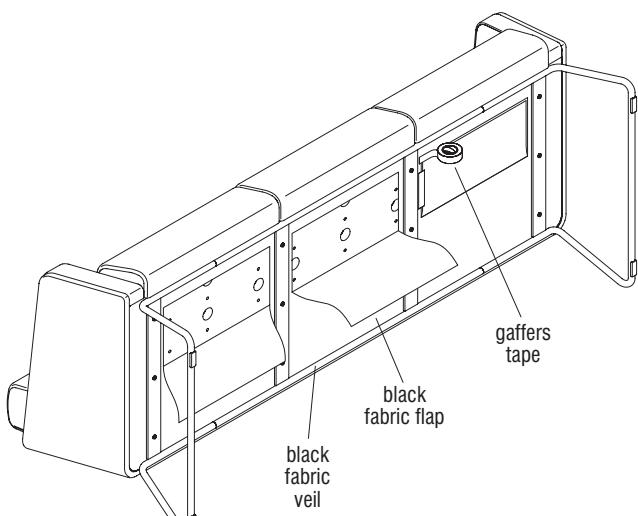


Figure 6

■ **Lyra® Lounge Furniture - Cushion Replacement**
Repair & Replacement Instructions

1330 Bellevue Street • Green Bay, WI 54302 • Tel 1-800-424-2432 • www.ki.com

© 2023 Krueger International, Inc. All Rights Reserved • Code KI-RR-000044/KI/PDF/1123

