



Top Specification:

Power unit fits with tops of this size:

- Range of top width: 180" - 192"
- Number of bases: 3 Bases
- 10' Power infeed cord provides sufficient length to route through end or mid base.
- Top power two location cutout code CF2M

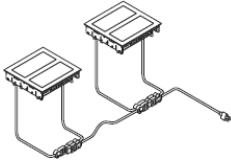


M2X 9PCF42K2MCC Pattern 2-unit kit

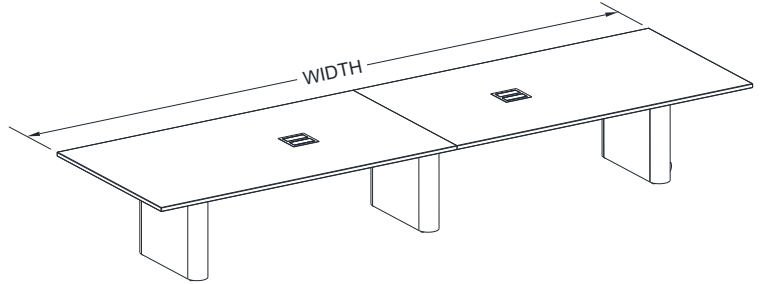


Kit Content: item (quantity)


- M2X power units (2)
- 36" - Jumper (2)
- Power infeed - 15 amp plug (1)
- Splitter - grey (2)
- Splitter - black (1)
- Cable mounting clips (20)
- #6 x 5/8" mounting screws (30)

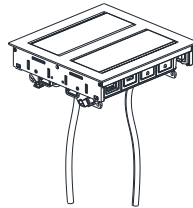

M2X Power Unit

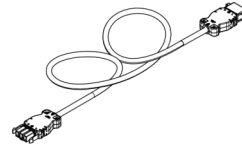

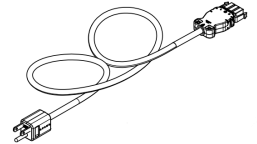


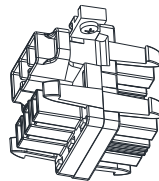
Jumper




Power Infeed

Tools Required:

- #2 Phillips Head  
- Drill 



Splitter

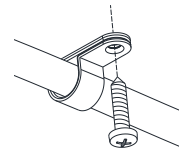


Cable Mounting Clip




Mounting Screw

Connection Type

NOTE: Splitter must be used to connect cords

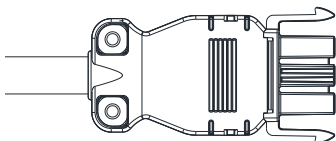


Male Connection

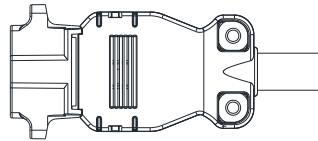


Female Connection

Splitter

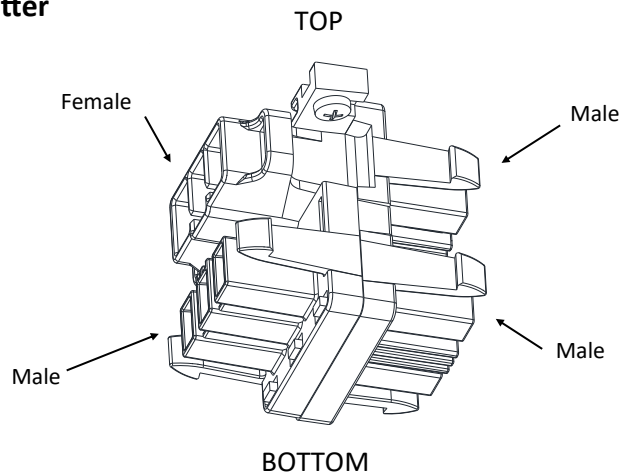


Step 1 - M2X installation to top


1. Attach 1 clip, at each end of unit base with short leg of clip sliding into recess.
2. Route M2X unit connection cords through top cutouts as power unit is lowered into opening. As unit is pushed into the opening the clips will grip the top material wall.
3. Select adapter or blank cover for unit open window.
The 12-pack data adapter kit has been provided with unit to support a variety of connection options.

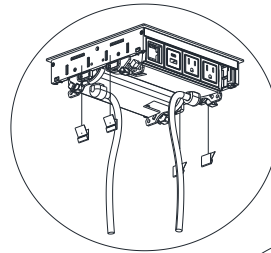

Detail 1

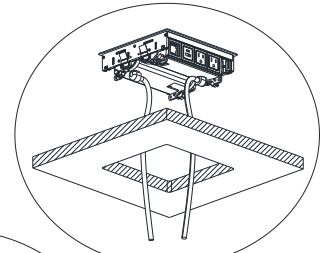

Detail 2

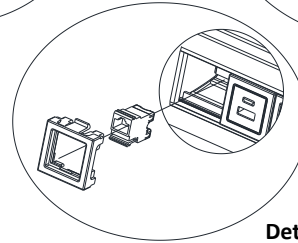

Detail 3

M2X - Power Connection - End Location Infeed



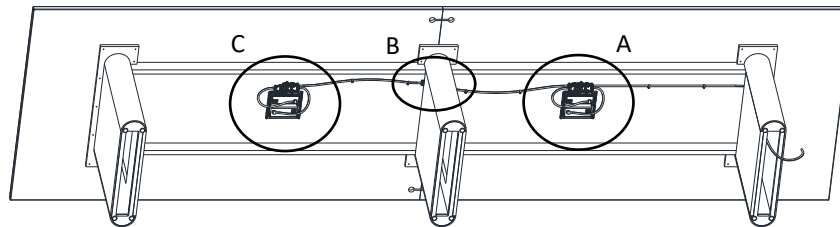



Table Diagram

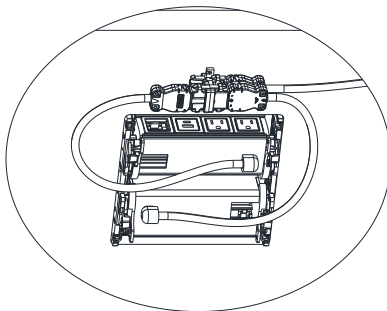

Detail C

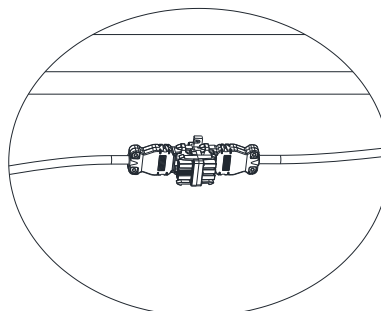

Detail B

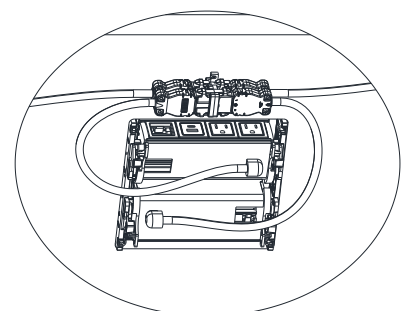


Detail A

Step 2 - Connecting M2X unit to power - End Location Infeed


1. Insert infeed male connector into splitter top female connection.
2. Insert 36" jumper female connector onto splitter top male connection.
3. Insert unit female connectors onto splitter bottom male connections.

Detail A

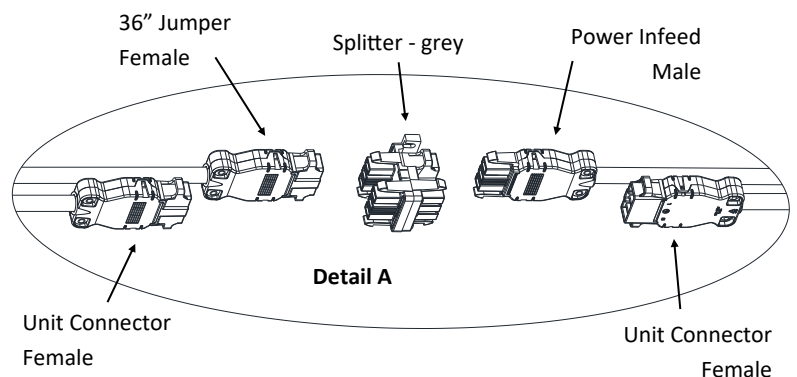

Step 3 - Connecting M2X unit to power


1. Insert first 36" jumper male connector into splitter top female connection.
2. Insert second 36" jumper female connector onto splitter top male connection.

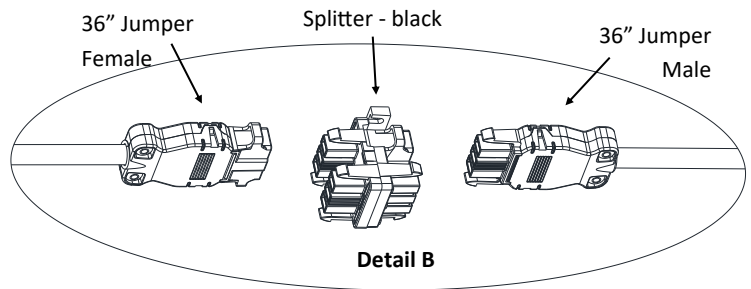

Detail B

Step 4 - Connecting M2X unit to power



1. Insert 36" jumper male connector into splitter top female connection.
2. Insert unit female connectors onto splitter bottom male connections.

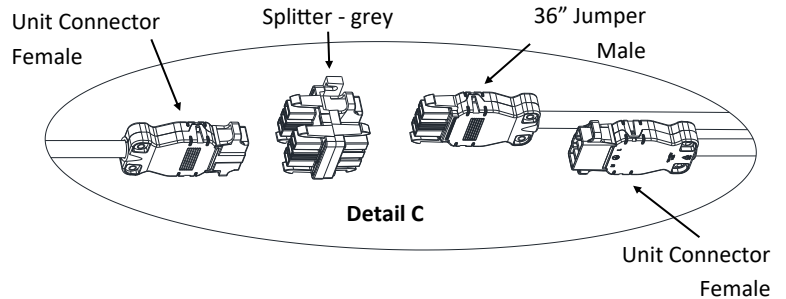

Detail C

Securing Connections and Cables

2. Position splitters to allow cables to route under top freely and install (2) #6 x 5/8" mounting screws to secure, do not over tighten as could damage splitter.
3. Install cable mounting clips along cables spacing no more than 18" apart with #6 x 5/8" mounting screws to secure unit and jumper cables.

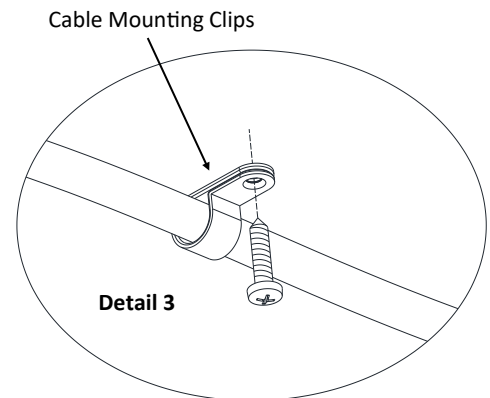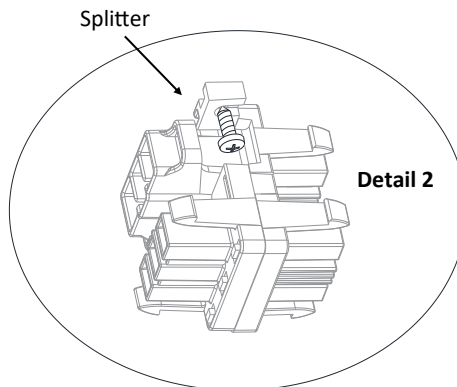

Power Infeed Connection

1. Use cable clips to route the cord through the channel to the floor outlet. Secure excess cord in the vertical channel or to the table with clips.
2. Plug power infeed into building power source and check unit outlets to verify power.

