


carolina
an OFS company

Serony

SHIFT REAR CASTER INSTALLATION

INCLUDED PARTS

- A. Caster body**
- B. Caster wheel**
- C. 10-24 x .313 machine screw**
- D. Binding barrel**

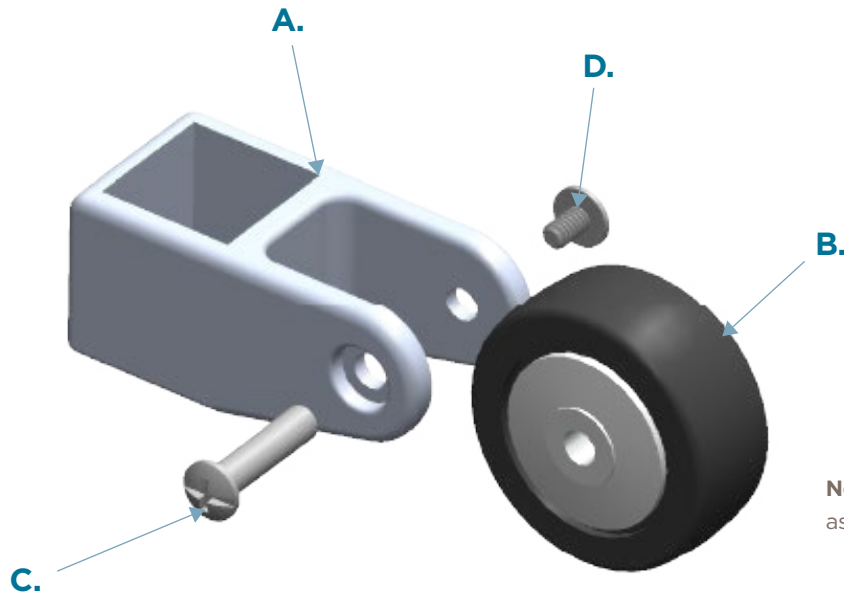

Note: The caster will ship assembled. No assembly required.

TOOLS REQUIRED

- A. 5.5mm hex driver**

INSTRUCTIONS

1. Remove the existing glide

Locate the adjustable glide in the back leg of the chair. Unscrew and remove the glide completely from the leg.
Set the glide aside. It will be reused.

2. Install the rear caster body

Slide the rear caster assembly onto the bottom of the back leg.

3. Reinstall the adjustable glide

Insert the adjustable glide into the bottom of the caster body.
Thread it back into the leg through the caster housing.
Tighten securely using a 5.5 mm hex driver.