# BRETFORD™

## HTM
## HERE ®
## MODESTY PANEL-CONNECTING TABLE
### Assembly Instructions
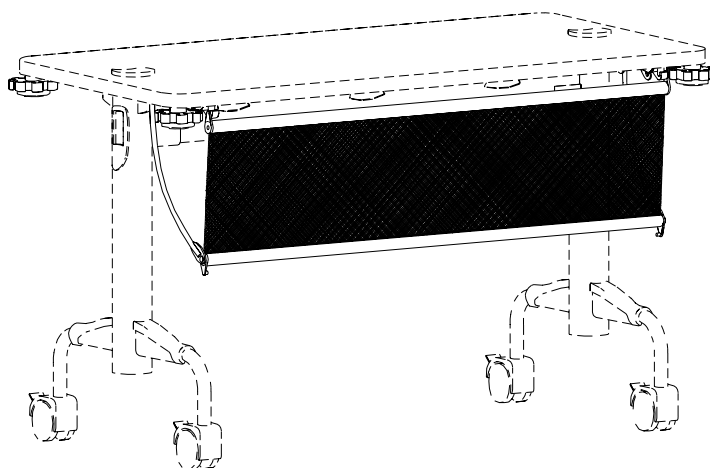
## Parts List

| Qty. | Part No. | Description |
|------|----------|-------------|
| 2 | 010-3219 | Plate, Hook |
| 2 | 010-3220 | Plate, Hinge |
| 1 | 022-1996 | Arm, Swing-LH |
| 1 | 022-1997 | Arm, Swing-RH |
| 2 | 012-0674 | Hook, Modesty Panel |
| 2 | 012-0673 | Clip, Lock-Swing Arm |
| 1 | | Modesty Panel Assembly (48) |
| | | Modesty Panel Assembly (60) |
| | | Modesty Panel Assembly (72) |

## Hardware List

| Qty. | Ref. | Part No. | Description |
|------|------|----------|-------------|
| 8 | AA | 030-0671 | #12 x 3/4" Type 'AB' Phillips Screw |
| 4 | BB | 030-0383 | #10 x 1/2" Type 'AB' Combo Screw |
| 2 | CC | 030-0255 | #10 x 5/8" Type 'AB' Phillips Screw |

## Tools Required
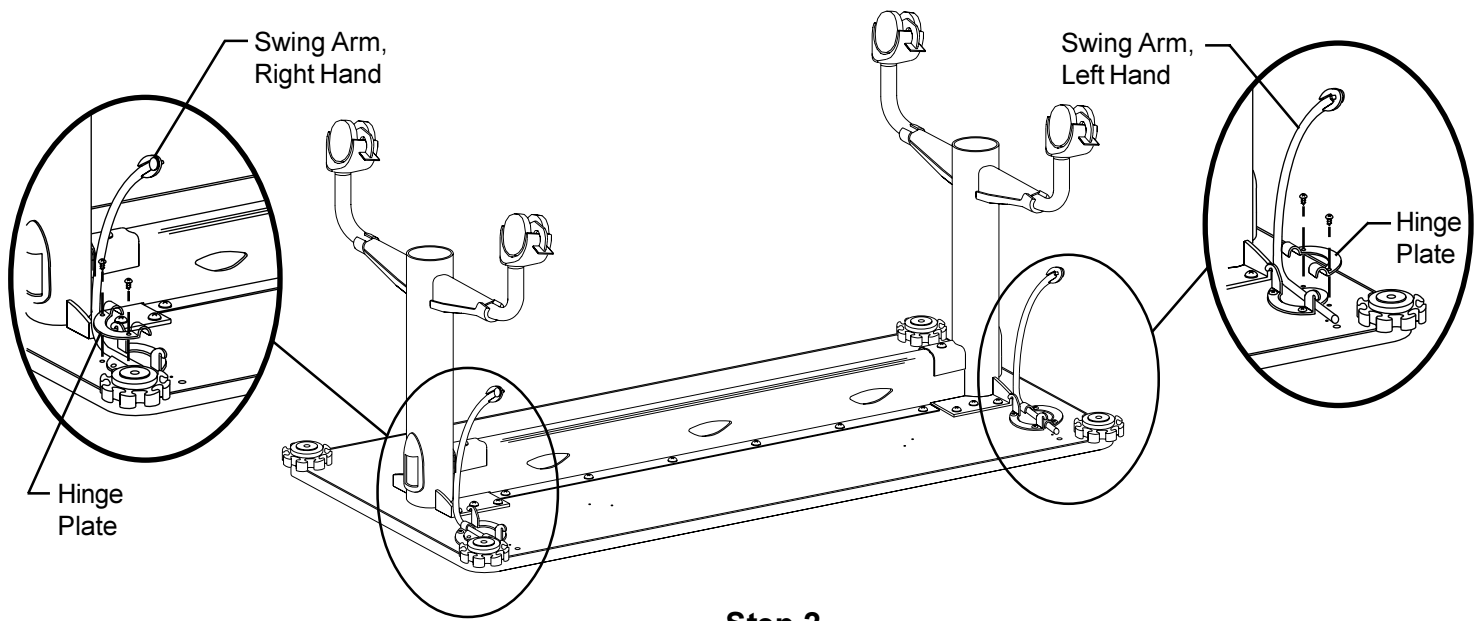
Phillips Screw Driver
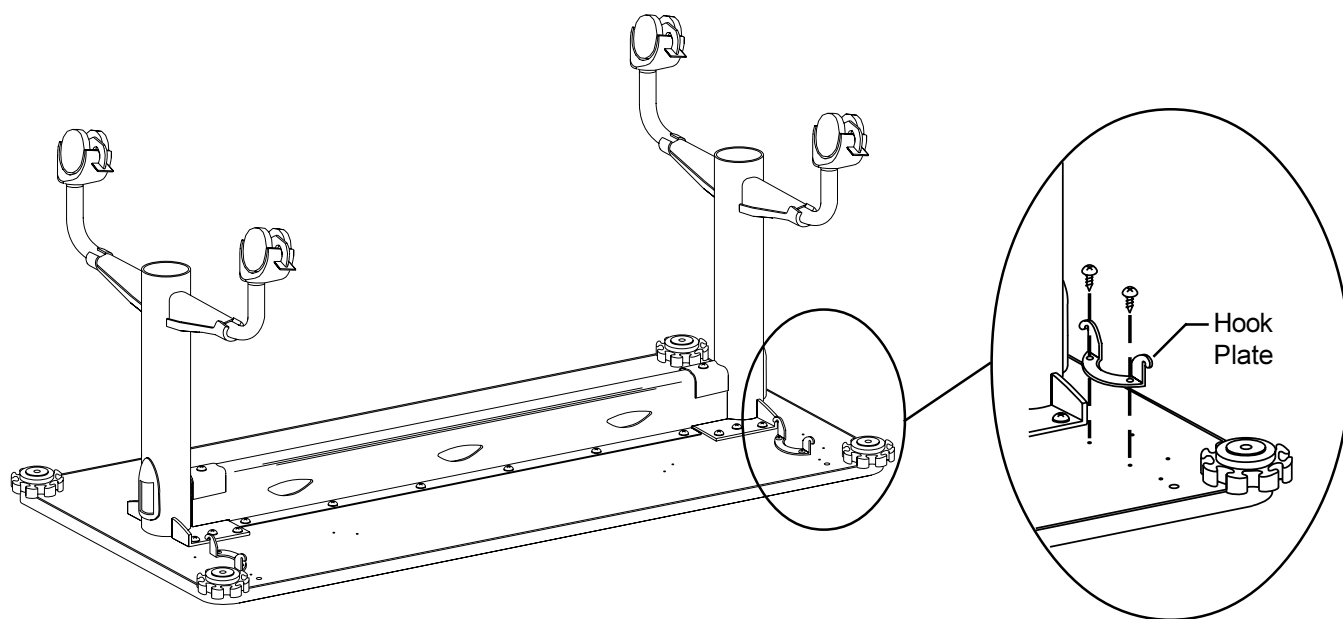
Hook
Plate

## Step 1

Carefully turn your table over onto a clean carpeted surface (or cardboard) with the mounting holes facing front.
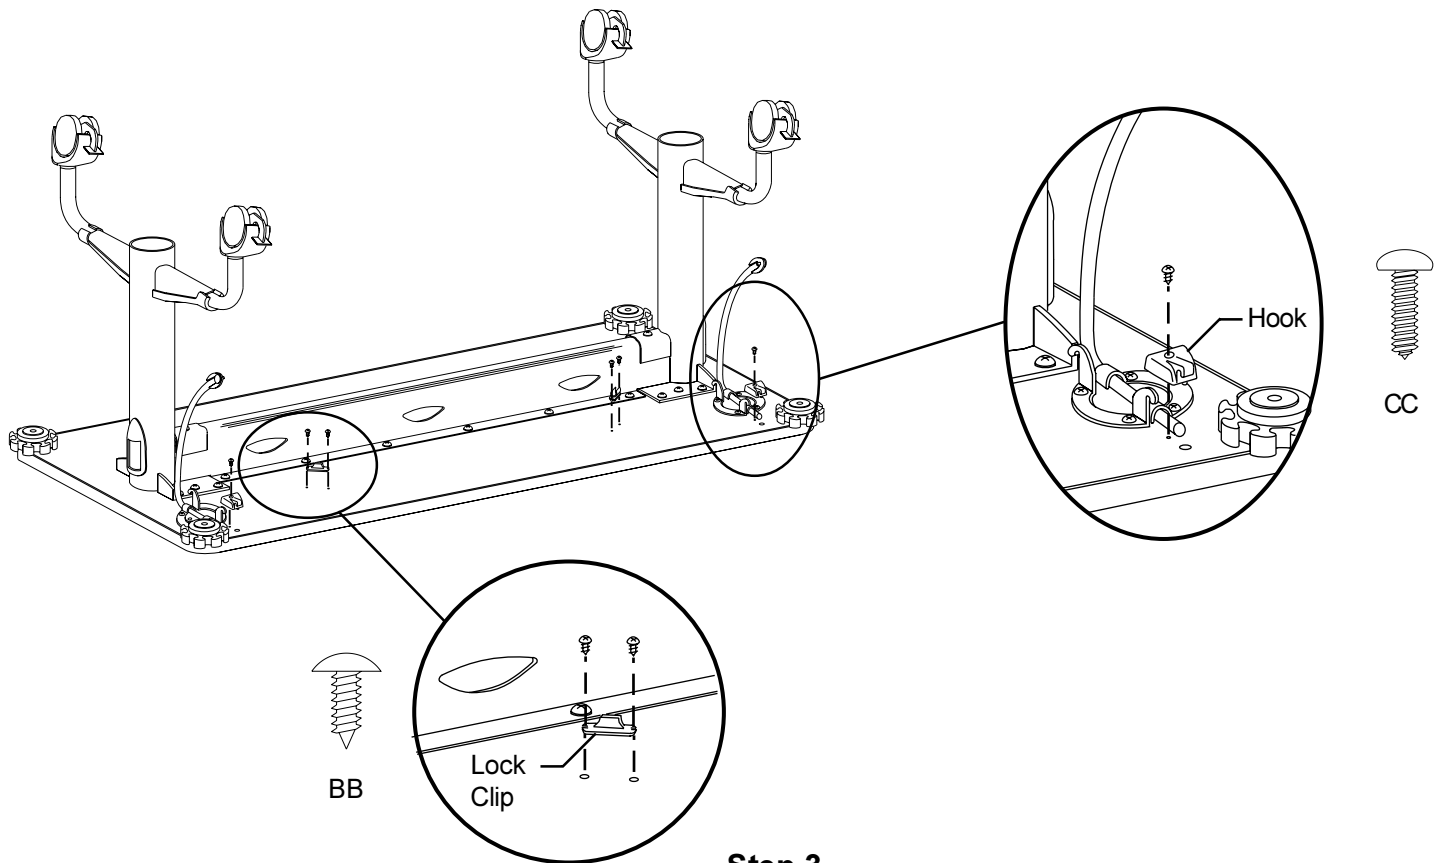Attach (2) hook plates with #12 x 3/4" screws (AA) as shown.

AA

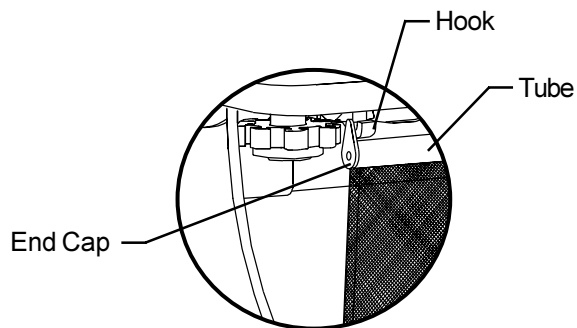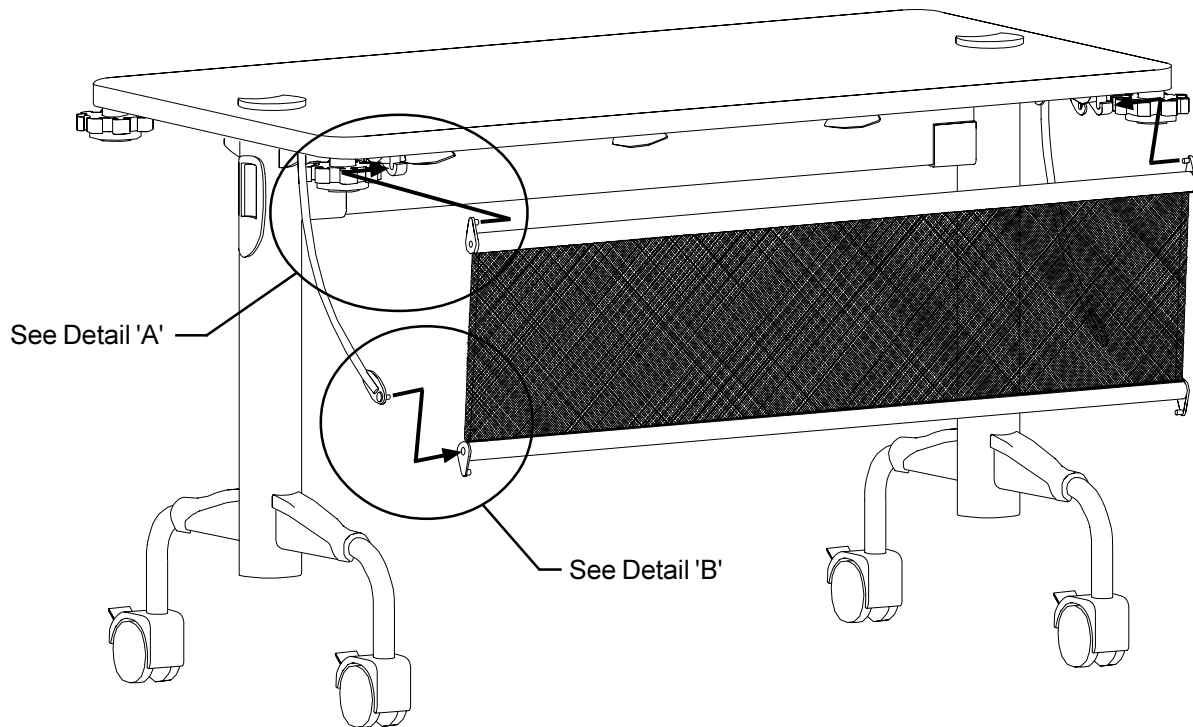Swing Arm,
Right Hand

Swing Arm,
Left Hand

Hinge
Plate

Hinge
Plate

Hinge
Plate

**Step 2**

Attach both swing arms and hinge plates using #12 x 3/4" screws (AA) as shown.
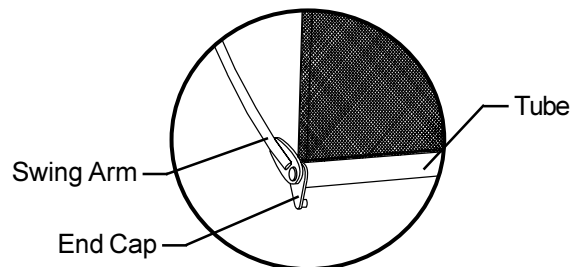
Hook

CC

BB

Lock
Clip

**Step 3**

Attach (2) plastic lock clips using #10 x 1/2" screws (BB). Attach the (2) plastic hooks using #10 x 5/8" screws (CC).

**The table is now ready to be turned over for Modesty Panel installation.**

See Detail 'A'

See Detail 'B'

Hook

Tube

End Cap

**Detail A**
(shown assembled)

Swing Arm

Tube

End Cap

**Detail B**
(shown assembled)

## Step 4

To assemble the modesty panel to the table, first cradle the pins of the end caps onto the table hooks. The modesty panel should hang freely. Then insert the swing arm pins into the mounting hole of the end caps.