



Left Hand Assembly (For Mounting to Left Side Railing)

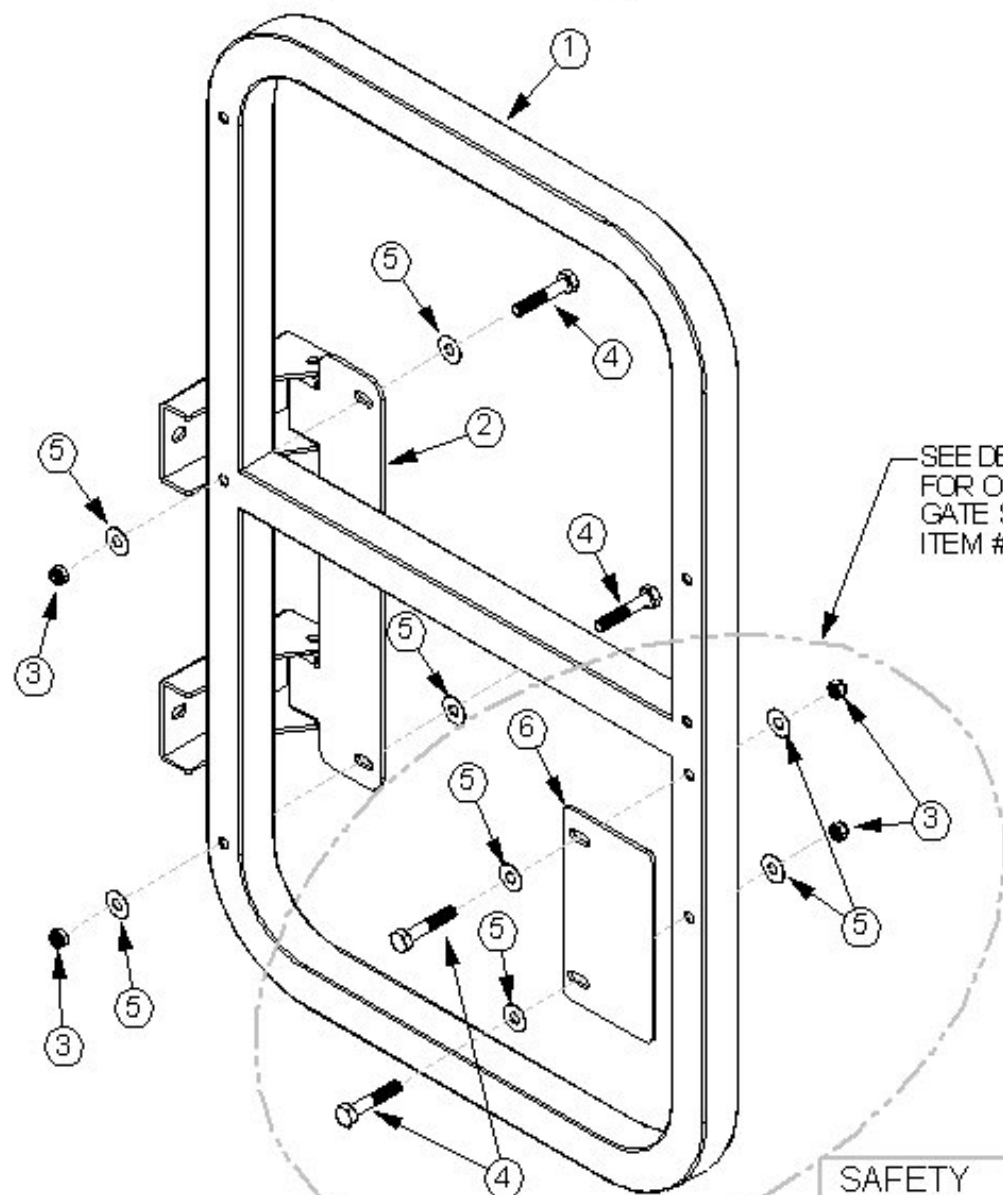

SEE DETAIL "A"
FOR OFFSET
GATE STOP,
ITEM # 7

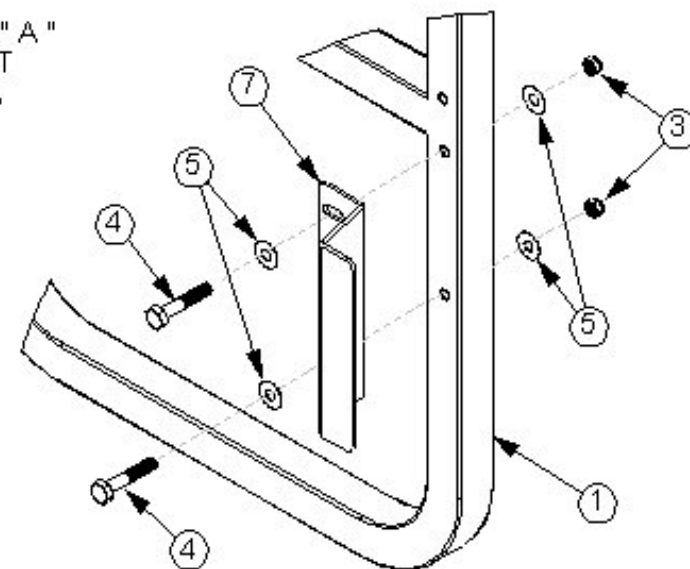

DETAIL "A"


**SAFETY
GATE**

Lapeyre Stair, Inc. P.O. BOX 50699, NEW ORLEANS, LA 70150
(800) 535-7631, Fax (504) 733-4393

S:\STAIR PRODUCTS\SAFETY GATE\LH_GATE_LH

ITEM #	QTY.	DESCRIPTION
1	1	GATE FRAME
2	1	HINGE PLATE ASSY.
3	4	5/16 LOCK NUT
4	4	5/16 HEX BOLT
5	8	5/16 FLAT WASHER
6	1	FLAT GATE STOP
7	1	OFFSET GATE STOP

Right Hand Assembly (For Mounting to Right Side Railing)

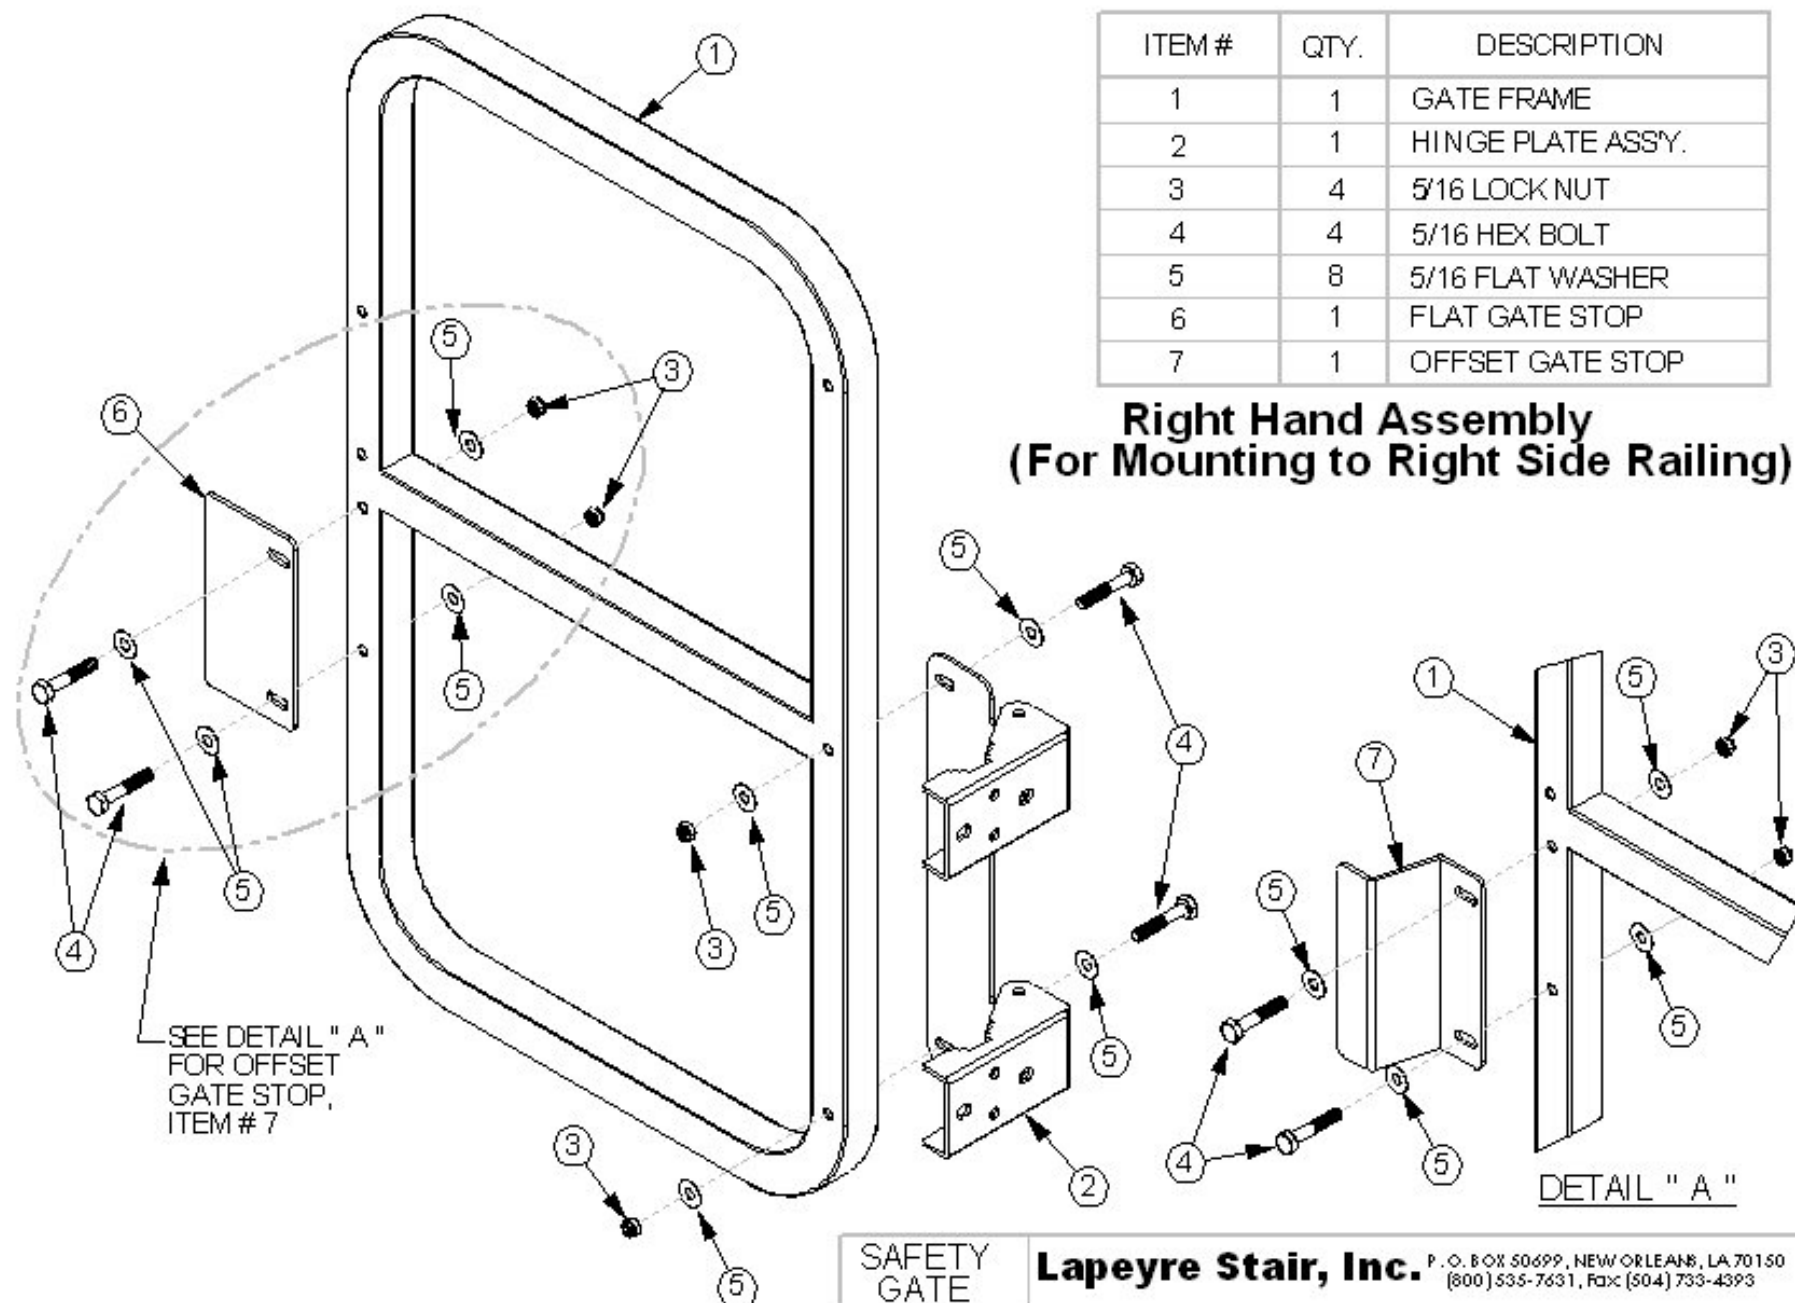


SAFETY
GATE

Lapeyre Stair, Inc. P.O. BOX 50699, NEW ORLEANS, LA 70150
(800) 535-7631, Fax (504) 733-4393

S:\STAIR PRODUCTS\SAFETY GATE\E_GATE_RH

Gate Mounted Left

(To Mount Gate Right, Refer to "Right Hand Assembly")

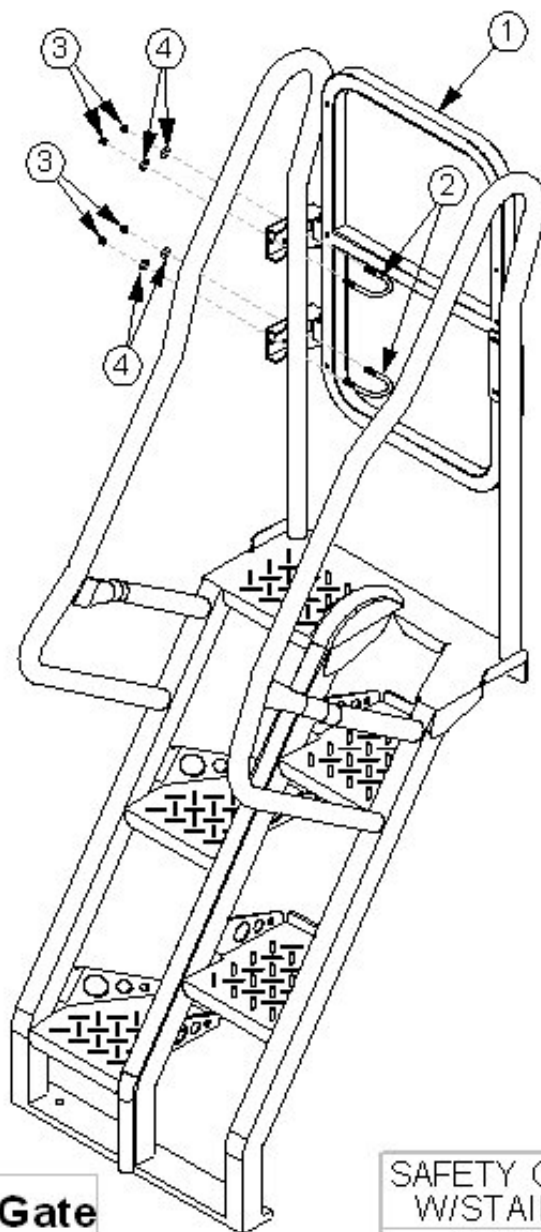

ITEM #	QTY.	DESCRIPTION
1	1	GATE FRAME
2	2	5/16 U-BOLT
3	4	5/16 LOCK NUT
4	4	5/16 FLAT WASHER

Mounting Instructions:

- Place gate in position and install U-bolts loosely.
- Make sure gate top rail is flush with the top of the stair railing.
- Rotate the hinges until the flat outer surface of the hinge is parallel with the side of the stair landing. Tighten U-bolts.
- Adjust the gate stop to ensure positive contact with the railing.

Stair With Safety Gate

SAFETY GATE
W/STAIR

Lapeyre Stair, Inc. P.O. BOX 50699, NEW ORLEANS, LA 70150
(800) 535-7631, Fax: (504) 733-4393

S:\STAIR PRODUCTS\SAFETY GATE\E_SAFETY GATE_W_STAIR

90 Degree Turn Platform With Safety Gate


ITEM #	QTY.	DESCRIPTION
1	1	GATE FRAME
2	2	5/16 U-BOLT
3	4	5/16 LOCK NUT
4	4	5/16 FLAT WASHER

Gate Mounted Left

(To Mount Gate Right, Refer to "Right Hand Assembly")

Mounting Instructions:

- Place gate in position and install U-bolts loosely.
- Make sure gate top rail is flush with the top of the stair railing.
- Rotate the hinges until the flat outer surface of the hinge is parallel with the side of the platform. Tighten U-bolts.
- Adjust the gate stop to ensure positive contact with the railing.

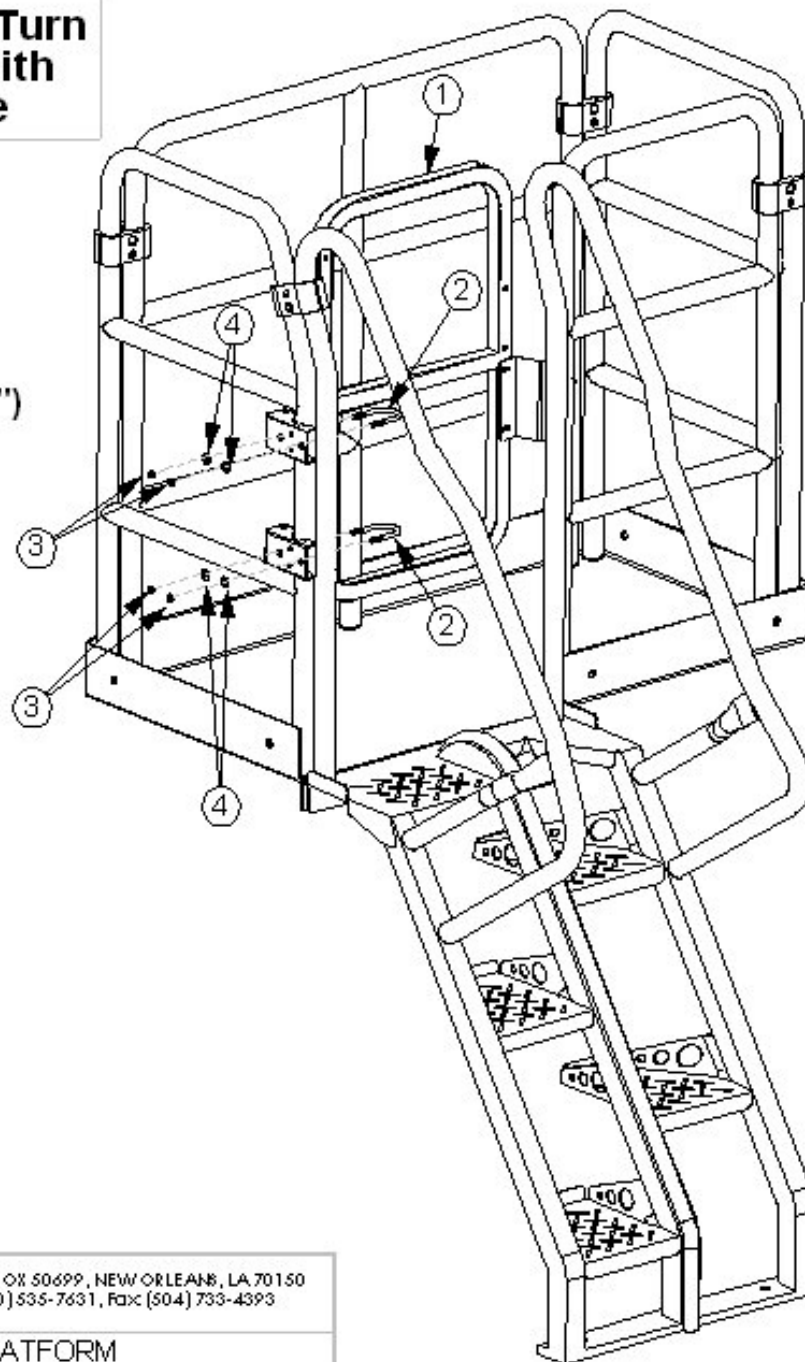

SAFETY GATE
W/STAIR & PLATFORM

Lapeyre Stair, Inc. P.O. BOX 50699, NEW ORLEANS, LA 70150
(800) 535-7631, Fax: (504) 733-4393

S:\STAIRPRODUCTS\SAFETY GATE\E_SAFETY GATE_W_STAIR_PLATFORM

ITEM #	QTY.	DESCRIPTION
1	1	GATE FRAME
2	2	5/16 U-BOLT
3	4	5/16 LOCK NUT
4	4	5/16 FLAT WASHER


Crossover Platform With Safety Gate

Gate Mounted Left

(To Mount Gate Right, Refer to
"Right Hand Assembly")

Mounting Instructions:

- Place gate in position and install U-bolts loosely.
- Make sure gate top rail is flush with the top of the stair railing.
- Rotate the hinges until the flat outer surface of the hinge is parallel with the side of the platform. Tighten U-bolts.
- Adjust the gate stop to ensure positive contact with the railing.

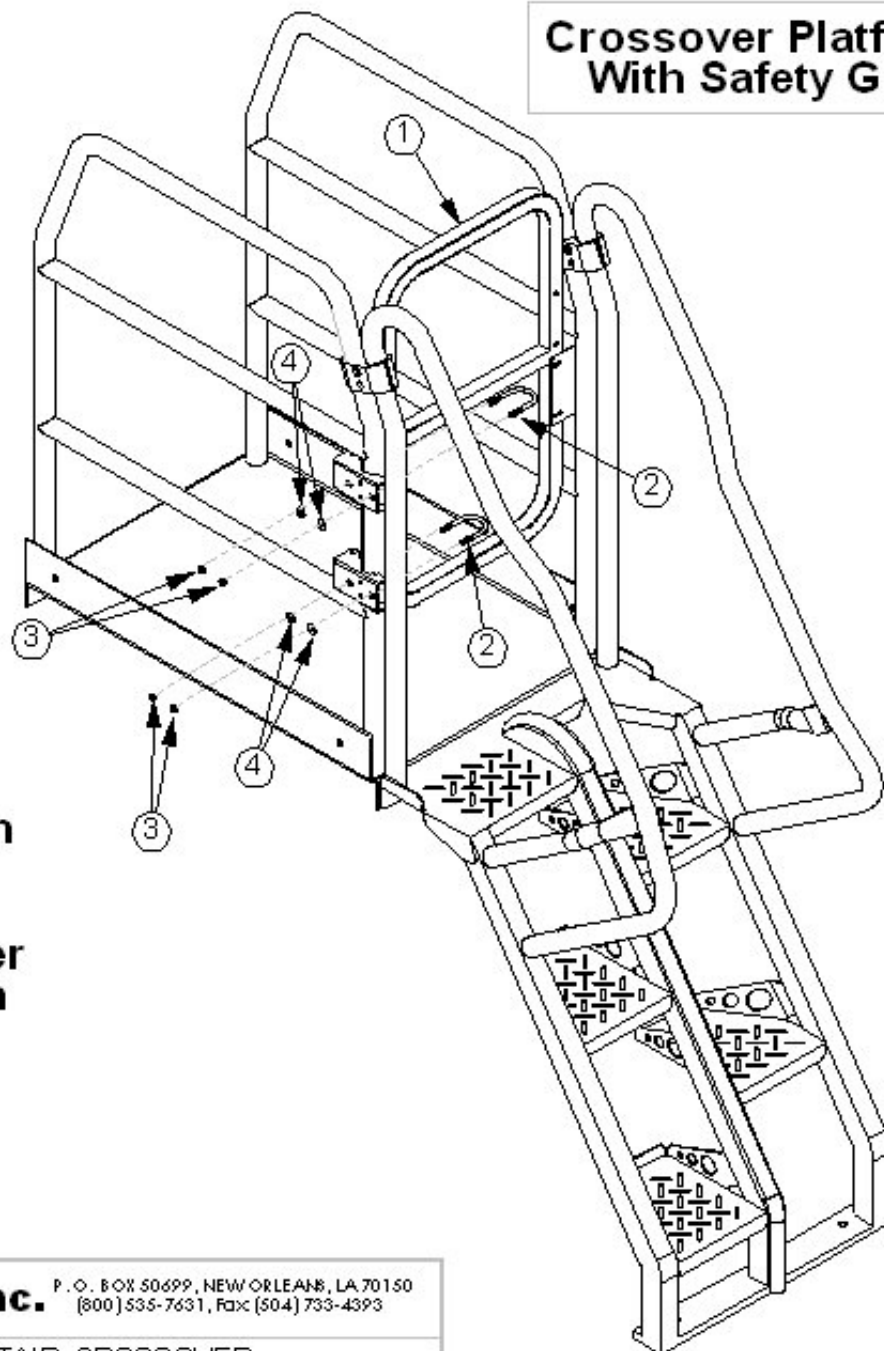

SAFETY GATE
W/STAIR & CROSSOVER

Lapeyre Stair, Inc.

P. O. BOX 50699, NEW ORLEANS, LA 70150
(800) 535-7631, Fax (504) 733-4393

S:\STAIRPRODUCTS\SAFETY GATE\E_SAFETY GATE_W_STAIR_CROSSOVER