

INSTALLATION INSTRUCTIONS


P24483, P23183

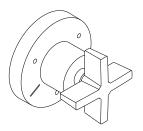

P24483-CR



P24483-LV

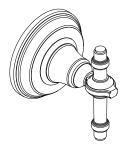

P23183-LV

3-way Transfer Trim

INSTALLATION INSTRUCTIONS

P24483, P23183

THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to Kallista quality faucets. Please take a moment to review this manual before you

install your Kallista faucet. If you encounter any installation or performance problems, please don't hesitate to contact us at the phone number listed at the bottom of the page.			
BEFORE YOU BEGIN			
	INSTALLER INFORMATION		
	 Please read all instructions before you begin. Shut off the main water supply. Observe all local plumbing and building codes. Before installation, unpack the new bath faucet trim and inspect it for damage. Return it to the carton until 		
	installation.		
	Kallista reserves the right to make revisions in the design of fauce Book.	ets without notice, as specified in the Price	
TOOLS AND MATERIALS			
	Screwdriver		
1. Install the Valve Stem Adapter			
	NOTE: Check the finished wall surface as related to the graphics on the plaster guard.		
	Select the correct length valve stem adapter and valve stem adapter screw for your application. Refer to the information stamped on the plaster guard to verify the wall thickness.	Remove and discard the plaster guard.	
	For a thin wall - 3/16" (5 mm) to 9/16" (1.4 cm): use the 1/2" (1.3 cm) (short size) valve stem adapter, stamped "3" on the plaster guard, and the 13/16" (2.1 cm) screw.		
	For a standard wall - 9/16" (1.4 cm) to 1-1/16" (2.7 cm): use the 7/8" (2.2 cm) (middle size) valve stem adapter, stamped "1" on the plaster guard, and the 13/16" (2.1 cm) screw.	Select the correct valve stem adapter.	
	For a thick wall - 1-1/16" (2.7 cm) to 1-9/16" (4 cm): use the 1-3/8" (3.5 cm) (long size) valve stem adapter, stamped "2" on the plaster guard, and the 1-3/8" (3.5 cm) screw.	Transfer / Valve	
	Remove and discard the plaster guard from the transfer valve.	Spline Adapter	
	☐ Place the spline adapter over the valve stem.		
	Set the correct valve stem adapter over the valve stem. Do not completely press or screw the valve stem adapter into place until instructed to do so.	Valve Stem Adapter	

3-way Transfer Trim

INSTALLATION INSTRUCTIONS

P24483, P23183

2. Adjust the Handle Assembly NOTE: Valve Operation. Water will flow from a single shower accessory when the control knob detent lines up with any of the large detents on the escutcheon. Water will flow from two accessories at the same time when the control knob detent lines up Accessory "B" Accessory "A with a small escutcheon detent. Ensure the valve stem adapter is lightly placed over the spline Accessory "C adapter. ☐ Place the handle assembly over the valve stem adapter. Mixed Water Supply Turn on the water supply to the transfer valve. Rotate the handle assembly until water begins to flow through Transfer Valve the shower accessory. Spline Adapter Determine the shower accessory that will correspond to the Accessory "A" setting at the 12 o'clock position on the Valve Stem escutcheon. Adapter Handle Turn the handle to the detent setting that corresponds with Assembly Accessory "A." The handle should be in the vertical 12 o'clock position. Remove the handle assembly and set aside. Accessory "A" ☐ To adjust for handle alignment: Combined Combined Accessories KALLISTA NOTE: The spline adapter allows fine adjustment of the handle Accessories "A" "A" and "C' and "B" alignment. Accessory "C" Remove the handle assembly and the valve stem adapter. Accessory "B" Combined Accessories Reposition the spline adapter. "B" and "C Reinstall the handle assembly and the valve stem adapter. Check the alignment. Repeat this procedure until the handle alignment is satisfactory.

3-way Transfer Trim

INSTALLATION INSTRUCTIONS

P24483, P23183