


Read these instructions before unpacking SkyTiles.




**Keep
Dry**



**Handle
with Care**

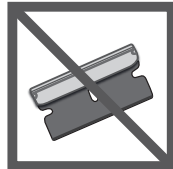


**No Sharp
Objects**

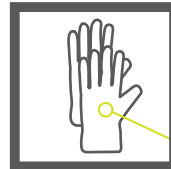

**Wear
Gloves**



**Wait 48 Hours
before opening box**

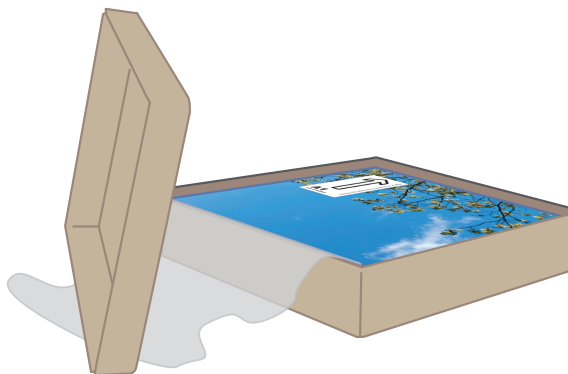


Important Information

- Let SkyTile box adjust to room temperature 24-48 hours before opening.
- Handle SkyTiles carefully protect faces and edges from scratching.
- Luminous SkyTiles must be installed in Sky Factory Elevator systems.
- Keep back of SkyTile clean anything resting on SkyTile will be visible from below.
- Keep hands clean during SkyTile installation wear supplied cotton gloves.

Care and Cleaning

- Avoid scratching SkyTiles when cleaning.
- Once installed, SkyTiles can be cleaned in place.
- Use mild soap & water solution, and soft, non-abrasive cloth.
- DO NOT wet edges of SkyTiles water may cause image film to de-laminate.

SkyTile not fitting easily into Elevator? DO NOT FORCE IT.
Contact Sky Factory for instructions, toll-free 1.866.859.3228.

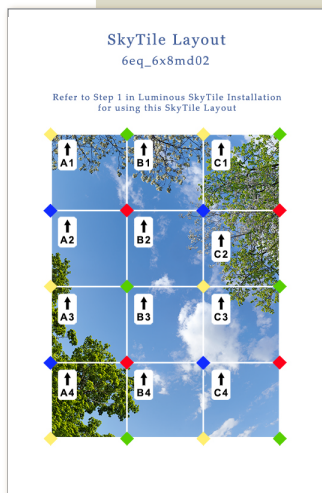

1.

Use supplied SkyTile Layout to determine where each SkyTile goes.

Note: Your SkyTile Layout may have instruction for correct head and feet orientation of the SkyCeiling.

2.



SkyTile has unique sticker indicating position and correct orientation. **IMPORTANT:** Remove sticker after installation is complete.

3.


Angle SkyTile, insert through Elevator opening, drop into correct position on upper shelf of Elevator.

4.



SkyTile Clip

Use SkyTile Clips to secure SkyTile. (Not for EcoSlim fixtures).

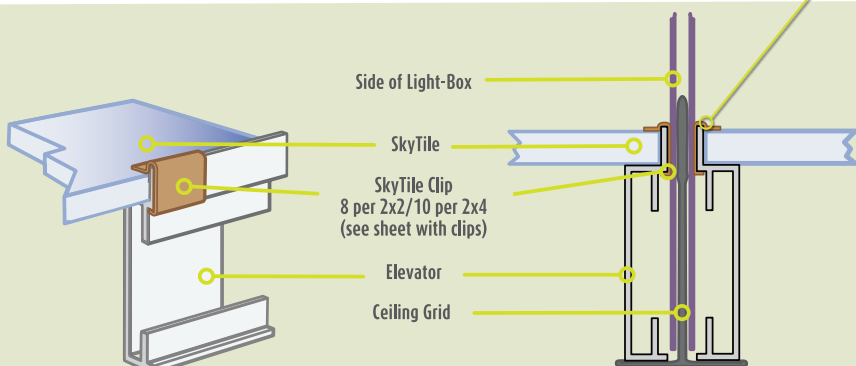

Warning: SkyTile Clips are ferrous **DO NOT** use SkyTile Clips in MRI rooms



Call 866.759.3228
for technical support

For complete documentation, visit:
<http://www.skyfactory.com/resources>