

FORGE ADA SINK CABINETS

Install Instructions

Tools Required

- Pencil
- Tape Measure
- Laser Level
- Level (Small and Large)
- Drill
- Drill Bit Sets and Screw Sets

Installer Provided Hardware

- It is the responsibility of the installer and/or contractor to select and install the proper fasteners in the structural wall.
- 1-1/2" Screws (anchor the cabinet to the wall through the back panel)

Installation

1. To get accurate measurement for Wall Knife Board placement, place the ADA sink cabinet on the floor and hold it firmly against the wall. Slide the Wall Knife Board into the Cabinet Knife Board and measure from the top of the cabinet to the bottom edge of the Wall Knife Board (Figure A).
2. Use the mounting steps from **Wall Hanging Cabinets Installation Instructions** to attach the cabinet to the wall. Use the measurement above (Figure A) for the distance from top of the cabinet to the laser level.
3. After the ADA Sink Cabinet is attached to the wall, the front access panel can be removed by lifting up on the panel to disengage it from the cabinet. After the panel is removed, there will be access to the plumbing inside the cabinet (Figure B).
4. Re-attach the Access Panel.

Figure A

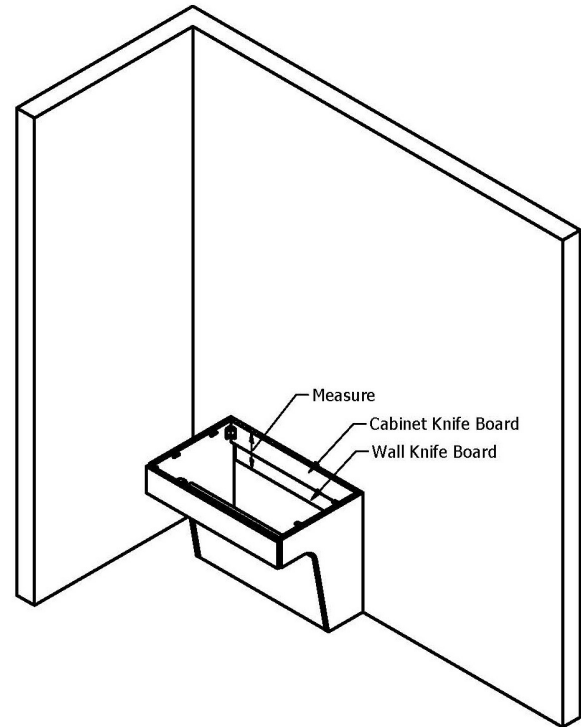


Figure B

