

# AXIOM® Transitions


## Assembly and Installation Instructions

### 1. GENERAL


#### 1.1 Description

Axiom® Transitions trim simplifies the construction of drywall perimeters surrounding Tegular or Vector® ceiling panels.

AXTRVESTR is available in 10-foot long straight sections only and is used with full module installations of Vector ceiling panels. It is 2-9/16" high.

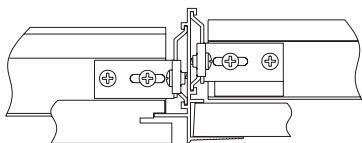

Axiom Transitions trim with Vector® panel to drywall perimeter (AXTRVESTR)

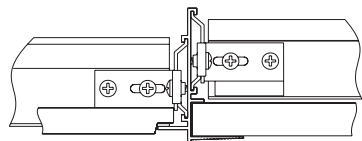


Above is the typical installation of the Axiom Transitions (no elevation change) components. The versions for Tegular panels can be used with full-size or cut ceiling panels.

Armstrong™ Touch-up Paint may be required for cut ceiling panels – Item# 5760 (8 oz) or 5761 (16 oz).


These Axiom® Transitions components feature an integrated taping flange that simplifies the finishing of the drywall edge.

AX15DSCSTR and AX15SDCCUR are for acoustical-to-acoustical flush transitions. These are great transition pieces to tie different systems or layouts together, and can be curved horizontally.

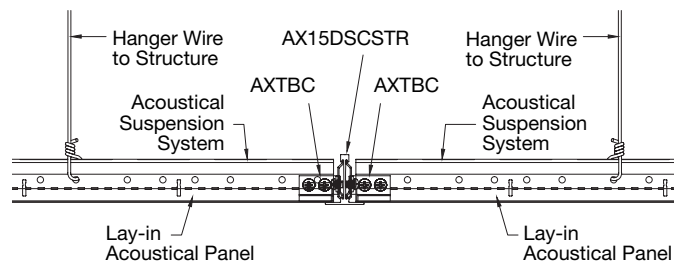


acoustical-to-acoustical, acoustical-to-drywall, drywall-to-acoustical, and drywall-to-drywall transitions can be made in 2", 4", 6", 8", and 10" transitions. These transitions are available in 10-foot straight or curved sections made to your shop drawings. The minimum bend radius on 2" – 8" is 48", and the minimum bend radius on the 10" is 60".


Straight:	Curved:
AXTR2STR – 2"	AXTR2CUR – 2"
AXTR4STR – 4"	AXTR4CUR – 4"
AXTR6STR – 6"	AXTR6CUR – 6"
AXTR8STR – 8"*	AXTR8CUR – 8"
AXTR10STR – 10"	AXTR10CUR – 10"

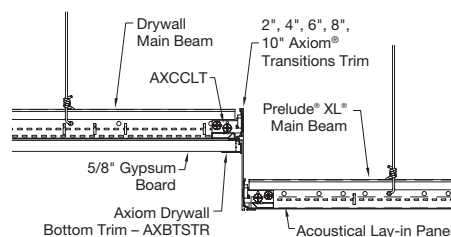


Drywall-to-Acoustical

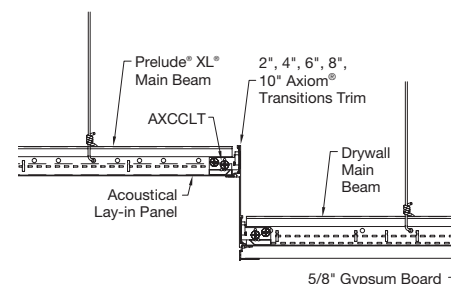

Acoustical-to-Drywall

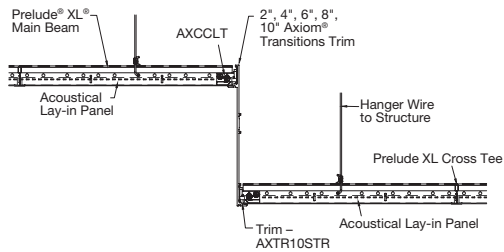

Acoustical-to-Acoustical

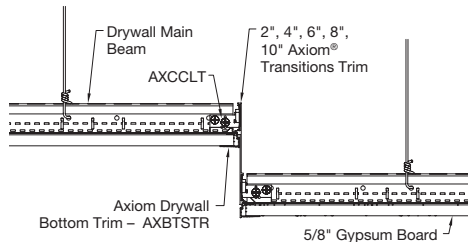

Drywall-to-Drywall

These instructions are divided into four sections detailing material delivery and identification, component assembly, installation, and final detailing. Please carefully review all appropriate sections before proceeding with installation.

## 2. MATERIAL DELIVERY AND IDENTIFICATION

### 2.1 Delivery


Axiom® Transitions components and hardware are delivered to the job site in specially designed packaging. Exercise appropriate care to protect the finished surfaces of the channel trim.

### 2.2 Review

Review the packing slip to ensure that the complete order has been delivered to the site.

## 3. COMPONENT ASSEMBLY

### 3.1 Splice Plates

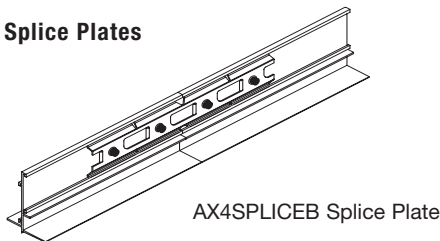

Steel splice plates are used to align and secure all joints between sections of Axiom Transitions trim. Each joint will require one splice. Splice plates are secured to the trim sections using factory-installed setscrews.

#### Typical procedure

**3.1.1** Position the splice plate (AX4SPLICEB) in the bosses on the inside of the trim.

**3.1.2** Tighten the setscrews that secure the splice to the trim.

**CAUTION:** Do not overtighten these screws to the point where they distort the face of the trim.

### 3.2 T-Bar Connector Clips



There are three versions of the T-Bar connector clip that can be used with the 7900 series items (1" transition or less) and the AX15DSC:

- The AXTBC is used in installations where the grid will rest flush on the Axiom flange (e.g. drywall, square lay-in, full size Vector® and Tegular panels), or need to be raised 1/4" (e.g. cut Tegular panels, Silhouette® and Interlude® grid). One clip is required at each location where the suspension system intersects the channel trim.
- The AXVTBC is used in installations where the grid will need to be raised 3/8" or 1/2" (cut Vector panels). The AXVTBC must be requested at the time of order in lieu of the AXTBC clips. One clip is required at each location where the suspension system intersects the channel trim.
- The ATC (Adjustable Trim Clip; item 7239) can be used in various installations to accommodate a range of grid offsets. This clip can be adjusted to install grid at 0" to 3-3/4" above the flange of the Axiom trim at 1/8" increments. This adjustability enables Axiom® Transitions to be installed with a range of WoodWorks®, MetalWorks™, and other architectural specialties products. The ATC must be requested at the time of order in lieu of the AXTBC clips. One clip is required at each location where the suspension system intersects the channel trim.

All installations with the following elevation change items: AXTR2STR, AXTR2CUR, AXTR4STR, AXTR4CUR, AXTR6STR, AXTR6CUR, AXTR8STR, AXTR8CUR, AXTR10STR, and AXTR10CUR will ship with the AXCCLT for connection to the grid system. One clip is required at each location where the suspension system intersects the channel trim.

The T-Bar connector clips listed in section 3.2 (AXTBC, AXVTBC, and ATC) are not compatible with these elevation transition pieces. Contact Techline for assistance integrating the Adjustable Trim Clip into an elevation change Axiom Transition.

T-Bar Connector Clips are attached to the suspension system members using screws supplied by the installer. Framing screws (#6 x 7/16" or 1/2" lg.) are typical.

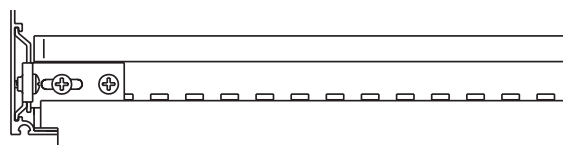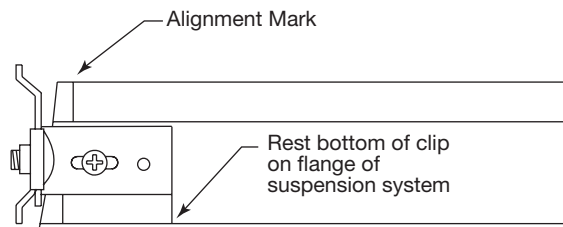

#### Typical procedure

Review the packing slip to ensure that the complete order has been delivered to the site.

- 3.2.1 Cut suspension system to length.
- 3.2.2 Attach clip to suspension system member.
- 3.2.3 Engage clip in channel bosses and tighten locking screw.

#### 4. GENERAL INSTALLATION PROCEDURES FOR ALL STRAIGHT AND CURVED AXIOM® TRANSITIONS TRIMS

- 4.1 Lay out and install the suspension system according to the reflected ceiling plan.

##### 4.2 Attach the T-Bar Connector Clips.


- 4.2.1 Align clips as shown in section 3.2.
- 4.2.2 Insert one framing screw near the center of the slot.

##### 4.3 Install the Axiom Transitions

- 4.3.1 Hang the sections of trim onto the suspension system by engaging the top ear of the connector clips under the boss of the channel trim. Slide the back plate downward to engage the lower boss on the trim and secure by tightening the locking screw.

**NOTE:** It may be helpful to drill holes into the Axiom® Transitions trim (no elevation change) and hang before cutting the suspension system in place.

- 4.3.2 Install the drywall grid system using additional AXTBC clips to complete the installation of the suspension system.
- 4.3.3 Complete the installation of all channel trim sections. Install and secure the splices.
- 4.3.4 Make adjustments as necessary to properly align the complete installation. Insert a second framing screw in each of the connector clips.
- 4.4 Add additional hanger wires as required.
  - 4.4.1 The manufacturer requires that Axiom systems and their supporting suspension systems be installed and supported in a manner that complies with all applicable codes and standards. Typically this will require the use of #12 gauge galvanized, soft annealed steel wire or equivalent. Specification and approval of alternate materials should be by design professionals familiar with the project. Wire wraps should be tight and neat.
  - 4.4.2 Main beams must be supported four feet on center or by calculation based on actual ceiling weight.
  - 4.4.3 Cross tees located on each side of an end detail trim must be supported by wires located not more than 8" from the trim.
  - 4.4.4 Installations in areas requiring seismic restraint must have wires attached to each suspension system member within 8" of the cut end. This practice is highly recommended for all installations. Lateral force bracing shall be consistent with locally approved standards, or as detailed in the specifications.
  - 4.4.5 Some seismic installations may classify the trim elements as "items" and require independent support from the building structure. In this situation, two hanger wires, connected to hanging clips (AX2HGC) or through holes drilled through to web of the Axiom® Transitions trim, will be required for each section of channel trim.

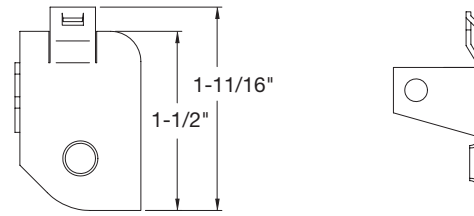

AX2HGC Hanging Clip

- 4.4.6 Install, finish, and paint 5/8" thick drywall panels.
- 4.4.7 Install ceiling panels after all drywall work is completed.
- 4.4.8 Color exposed cut edges of cut panels to match factory finish.

#### 5. GENERAL INSTALLATION PROCEDURES – AXTRVESTR

- 5.1 Lay out and install the suspension system according to the reflected ceiling plan.
- 5.2 Cut and install the suspension system to maintain precisely 23-1/16" between the outer edge of the 15/16" T-Bar suspension system and the inner edge of the Axiom Transitions trim.
- 5.3 Continue installation as detailed in sections 4.2 through 4.4.6.
- 5.4 Install Vector® ceiling panels.

#### 6. FINAL DETAILING

- 6.1 Check and adjust the alignment of Axiom® components and ceiling panels.
- 6.2 Clean exposed surfaces as required. Painted Axiom components may be wiped down with a mild household cleaner to remove fingerprints, oil, etc.
- 6.3 Touch up painted components as required.

## MORE INFORMATION

For more information, or for an Armstrong Ceilings representative, call 1 877 276 7876.

For complete technical information, detail drawings, CAD design assistance, installation information, and many other technical services, call TechLine customer support at 1 877 276 7876 or FAX 1 800 572 TECH.

For the latest product selection and specification data, visit [armstrongceilings.com/axiom](http://armstrongceilings.com/axiom).

Inspiring Great Spaces® is a registered trademark of AFI Licensing LLC

All other trademarks used herein are the property of AWI Licensing LLC and/or its affiliates

© 2018 AWI Licensing LLC • Printed in the United States of America

BPLA-295816-218

